



# Cuisinart DFP-14BCN Bowl Replacement

Remove your food processor's bowl for further disassembly or cleaning.

Written By: Maddie McCool



## INTRODUCTION

This process shows how to remove the bowl and cover assembly, which is necessary for accessing other parts of the device. These steps may be followed backwards to learn how to properly lock your assembly into place.

## Step 1 — Bowl



**i** Unplug your food processor before starting any disassembly.

- Remove the small pusher by rotating it clockwise and lifting up.

## Step 2



- Remove the large pusher by grabbing its sides and pulling up.

**i** There may be a clicking sound from the safety feature being disengaged in this step.

## Step 3




- Remove the lid from the bowl by turning it clockwise and lifting.

## Step 4



- Take out the blades by grabbing the plastic center piece and lifting up.

 Avoid contact with blades as they are extremely sharp.

## Step 5



- Position the handle of the bowl so that it is on your left.
- Grab the handle and push clockwise. Lift up the bowl to remove it.

To reassemble your device, follow these instructions in reverse order.