

# Digital2 D2-861G LCD Screen Replacement

To replace the LCD screen of the device.

Written By: Eduardo Duran



## **INTRODUCTION**

This guide will be showing you how to replace the LCD screen. Be sure to carefully remove components to avoid damaging the device.




## **TOOLS:**

- Spudger (1)
- Phillips #00 Screwdriver (1)


#### Step 1 — Battery



- Morking on your device while powered on may result in electric shock. Make sure to *unplug* and *power down* your device before you begin.
- i Place your device on a soft cloth to avoid scratching the screen.
  - Flip your device over so back panel is facing upwards

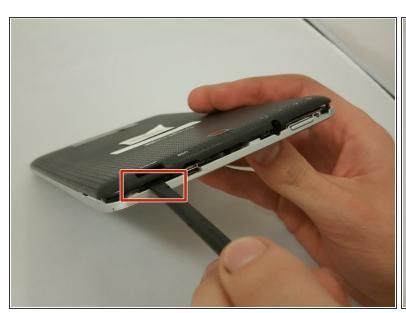



Digital2 D2-861G LCD Screen Replaceme..

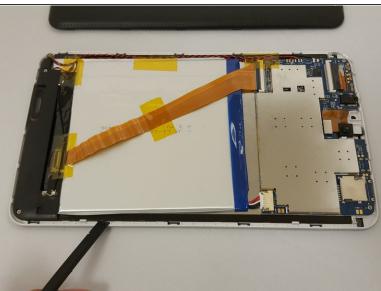

- Insert spudger in the slot below the micro SD card
- (i) You should hear clips releasing as you pry along the edges.
- With the spudger tool, run along the edges of the backing undoing 20 plastic clips.




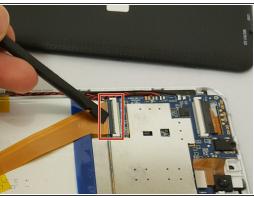


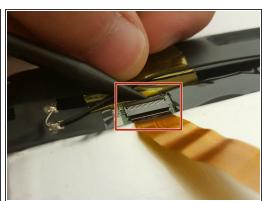

Guide ID: 73000 - Draft: 2016-12-22


- Look at the images to locate the black tabs.
- (i) Carefully remove the tape to avoid damaging the device.
- Remove ALL the yellow tape securing the gold colored ZIF (Zero insertion force) connector and the battery. Discard or save the tape if you would like.
- To unclip the connector. Go under the black tab with a spudger or finger nail and simply lift up.

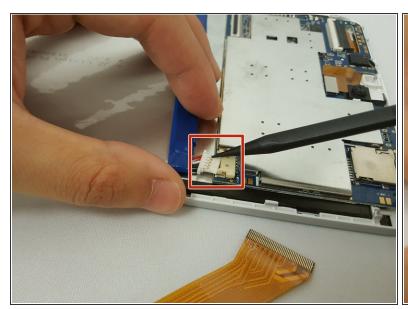


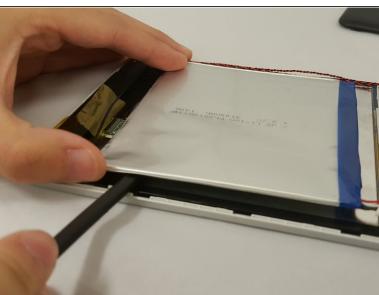

- Make sure to not bend or puncture the battery when removing it.
- Locate the bundled cable connector and disconnect it by simply pulling it gently with your hands or using a spudger.
- Use prying tools to carefully break the adhesive under the battery


#### Step 5 — LCD Screen

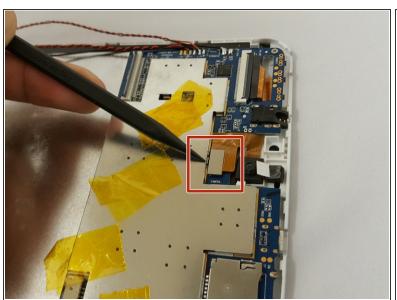


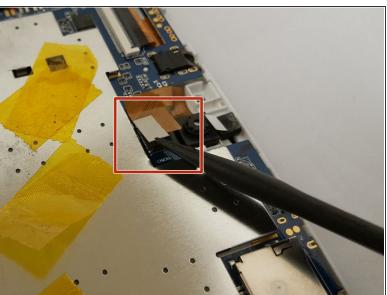


Locate the flat-top connector. Go under it with the spudger and simply lift up.

## Step 6

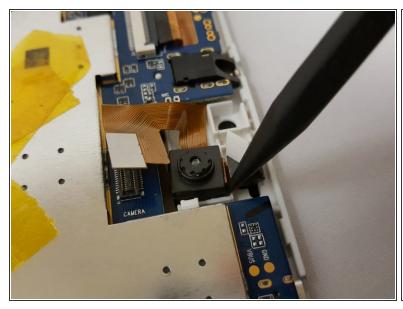

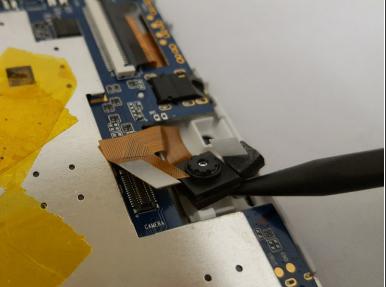


 To remove the camera, simply use the pointed end of the spudger and insert it in the corner and gently lift.

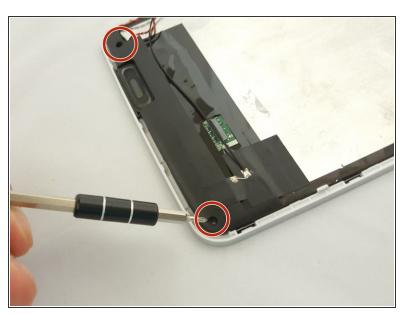





Guide ID: 73000 - Draft: 2016-12-22

- (i) Be sure to have a magnetic mat or anything magnetic to hold your screws!
- Remove two 3.51mm screws located on the bottom corners of the device with your Phillips #00
  Screwdriver.
- Carefully lift the casing and pull back the tape along with the soldered wire.
- You can remove the soldered wire if you want or leave it connected. Refer to iFixit's guide on how to Solder How To Solder and Desolder Connections

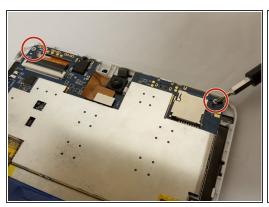


Digital2 D2-861G LCD Screen Replaceme..

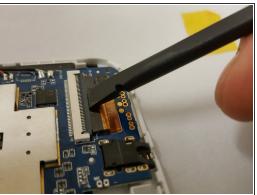

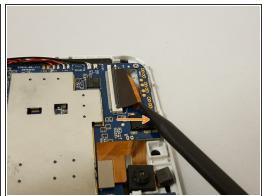



- (i) Make sure to have your magnetic board to hold your screws!
- Remove the two 3.51mm screws that are located on the top corners of the device with the same phillips screwdriver..
- Next, unplug the ZIF connector and slide it out with the pointed side of the spudger.
- To unclip the connector, go under the black tap and simply lift with your finger nail or spudger.

## Step 9

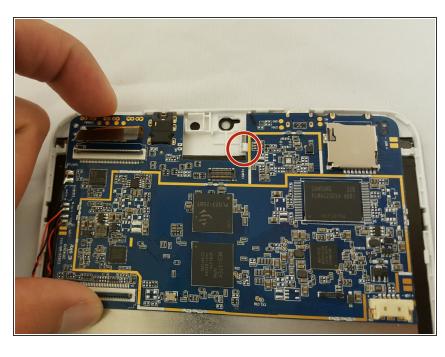

- Use little force or else you risk breaking the motherboard.
- Watch out for the ZIF connector!
- To remove the motherboard, grab the component on the top left and gently lift. Be careful with the clip holding the motherboard.

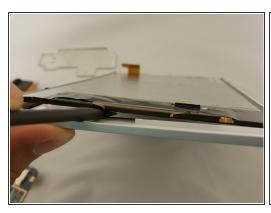

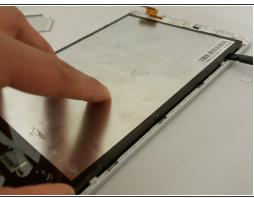



- Now that every component is removed, use the flat side of the spudger and insert it on the bottom of the screen.
- Gently move along the edges to lift the screen.

## Step 11



i If you have a damaged front case, take the opportunity to replace that as well.

To reassemble your device, follow these instructions in reverse order.