


1998-2002 Honda Accord Tail Lights Replacement

Replace the tail lights in a '98-'02 Honda Accord.

Written By: Miroslav Djuric

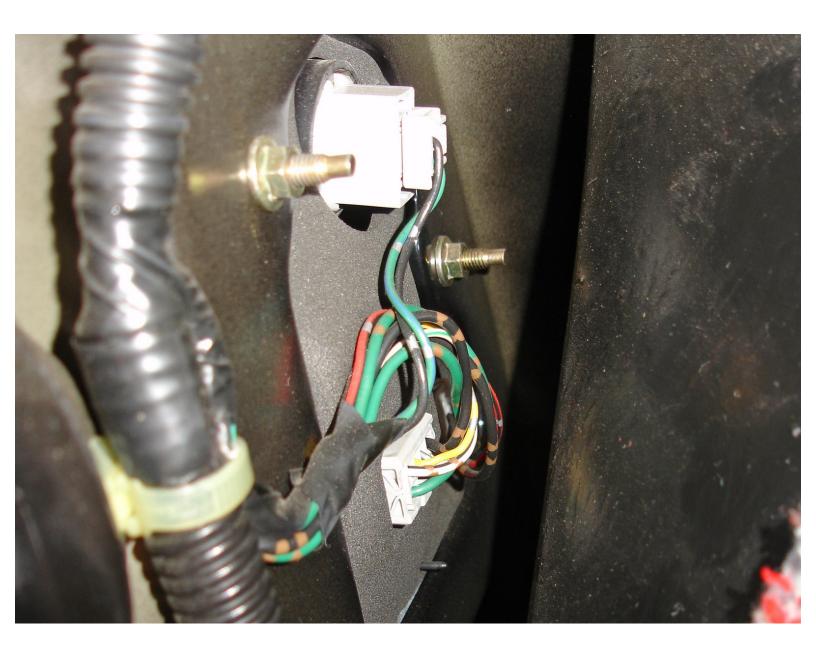

This document was generated on 2020-11-23 06:25:42 PM (MST).

INTRODUCTION

Use this guide to replace fogged or damaged tail lights in your '98-'02 Honda Accord.



TOOLS:

- Ratcheting Socket Wrench (1)
- 8mm Deep Socket (1)

Can be substituted with a regular socket

• Flathead Screwdriver (1)

Step 1 — Tail Light Bulb Assemblies





Open the trunk using your key in the trunk key slot or by using the lever under the driver's console.

Step 2 — Panel Tail Lights







- Remove the small plastic screw along the vertical edge of the trunk entrance using a flathead screwdriver.
- Carefully peel back the trunk liner from around the edge of trunk opening by the light.
- Locate the two panel tail light connectors located between the liner and the panel tail light assembly.

Step 3







- Grab a light bulb socket and turn it counterclockwise until it can be removed from its hole.
- Repeat this process for the other light bulb socket.

Step 4 — Trunk Lid Tail Lights









- Locate the light bulb sockets in the trunk lid, located on the back side of the trunk tail lights.
- Turn the light bulb sockets counterclockwise and remove them from their holes.

Step 5 — Tail Lights

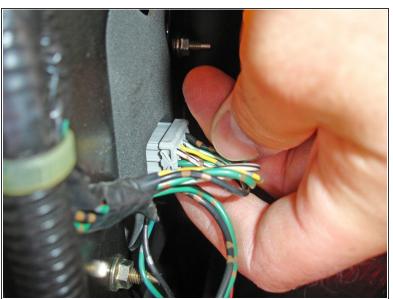

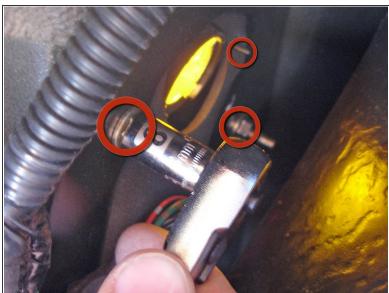

- Remove the connector at the bottom of the panel tail light assembly.
- Locate the three 8 mm nuts holding the panel tail light assembly to the car and use an 8 mm socket wrench or box end wrench to remove the them.

Step 6



- Remove the panel tail light assembly by pulling it straight away from the car.
- if you are having troubles removing the light, try wiggling it back and forth as you pull it out.

Step 7







- Remove the three 8 mm hex nuts securing the trunk tail light using a socket wrench or box end wrench.
- The black nut at the edge of the trunk lid has an extended round end that prevents a standard 8 mm socket from seating fully. You can use a regular socket if you can keep the bit level while rotating, but a deep socket is recommended to prevent stripping.

Step 8



 Lift the trunk tail light up from the outer edge, being careful not to break the plastic locator on the inside edge.

Guide ID: 7301 - Draft: 2013-07-31

To reassemble your device, follow these instructions in reverse order.