



Canon PowerShot SD400 Memory Card Replacement

If your memory card no longer stores photos or...

Written By: Yi Huang Ke



INTRODUCTION

If your memory card no longer stores photos or videos on your Canon PowerShot SD400, use this guide to replace the memory card.

A memory card that is malfunctioning or full will no longer store video or images.

Step 1 — Memory Card



- Slide the battery cover open.

Step 2



- Push down the memory card and it will pop up.
- Remove the memory card from the camera.

To reassemble your device, follow these instructions in reverse order.