




Compaq Presario V2414NR Optical Drive Replacement

This guide demonstrates how to replace the CD/DVD Optical Drive.

Written By: Ryan Schmidt

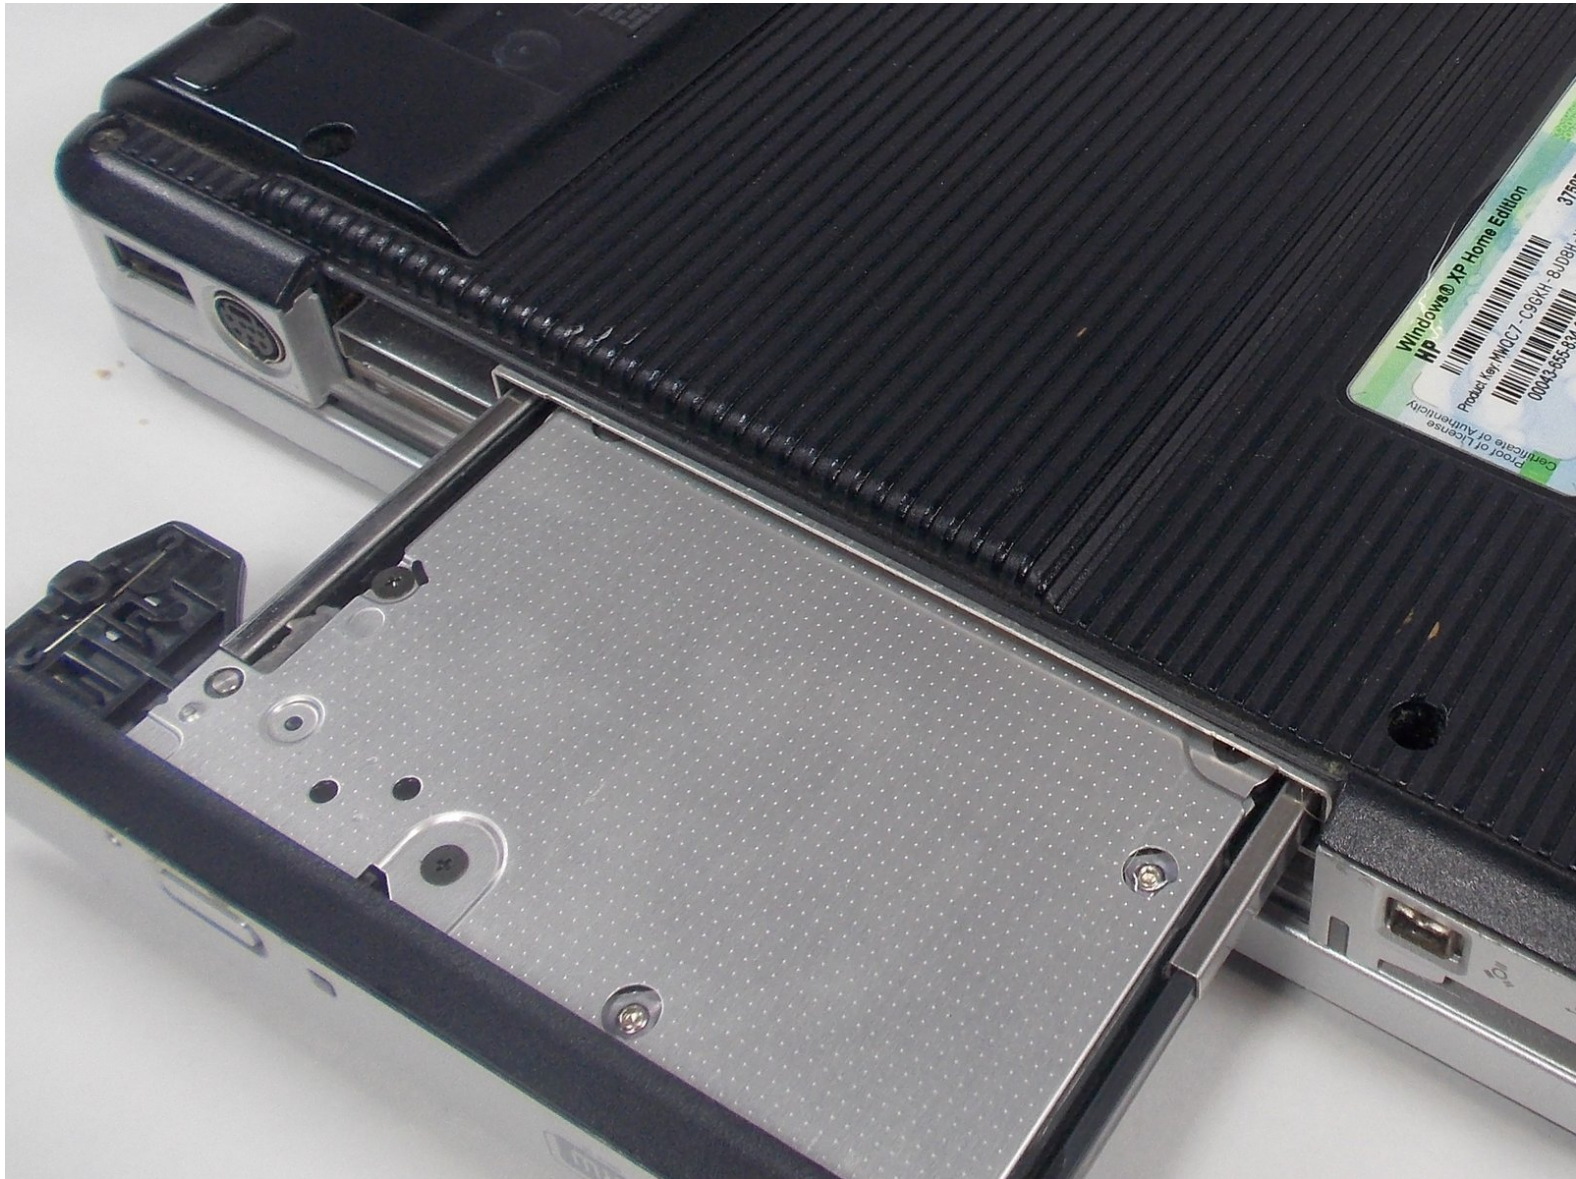

INTRODUCTION

If you are having trouble reading CDs or DVDs in your computer, you may need to replace your optical drive. Follow this guide to learn how.

TOOLS:


- [Phillips #1 Screwdriver](#) (1)
 - [Paper Clip](#) (1)
-

Step 1 — Battery



- Shutdown the computer.
- Remove all external devices.
- Unplug the power, and any other cords, from the laptop.
- Turn the laptop upside down, with the front towards you.


Step 2

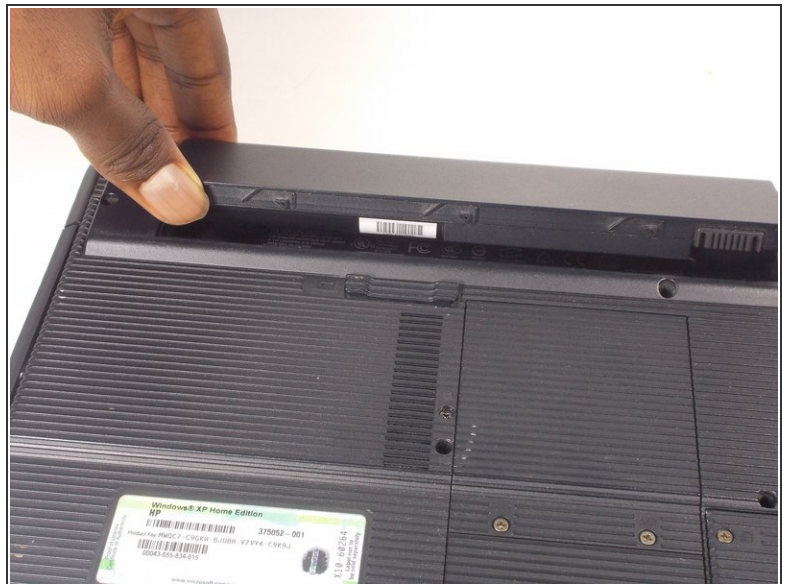

- Slide the battery release latch to the left until the battery pops up.
 - Lift the front edge of the battery pack and swing it back to remove it.
- ☒ When reassembling, first align the back of the battery with the chassis, then press the front downwards until it latches.




This document was generated on 2020-11-28 05:23:34 AM (MST).

Step 3 — Optical Drive

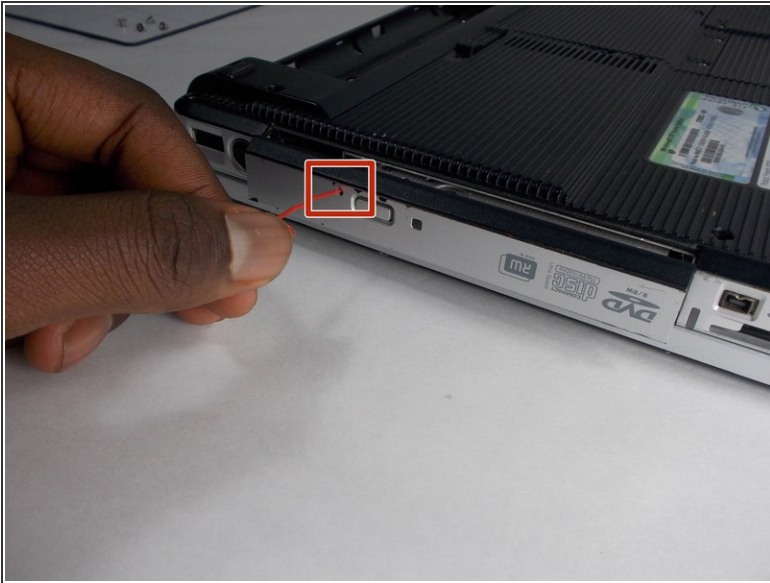

- On the optical drive there is small pin hole. Insert a paperclip or similarly sized object in the hole.
- The Drive will pop a short way out of the computer.

Step 4

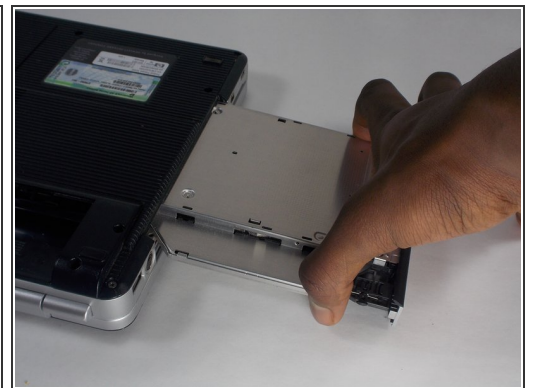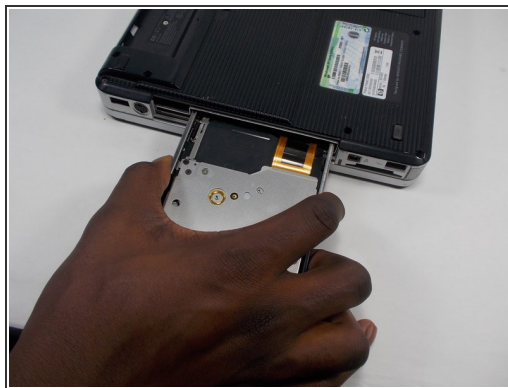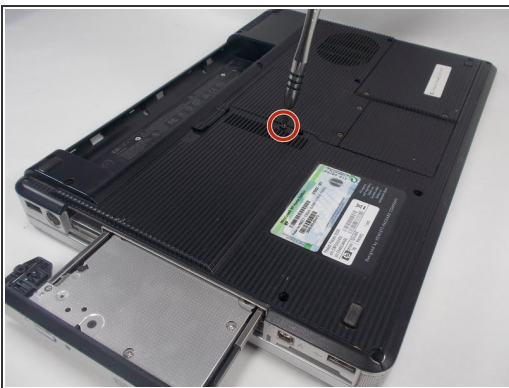

- Remove the 7mm Phillips #1 screw that secures the optical drive to the computer.
- Grip the sides of the Optical Drive and slide it out until it is completely removed from the computer.
- ☑ When reassembling, slide the optical drive straight in until it clicks.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 05:23:34 AM (MST).

