



HP Mini 110-3131dx Keyboard Replacement

Replace unresponsive keyboard with a new keyboard for your HP Mini 110-3131dx

Written By: aarondcollege





TOOLS:


- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
-

Step 1 — Battery




- Power off the laptop before trying to remove the battery.
- Turn the laptop upside down, and locate the sliding tabs on the battery.
- Slide both tabs in an inward direction, then slide the battery away from the laptop.

Step 2 — Back Cover

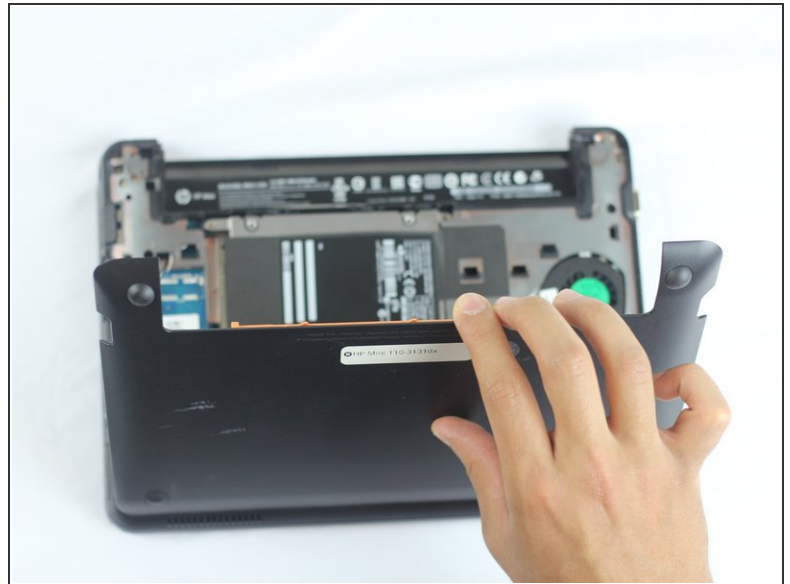


- To remove the bottom cover pull the orange tab to the right until it clicks.
- Carefully disconnect the clips as you lift the bottom cover.

Step 3 — Keyboard

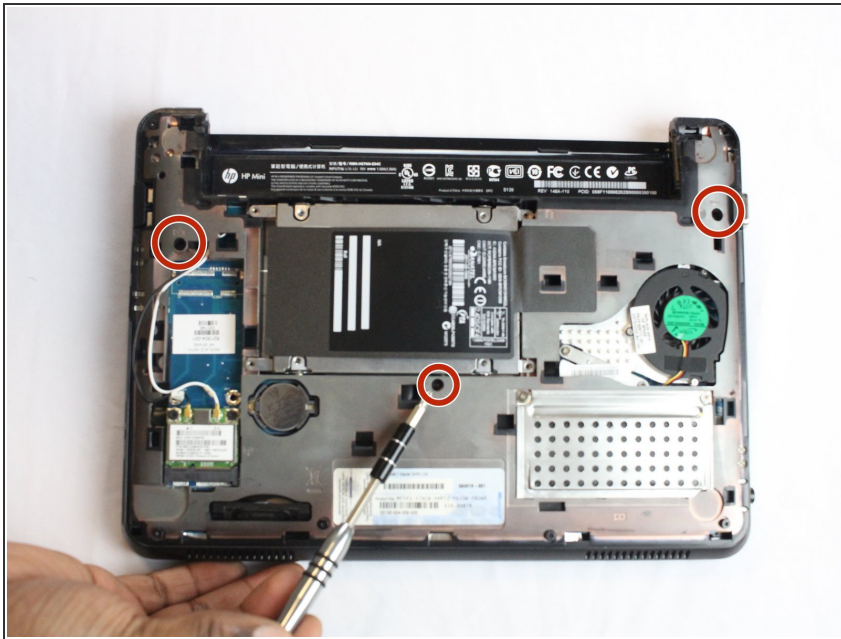


- Remove the three black screws marked by the keyboard symbol using a Phillips #1 screwdriver.

Step 4

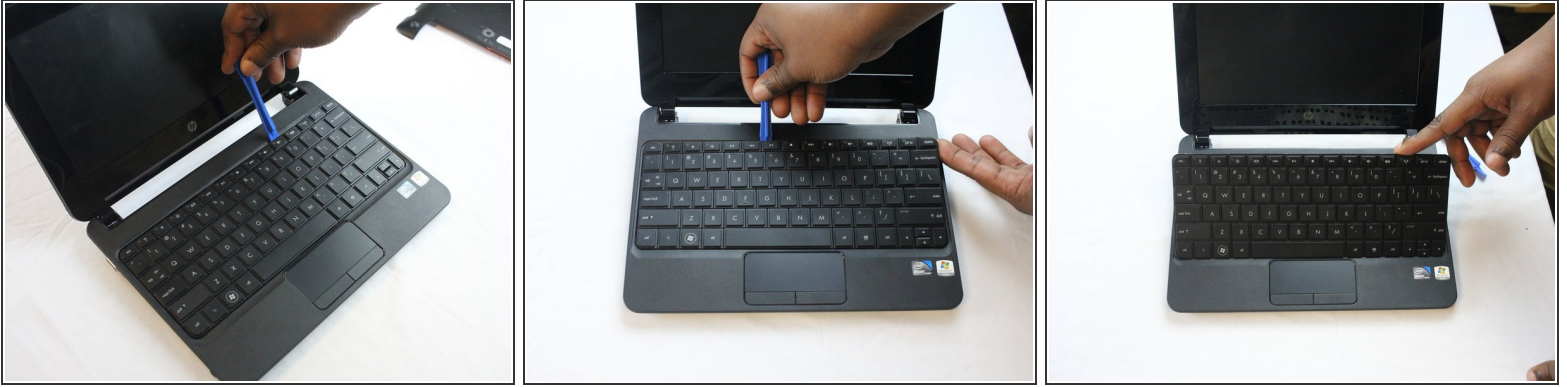

- Turn the laptop upright and open it.
 - Disconnect the clips located around the perimeter of the keyboard.
 - Slide the iFixit opening tool between the top edge of the keyboard and the plastic bezel.
 - ① Start either above the esc key or the delete key.
 - Pull the keyboard with your fingers until it comes out on both sides.
- ⚠ Be careful not to pull the keyboard out too fast. There is a fragile ribbon cable that attaches to the motherboard behind the keyboard.

Step 5

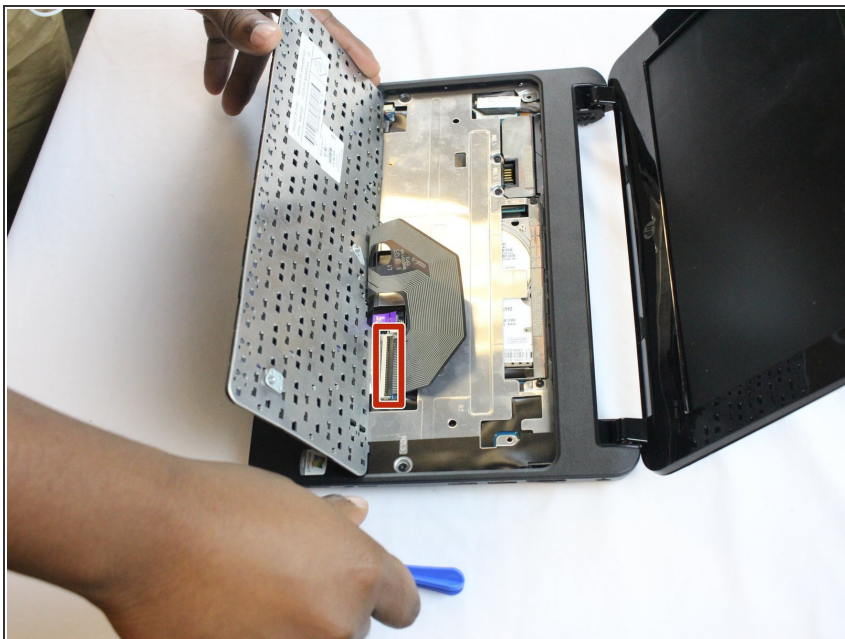

- Tilt the keyboard toward you to reveal the ribbon cable.
- Lift up the black tab on top of the keyboard ribbon cable to release the ribbon cable.
- Pull the ribbon cable out of its container.

To install a different keyboard, follow these instructions in reverse order.