




Cover Panel Disassembly

Instructions how to remove front assembly panel to access internal components of the Creative Zen V Plus.

Written By: Brock Schaffer

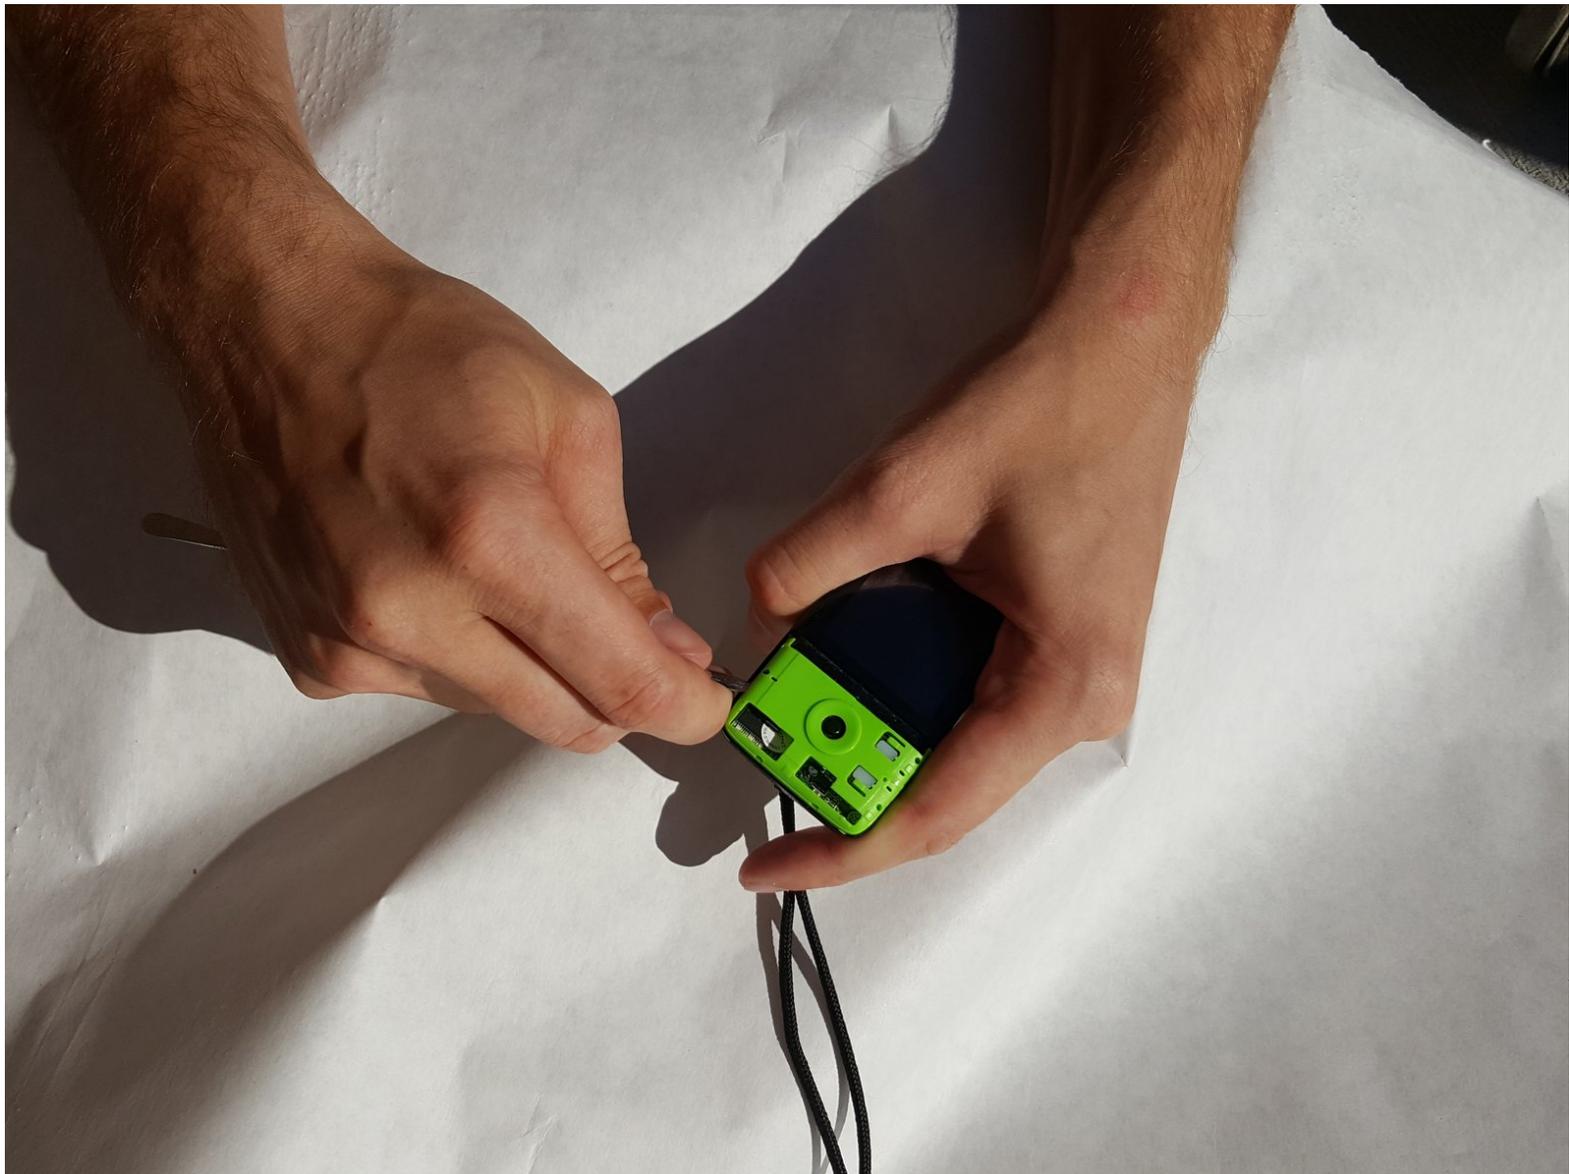


INTRODUCTION

Instructions how to remove front assembly panel to access internal components of the Creative Zen V Plus.

TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Cover Panel

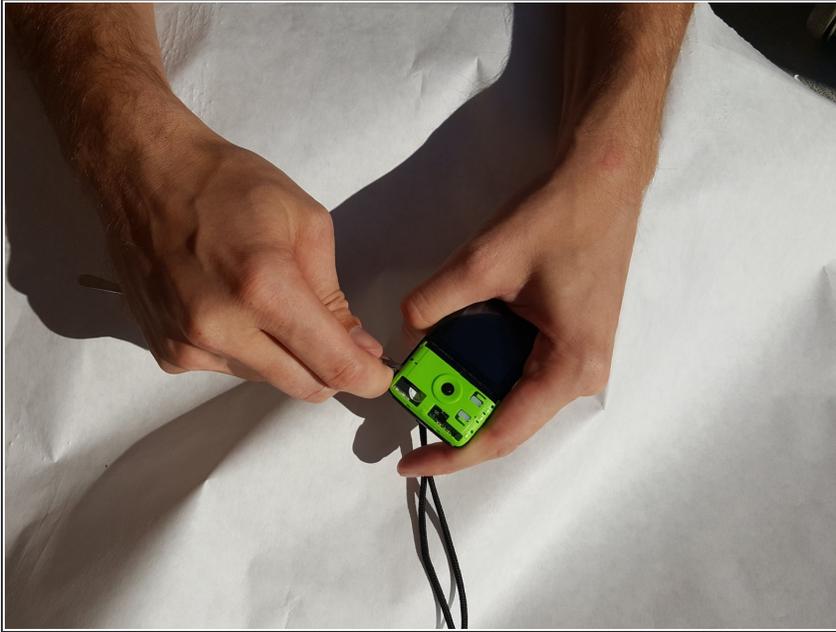

- Find the mating groove running along the side of device. Use an iFixit opening tool to pry the two mating surfaces apart with a twisting motion.
- Once the surfaces have been separated, using your fingers, pull the two surfaces apart evenly around the edge of the device.
- ☑ During reassembly, be sure to press the two pieces together all the way around the perimeter to ensure good connection.

To reassemble your device, follow these steps in reverse order.