




Acer Aspire 5334-2581 Hard Drive Replacement

This guide will provide an overview of how to replace your hard drive for the Acer Aspire 5334

Written By: gilson teixeira

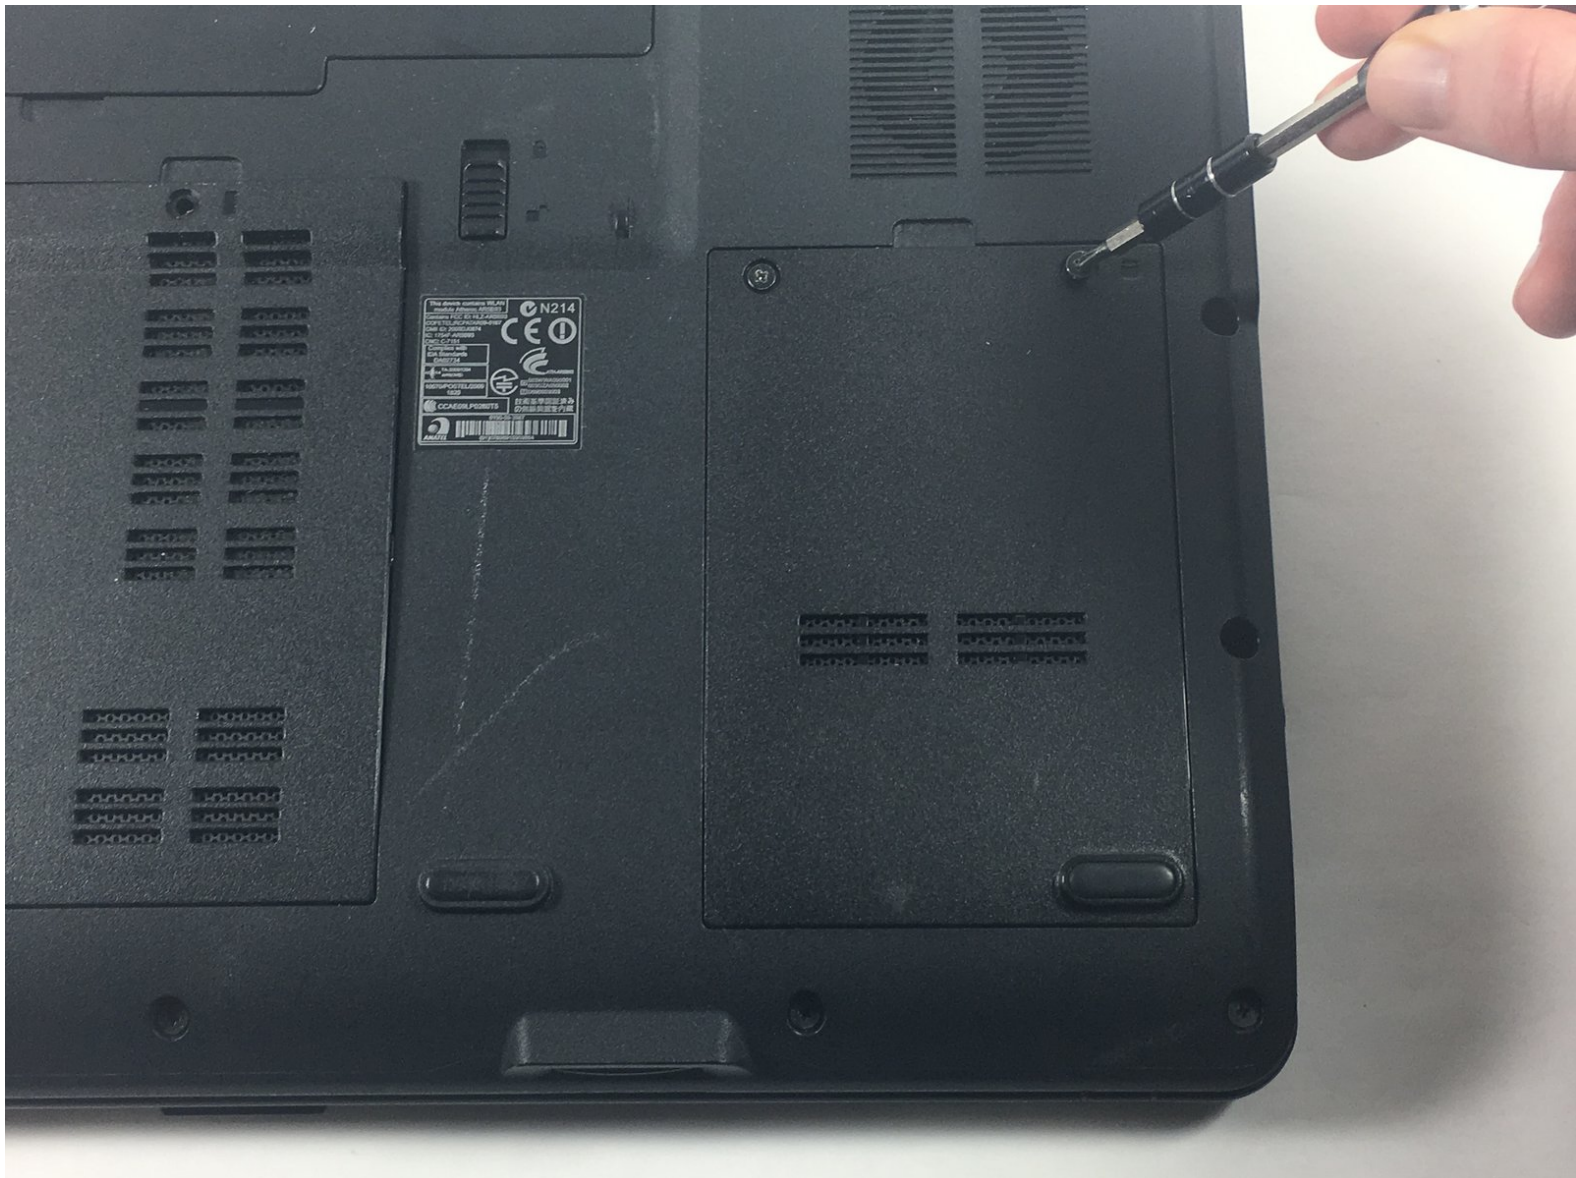

INTRODUCTION


The Acer aspire 5334 uses a standard laptop hard drive, and it is simple to replace. They are easy to access, which makes this guide really easy to follow. And it can be replace in two simple steps.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery

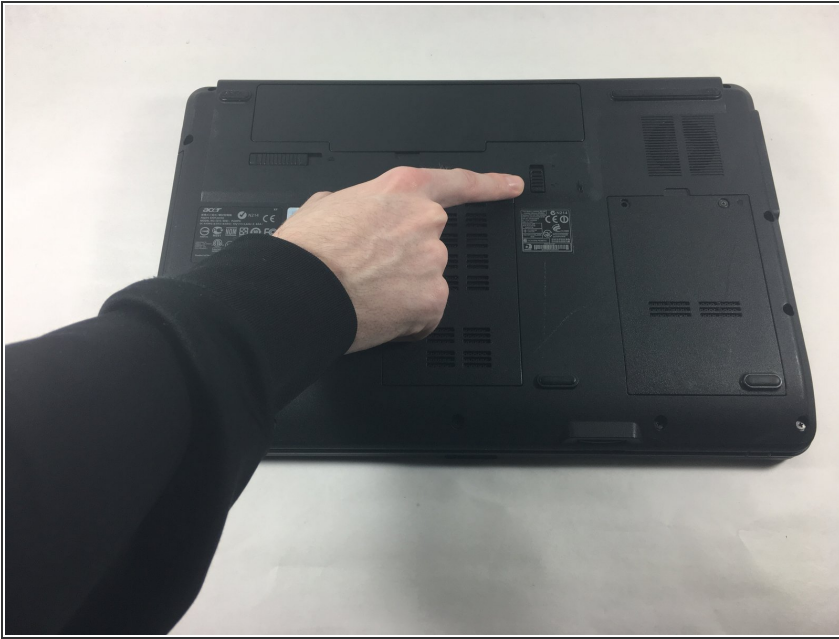


- Please make sure your device is unplugged . Turn it over slowly, and place it on a flat surface.

Step 2




- This latch holds your battery in place, it should always be locked. Make sure to unlock this piece.
- ⚠ Do not break this latch, otherwise your battery will not hold in place.

Step 3

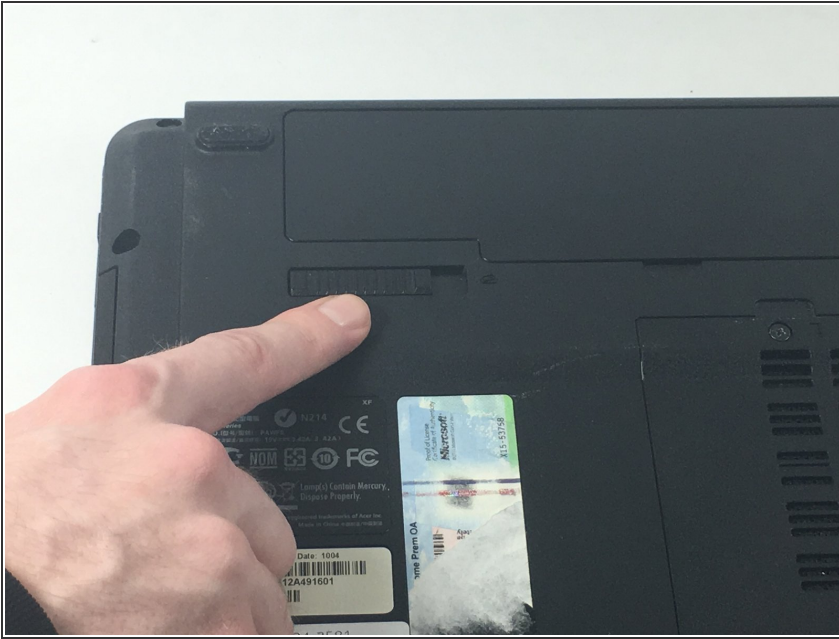


- Locate the eject latch and push it so the battery can come out.
- The battery will lift up once you have pushed the latch.
- ☑ You DO NOT need to adjust the latch when replacing the new battery, because it just snaps in place.

Step 4

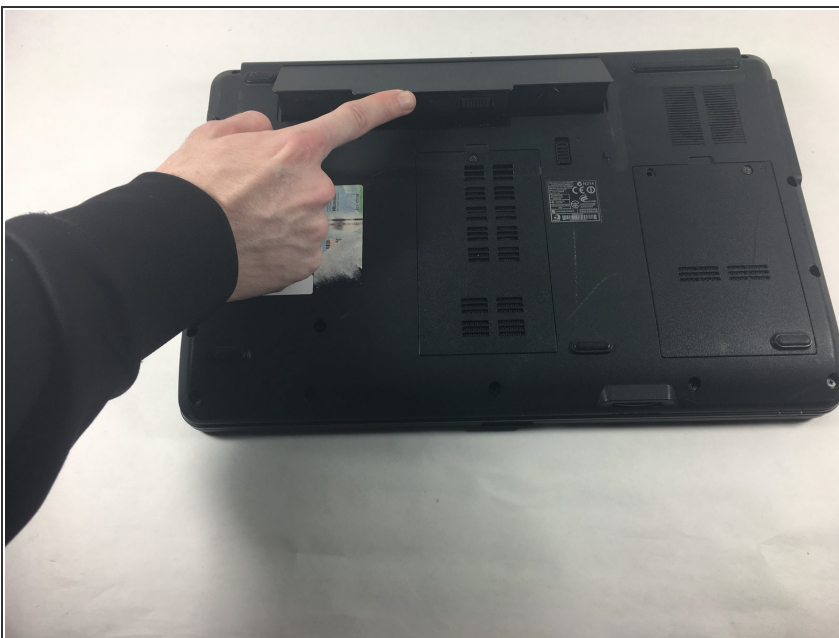

- Lift the battery up, and it should just come right off. You should see the label with the part number.

Step 5 — Hard Drive

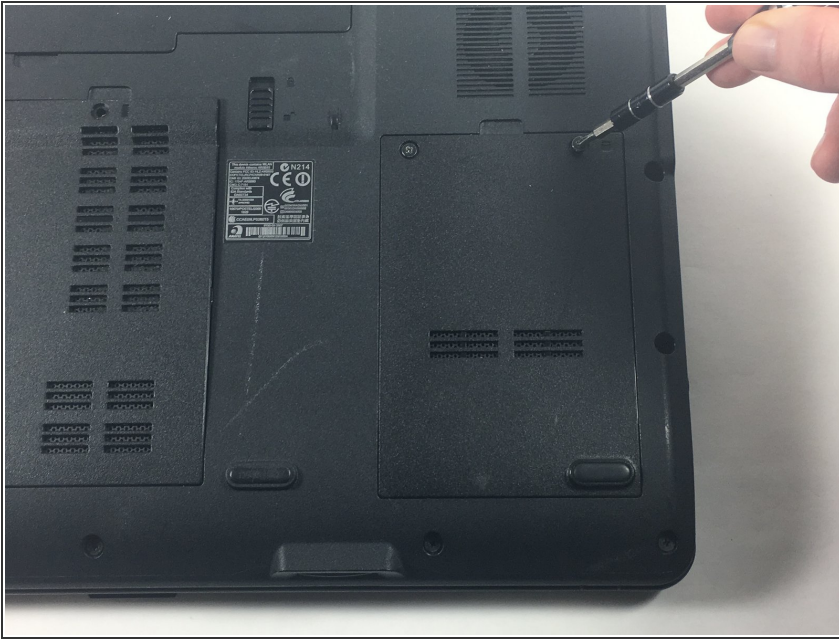

- Remove the two screws that hold the hard drive cover.
- Lift the cover up and set it aside.

Step 6



- ⚠ Be very careful not to damage the hard drive when removing it because you might damage the data.
- Slide the hard drive out of its seat.

To reassemble your device, follow these instructions in reverse order.