




Creative Zen V Plus Logic Board Replacement

Replace the logic board in your Creative Zen V Plus.

Written By: Joel Ng

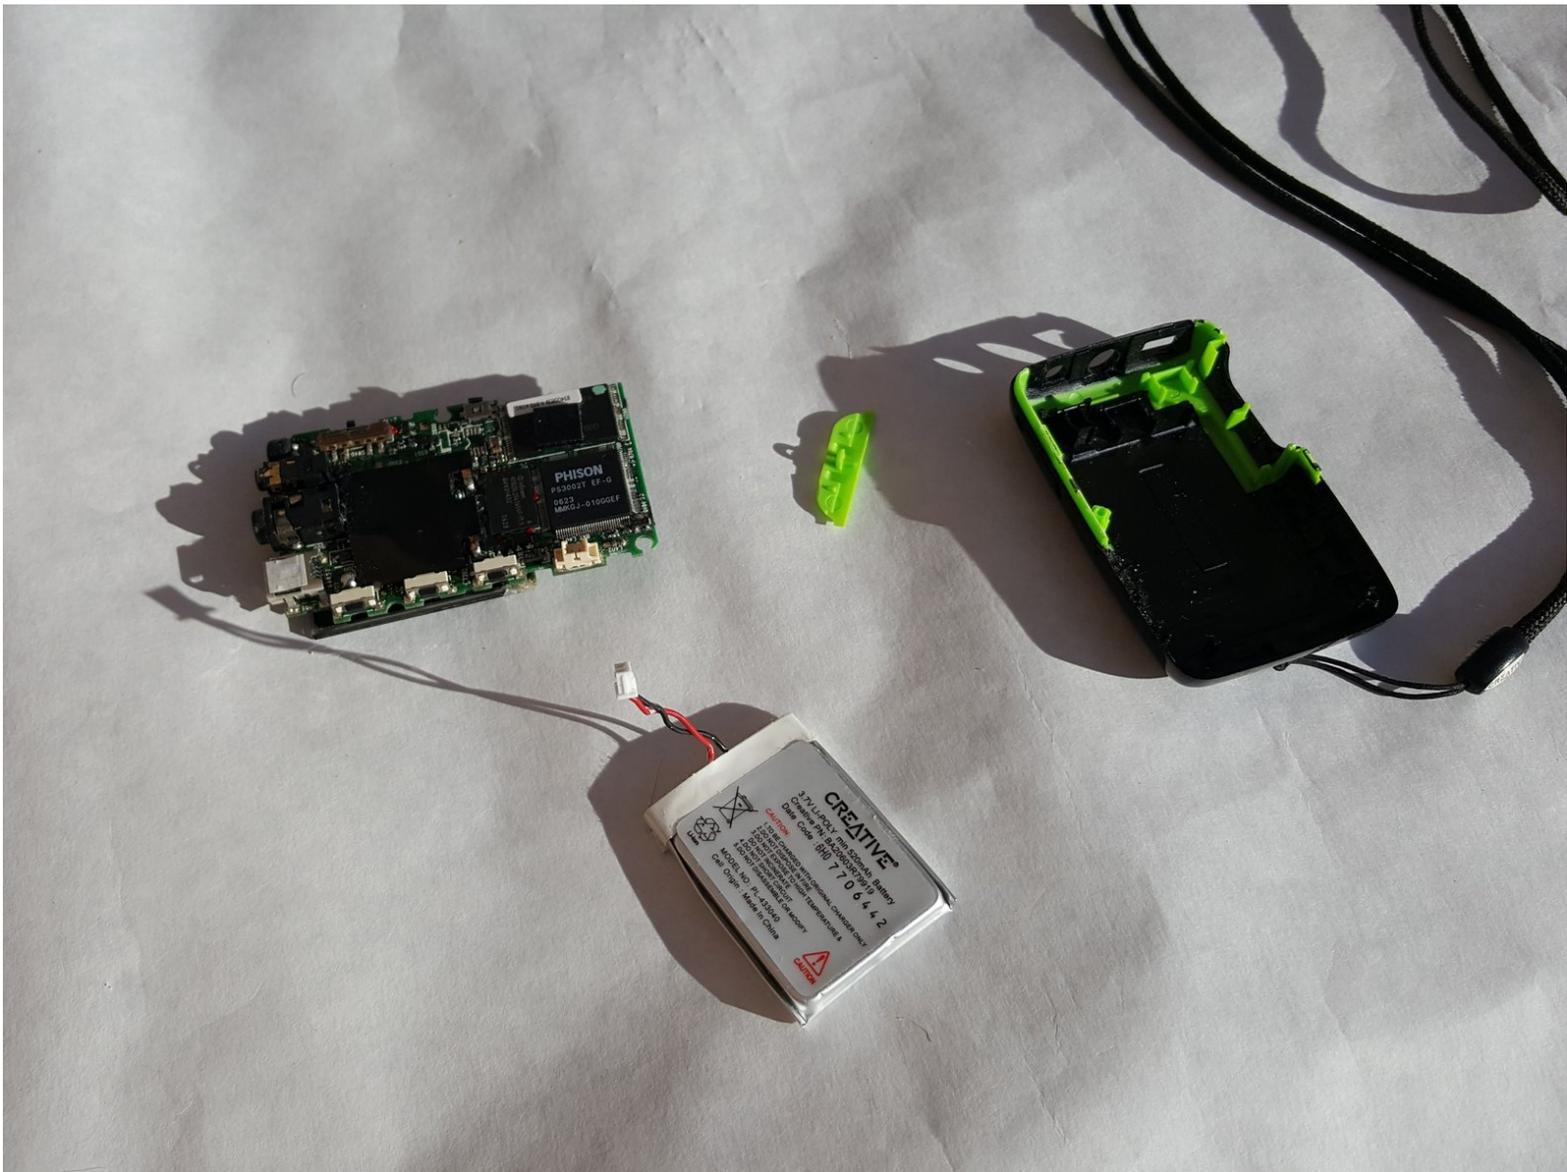

INTRODUCTION


Has the logic board gone out on your device? Use this easy to follow guide to replace the logic board.



PARTS:

- [New Creative Zen V Plus Logic Board](#) (1)
-

Step 1 — Prerequisite Only

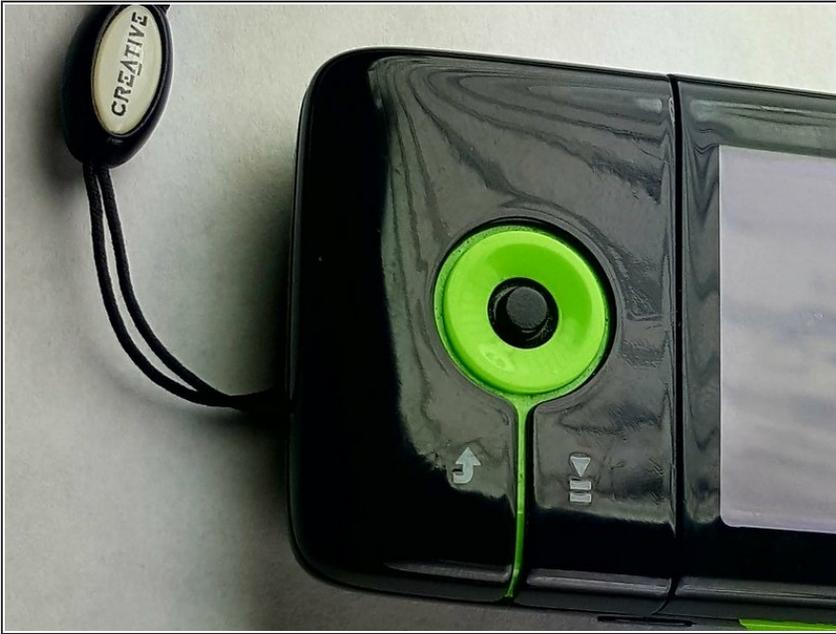

- Find the grooves around the buttons on the front and carefully remove the panel. This can be done without the use of any tools.

Step 2





- Using a plastic opening tool, place the skinny flat end between the groove running along side of the device.
- Using a twisting motion, detach the control panel from the device

Step 3




- Find the groove around the outside of the green section. Use an **ESD safe** spudger to slowly lift the plastic panel up.

Step 4

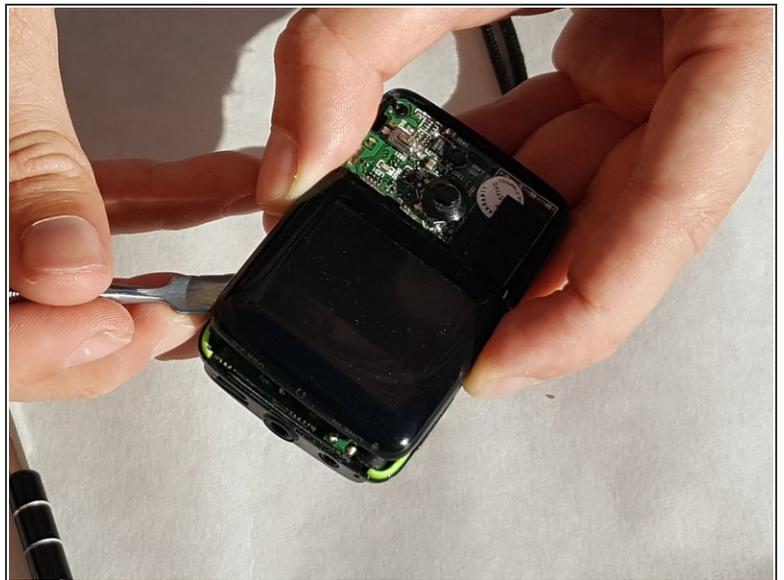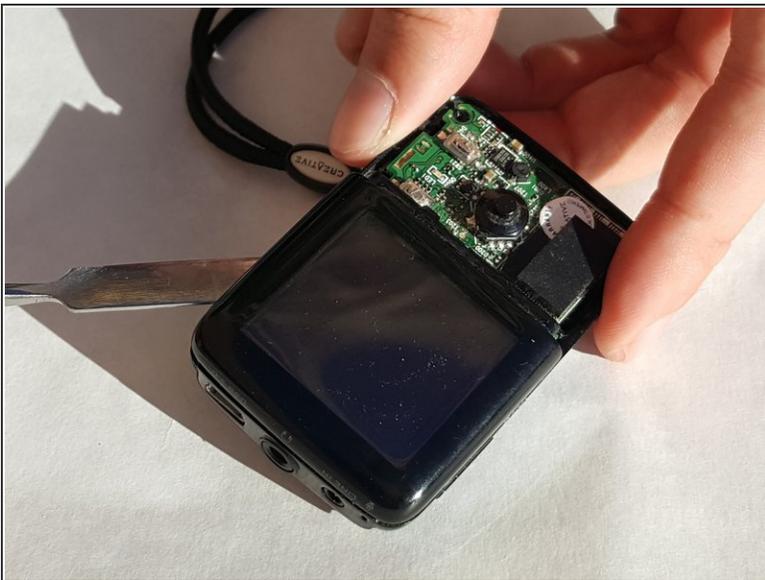



- After removing the green section, find the groove around the display. Insert a **ESD safe** spudger and carefully lift the display.

Step 5

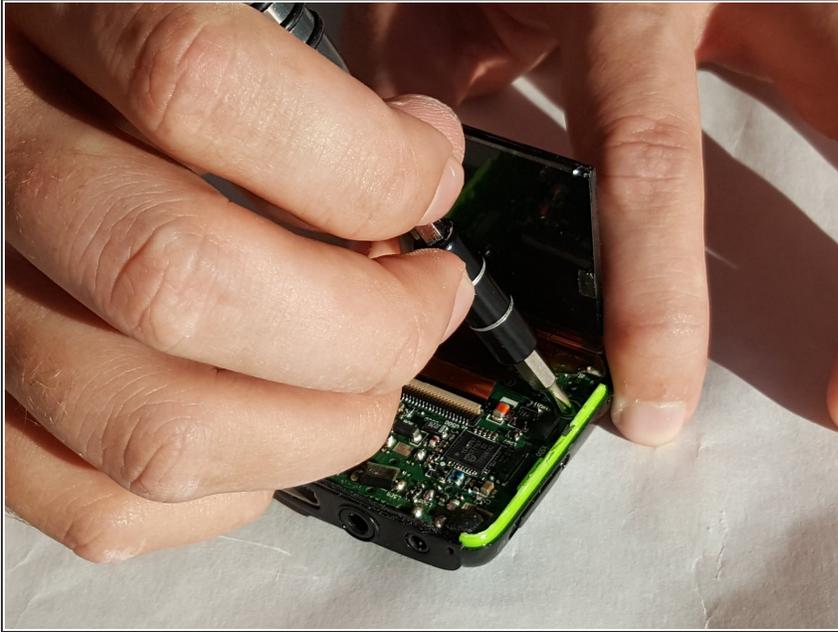


- The display can lift up the display but be sure not to damage any of the cables connecting it to the mother board.
- Remove the screw located under the display using the 00 Phillips head screwdriver.

Step 6

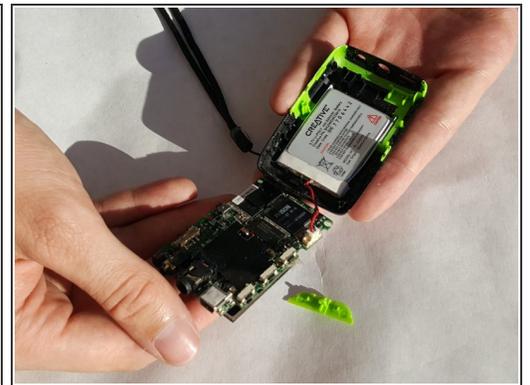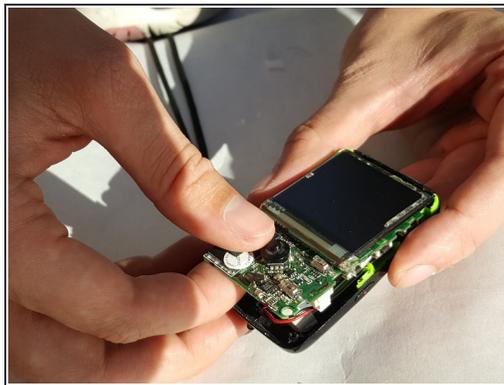

- Pull up on the motherboard and display. It is glued to the base so it will require a little force. Be careful though, as the board is fragile.

Step 7 — Logic Board

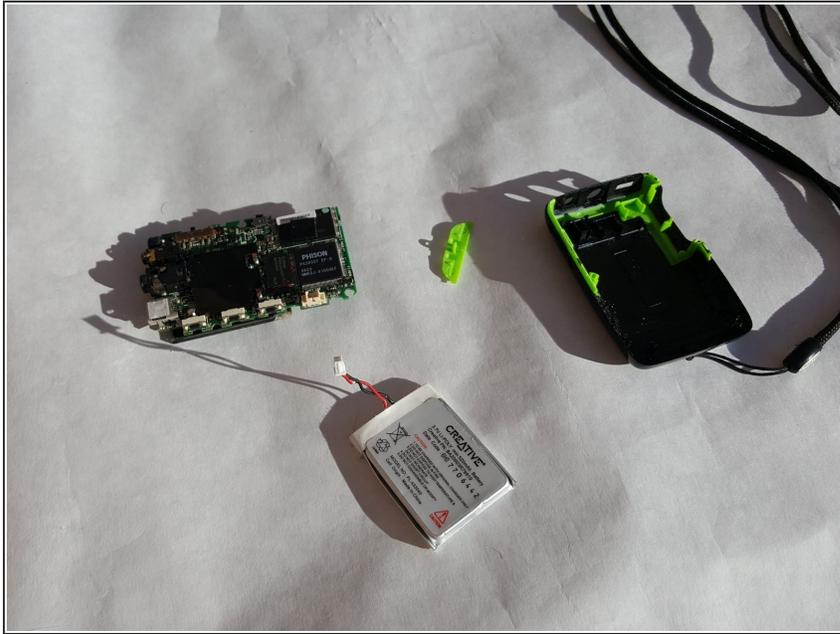

- Unplug the logic board from the battery. Replace the logic board with your new logic board and reassemble your device.

To reassemble your device, follow these instructions in reverse order.