



Casing and Trigger

This guide will show you how to disassemble the Casing of the Fellowes T7CM paper shredder.

Written By: John Wisthoff



INTRODUCTION

This guide will show you how to disassemble the Casing of the Fellowes T7CM paper shredder.

TOOLS:


- [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Fellowes T7CM Casing and Trigger Replacement




- Check to make sure the shredder is not plugged in to any electrical outlet.
- Remove the shredder from the catch basket and place the silver side down on a flat surface.
- Place the catch basket aside as you will not be needing it for the rest of the disassembly.

Step 2

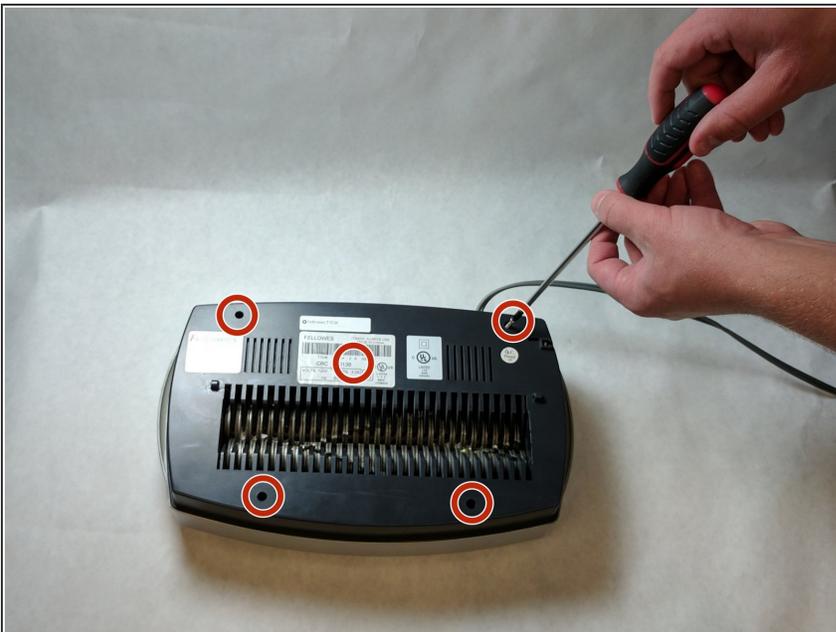


- Flip the shredder silver side down and place on a flat even surface.
- Remove the manufacturer's label in order to gain access to the hidden screw hole.
- Locate all five of the case screws and remove them with a Phillips-Head screwdriver. The screws are located within the five marked circles in the photo. The size of the screws are 18 mm in length and head diameter of 5 mm.

Step 3

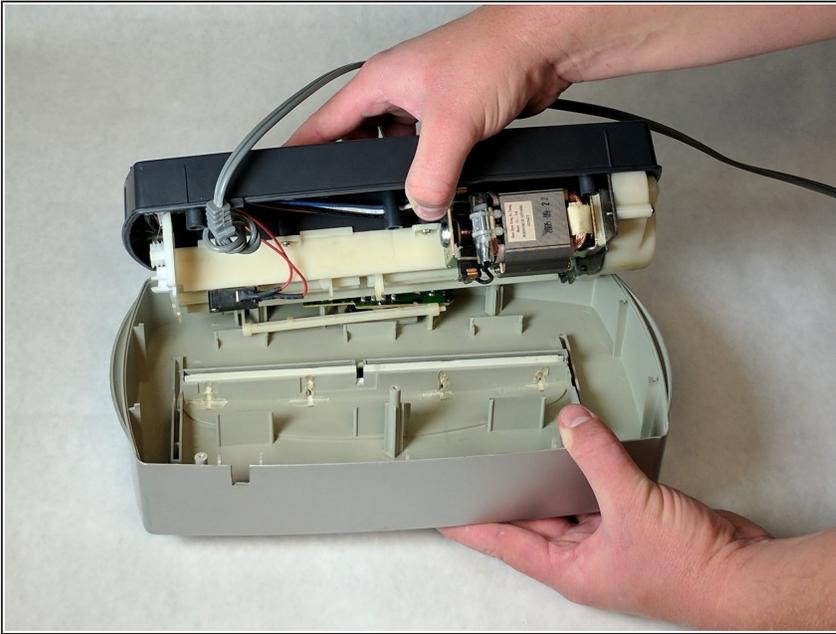

- Once all of the screws are removed, slowly pull apart the casing.
 - If the casing is not separating, gently wiggle the top part of the casing from the bottom part of the casing.
- ⚠ Use Caution** during this procedure to prevent from damaging any of the internal parts.

Step 4

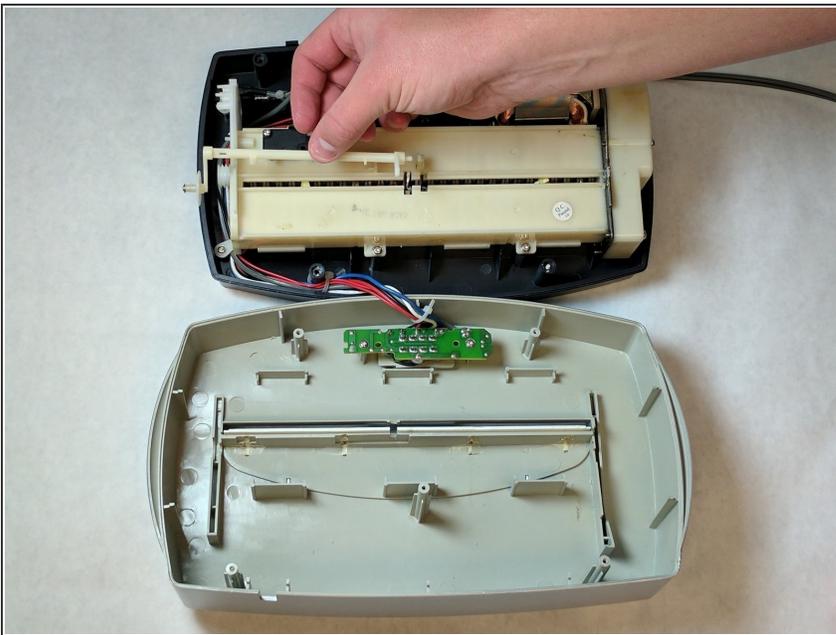

- Open the casing as shown to prevent tangling or damaging the wires.
- Take note to how the trigger assembly is attached before removal.
- The trigger assembly is one part and should come off all together with little to no force applied.
- Remove the trigger assembly.

To reassemble your device, follow these instructions in reverse order.