



Canon PowerShot SD1000 Battery Replacement

How to replace a Canon PowerShot SD1000 battery.

Written By: Nick Tompkins



INTRODUCTION

Use this guide to replace the battery on your Canon PowerShot, model SD1000.

When the battery is starting to fail on your Canon PowerShot it may experience drastically shortened battery life or does not turn on at all. Replacing the faulty battery will remedy the problem and ensure that you are able to continue to use your camera as normal.

This guide will walk you through 4 quick and easy steps on how to change your SD1000 battery (A90mAh 3.7V Lithium-Ion).



PARTS:

- [SD1000 battery \(890mAh 3.7V Lithium-Ion\)](#) (1)
-

Step 1 — Battery



- Turn the camera over so the bottom faces you.
- Slide the battery cover open.

Step 2



- The battery cover should push out.
- Prop open the battery cover.

Step 3



- Let the battery cover open fully and rest as shown.

Step 4



- Flip the plastic lever holding the battery as shown.
- Remove the battery.

To reassemble your device, follow these instructions in reverse order.