



Toshiba Satellite L455-S5046 RAM Replacement

This guide explains how to replace the RAM in Toshiba Satellite L455-S5046.

Written By: Daryl Spurgeon



INTRODUCTION

This guide explains how to replace the RAM in Toshiba Satellite L455-S5046.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — RAM




- Remove the Phillips #0 7-mm screw from the back of the computer.

Step 2

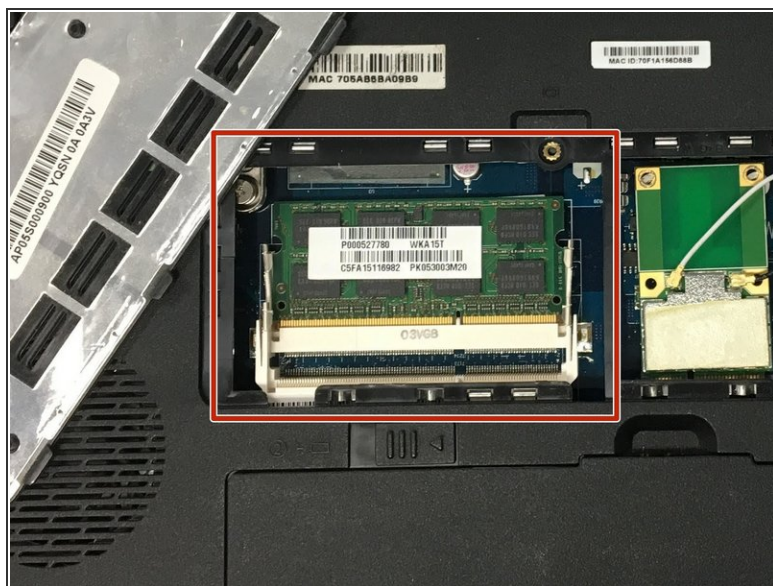

- Remove the plate to access the RAM stick.

Step 3

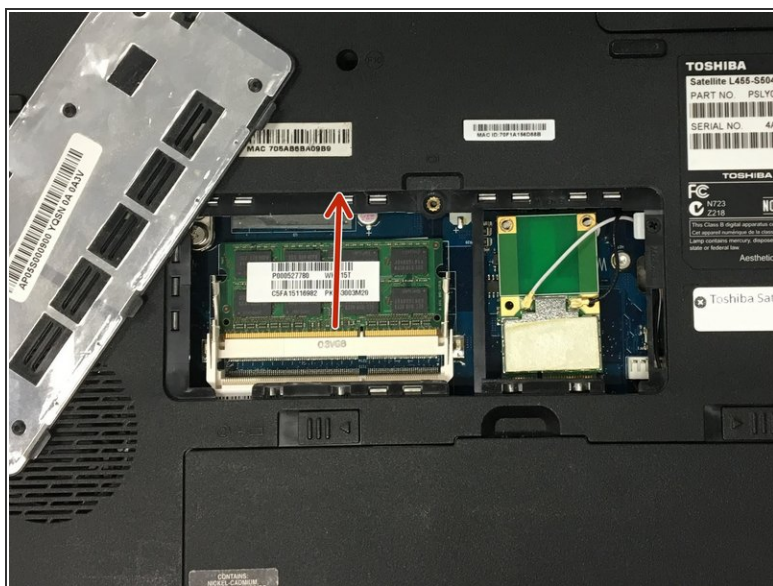

- Unplug the existing RAM stick.
- Plug the new RAM stick into the open slot.

To reassemble your device, follow these instructions in reverse order.