



# Sony SRS-X55 Speaker Reverberator Replacement

This guide will show how to replace the speaker reverberators in the Sony SRS-X55.

Written By: Eric Coletto



---

## INTRODUCTION

This Sony SRS-X55 has two speaker reverberators. This guide will walk you through the removal and replacement of them.

---

### TOOLS:


- [Phillips #2 Screwdriver](#) (1)
  - [Spudger](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Speaker Reverberator



- Locate the six 9 mm screws on the bottom of the speaker and remove them using Phillips head #2.

## Step 2

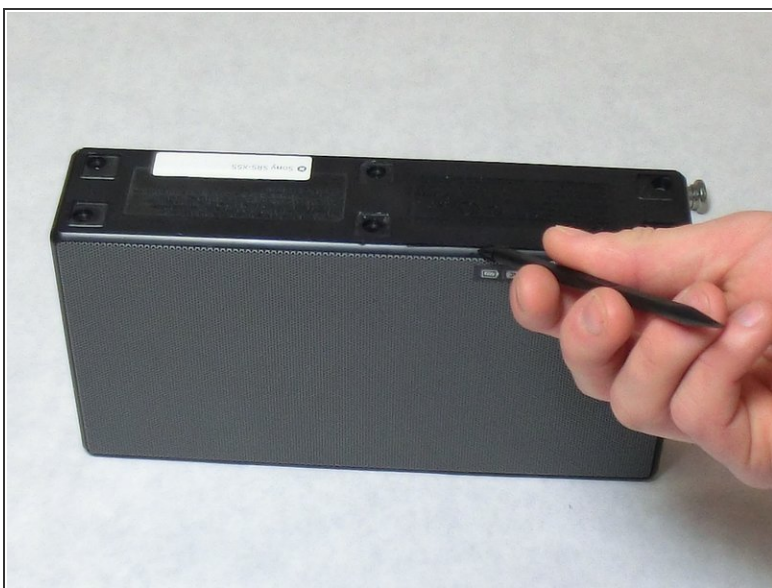

- Insert a plastic spudger into the seam on the bottom panel and lift it away from the rest of the speaker.




### Step 3




- Locate the battery connection and unplug it using a pair of metal tweezers.

### Step 4

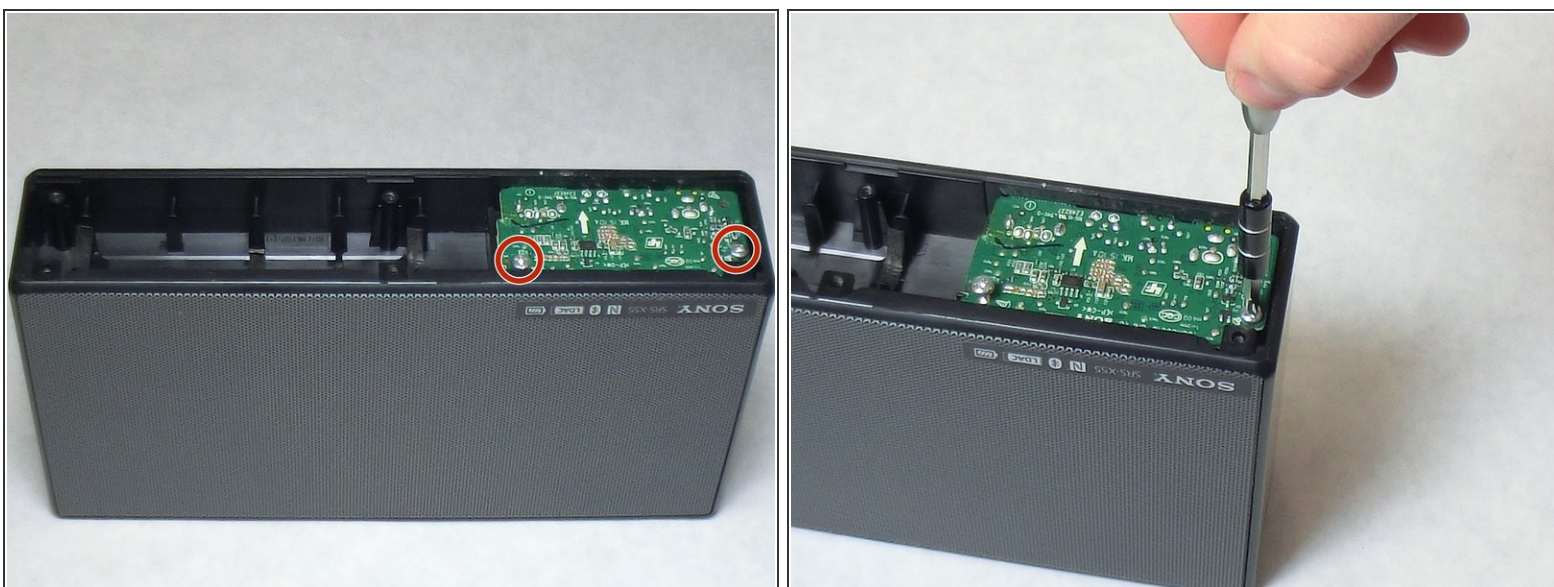

- Locate the remaining two 3.5 mm screws on the bottom of the I/O board and remove them using a Phillips head #2 screwdriver.

## Step 5

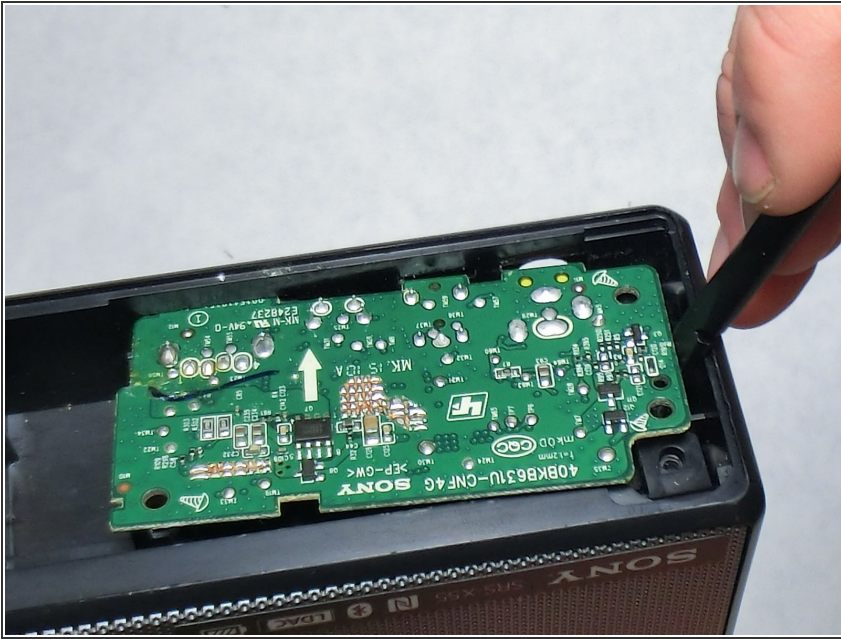

- Remove the I/O board from the rest of the speaker. A plastic spudger can aid in this process if it is inserted into the edge as shown and gently pried.

## Step 6



- Insert a plastic spudger into the seam where the forward facing metal speaker cover meets the speaker body and gently pry it upward until it releases.



## Step 7



- Locate the eight 8.9 mm screws on the face of the speaker assembly and remove them using a Phillips head #2 screwdriver.

## Step 8



- Insert a plastic spudger underneath one of the tabs on the front of the speaker assembly and gently raise it.


⚠ Continue to the next step before attempting to lift the speaker assembly entirely away from the rest of the speaker to avoid damaging internal wire connections.

## Step 9



- Locate the two wire connections as shown underneath of the speaker assembly and unplug them using a pair of tweezers.
- Lift the speaker assembly away.

## Step 10

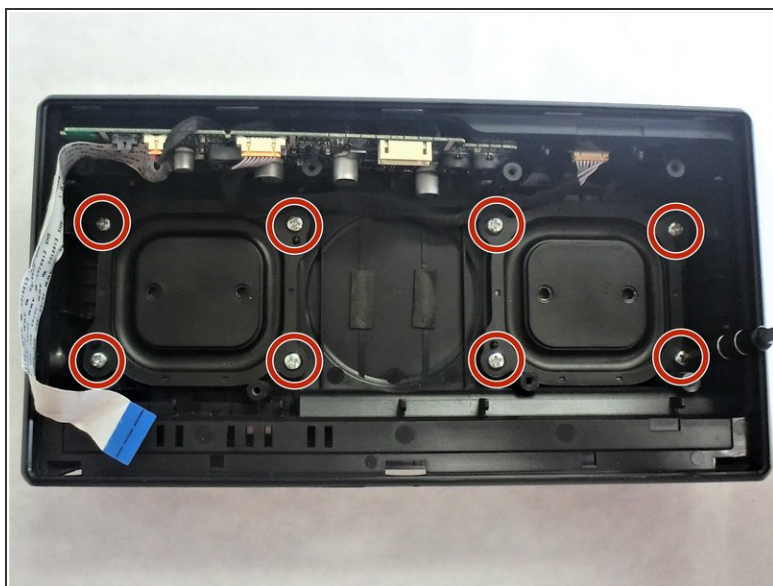

- Locate the eight 7.5 mm screws across both of the speaker reverberators and remove them using a Phillips head #2 screwdriver.
- Lift the speaker reverberators away and replace them.

To reassemble your device, follow these instructions in reverse order.