



Dyson v6 Absolute Bin Replacement

In case the bin of the Dyson v6 Absolute detaches, it is easily reattached and snapped into place.

Written By: Tabitha Espina Velasco



INTRODUCTION

The bin of the Dyson v6 Absolute should be regularly cleared of debris for the device to function properly. The bin is easily and hygienically emptied.

Step 1 — Bin



- Unplug the device.

Step 2



- Push down the red lever located on the outside of the bin, next to the device handle, to open the door to the debris bin.
- Avoid pressing the trigger on the handle opposite the red lever, which activates the motor.

Step 3



- Push the red lever down a second time to release the debris bin.
- Avoid pressing the trigger on the handle opposite the red lever, which activates the motor.

Step 4



- Pull bin away from the cyclone.

To reassemble your device, follow these instructions in reverse order.