



# Samsung Galaxy Grand Prime Screen and digitizer Replacement

Screen and digitizer replacement Samsung Grand Prime

Written By: jonathanwarford65



---

# INTRODUCTION

Outline what you are going to teach someone how to do.

---



## TOOLS:

- [iOpener](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Phillips PH000 Screwdriver](#) (1)
-

## Step 1 — Screen and digitizer



- Remove the battery, SIM card, and memory card.

## Step 2



- Heat up sides of phone. Be careful not to heat up too long!

### Step 3 — Carefully remove the screen from the digitizer



- Make sure to remove the digitizer cable connection from the back. Pop the tab on the back to expose the connector.

### Step 4 — Lift screen from bottom to top be careful not to tear connector at top of screen and digitizer



- When lifting screen it will be connected to the digitizer from the back care fully hold screen and use plastic pry bar to lift digitizer do not force if it is not coming up stop put screen down and reheat until glue is melted enough to easily release digitizer.

### Step 5 — Disconnecting screen from digitizer on back is a tab pull plastic tab up to release gold connector from digitizer



- Insert wisdom here.

### Step 6 — Now put on new screen to digitizer by lifting tab and inserting gold connector into slot and push tab down



- Make sure you have the screen and digitizer lined up. Be careful it is fragile. Put screen an digitizer back into phone and use heat gun to heat glue and push screen on to phone frame.

## Step 7 — Reconnect tab into slot on back of phone and turn phone on and test to make sure picture is displayed and touch works



- Insert wisdom here.

To reassemble your device, follow these instructions in reverse order.