



BLU Dash 3.5 Volume and Lock Button Replacement

Replace broken volume and lock button on the Blu Dash 3.5.

Written By: Paige Shirley



INTRODUCTION

This guide will explain how to replace the volume and lock button on the Blu Dash 3.5.



TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #000 Screwdriver](#) (1)




PARTS:

- [Replacement Volume and Lock Buttons](#) (1)

Step 1 — Battery



- Start by locating the slot on the lower right corner of the device.
- Insert the opening tool into the slot.
- Pry the back cover off. Once the corner is off, continue around the perimeter of the phone pulling the back off with your fingers.

 
 A fingernail can work to open the back in place of an opening tool.

Step 2




- Locate the indentation at the bottom of the battery.
- Insert your thumb and pull the battery out.

Step 3 — Volume and Lock Button

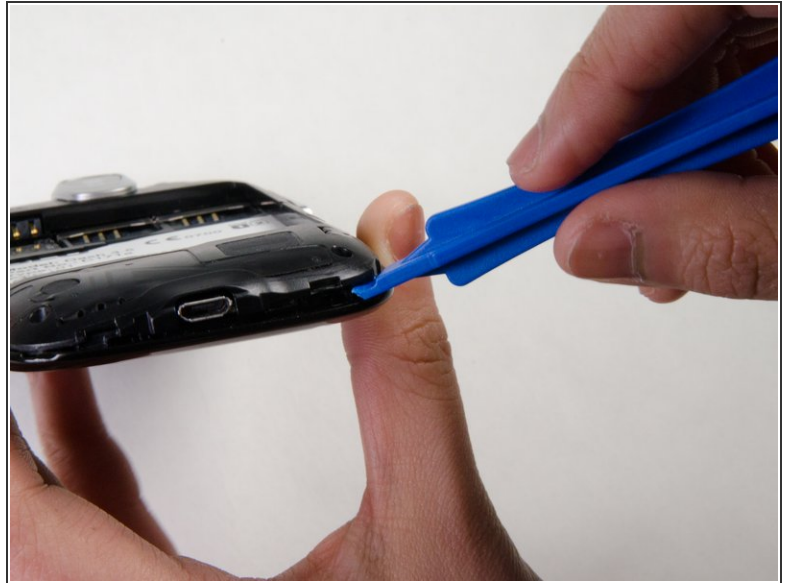

- Use the 000 Phillips screwdriver to remove the four 4.5 mm screws from the corners of the interior back panel.
- Use the opening tool to pry open the plastic back panel to expose the motherboard.

 Step 4

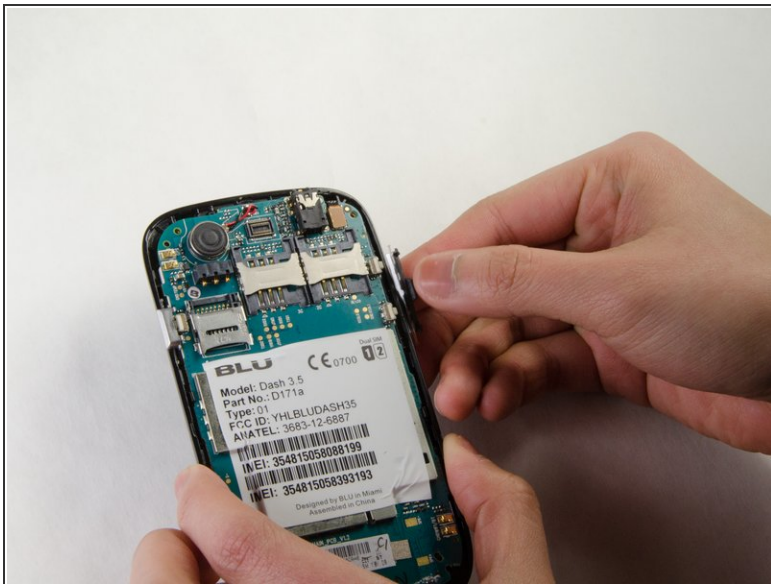

- Remove volume and lock buttons by lifting them gently from the casing.

To reassemble your device, follow these instructions in reverse order.