



# Inter-tel IP 8660 Button Pad Replacement

Install a new Button Pad for your Inter-tel IP 8660.

Written By: Juan David GutierrezFranco



---

## INTRODUCTION

This guide details the steps to take off the button pad of your Inter-tel IP 8660.

---



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Rear Cover



- Before disassembling the phone, make sure it is not plugged into power and the handset phone cord is disconnected from the handset jack.

## Step 2



- Unscrew the 9 highlighted screws using a #1 Phillips head screwdriver. You can use a magnetized screwdriver to draw them out.
  - 8 mm long
  - 11 mm long




## Step 3




- Lift up the back cover and set it aside.

## Step 4 — Internal speaker

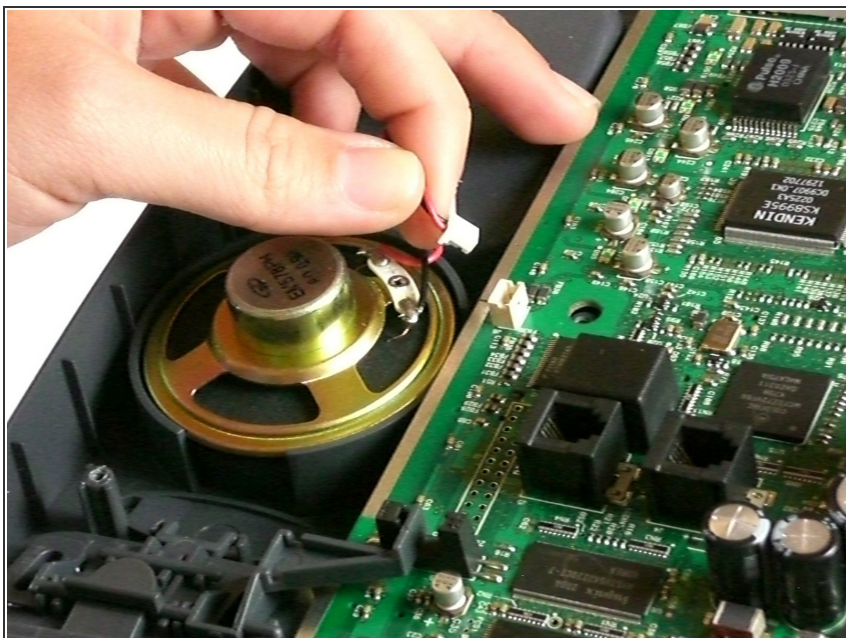


- While holding down the motherboard, gently pull the wire harness connecting the speaker to the motherboard until it comes free.

## Step 5

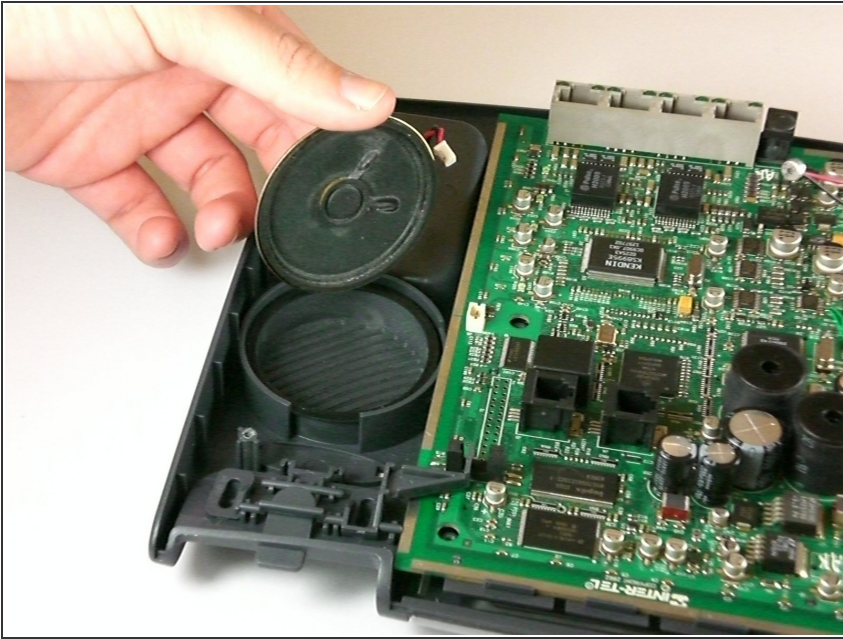

- Lift up the speaker.

## Step 6 — Button Pad

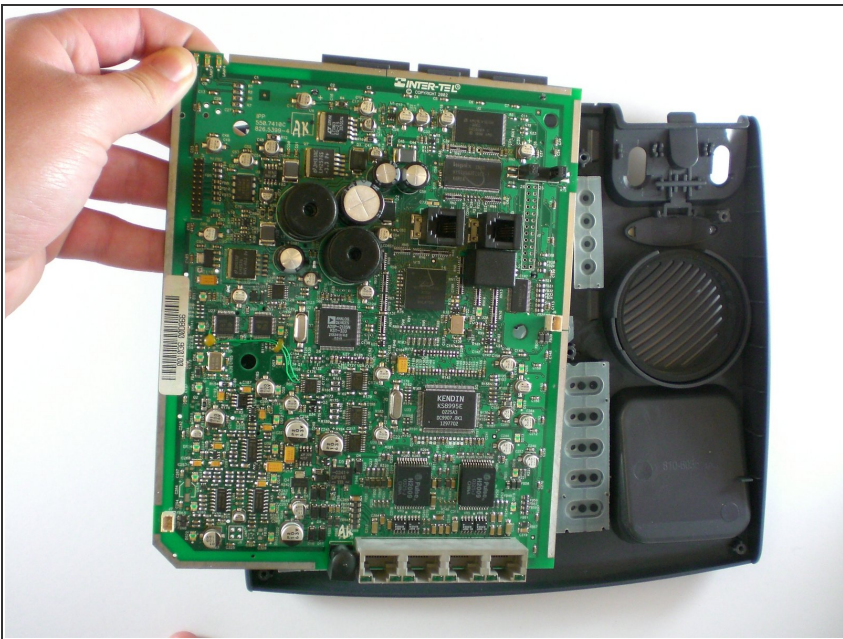

- Lift up the motherboard and set aside




## Step 7



- Peel off all rubber button covers.

## Step 8

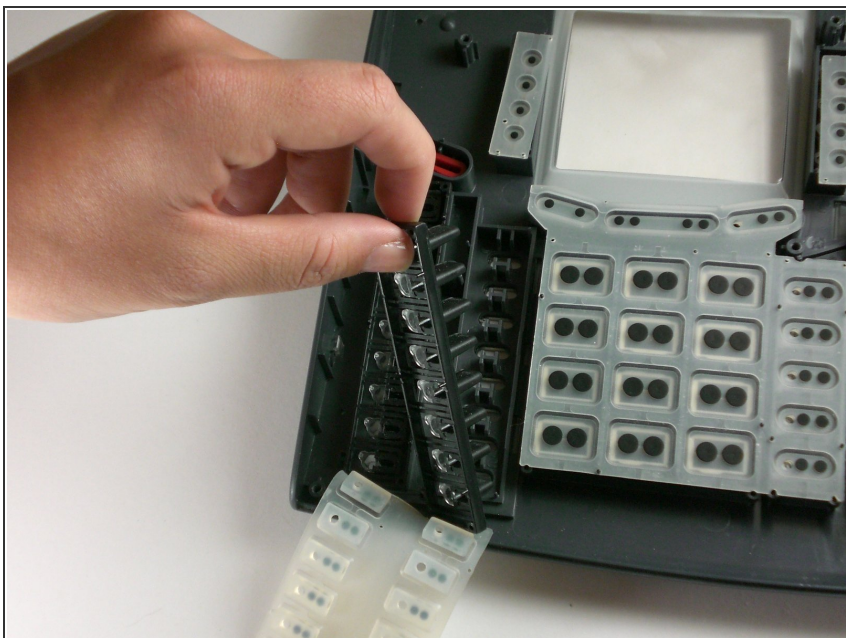

- Remove all plastic buttons. (Note: Look at the initial picture for locations of each button set)

To reassemble your device, follow these instructions in reverse order.