



Sony DVP-FX730 Screen Replacement

If the device is on but nothing shows up on the...

Written By: Oliver Woolsoncroft



INTRODUCTION

If the device is on but nothing shows up on the screen, the screen may need to be replaced.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Monitor



- Use your hand to remove the small back cover by gently pulling upward.

Step 2





- Using a screwdriver, remove the two 12 mm pan head screws.

Step 3




- The screen should now detach from the primary device.
- ⚠ The wires, indicated with a blue box, will still connect the screen.

Step 4

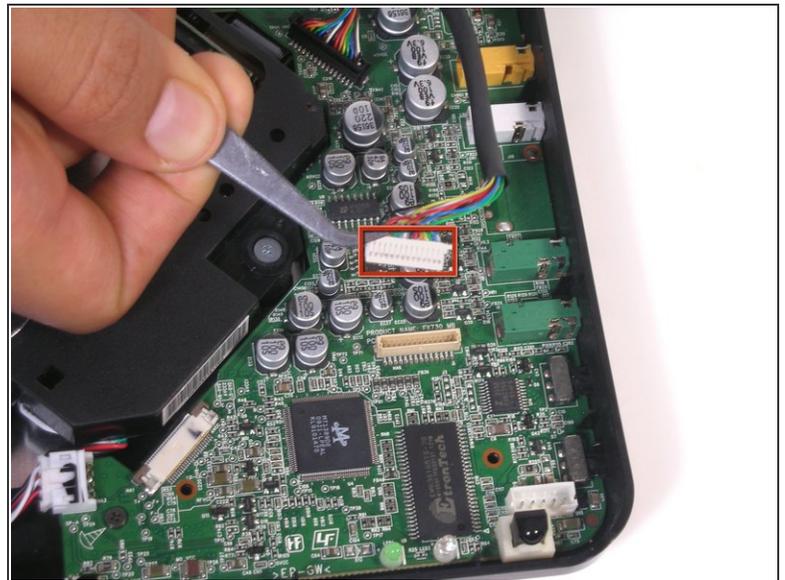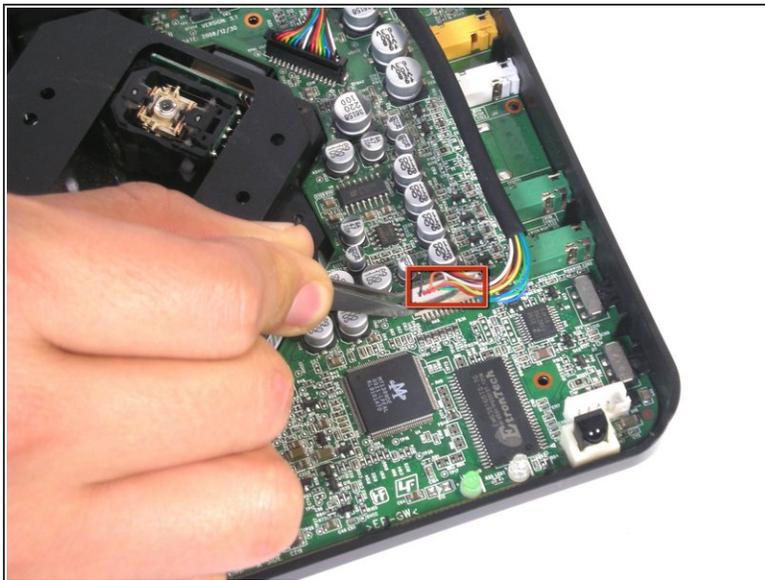

- Remove the wires attached to the white base using tweezers to pull them up.

Step 5

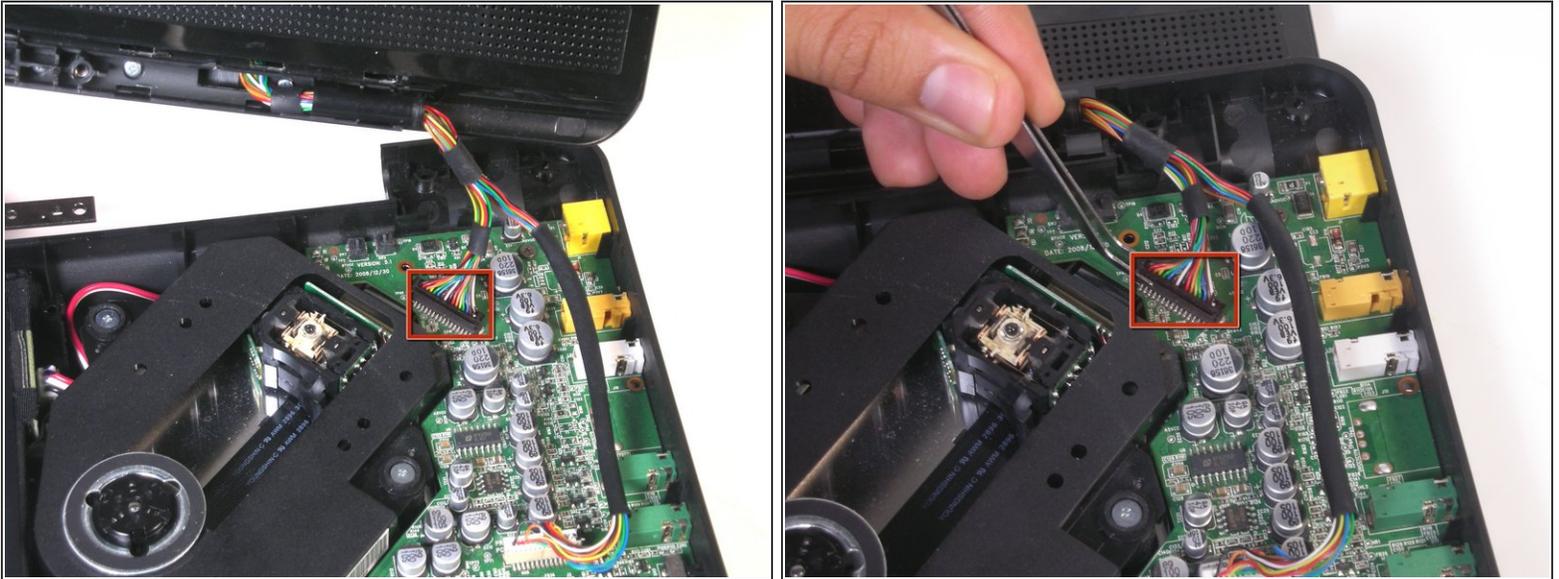

- Referring back to Step 8, do the same with the wires attached to the black base.

Step 6



- The screen should now be completely separated from the main device.

Step 7 — Screen




- Remove the four rubber feet and the screws beneath.
- Remove the two exposed screws on the left side.
- Pull back the cables until the screw is visible.

Step 8



- Using the spudger, separate the top and bottom covers.

Step 9

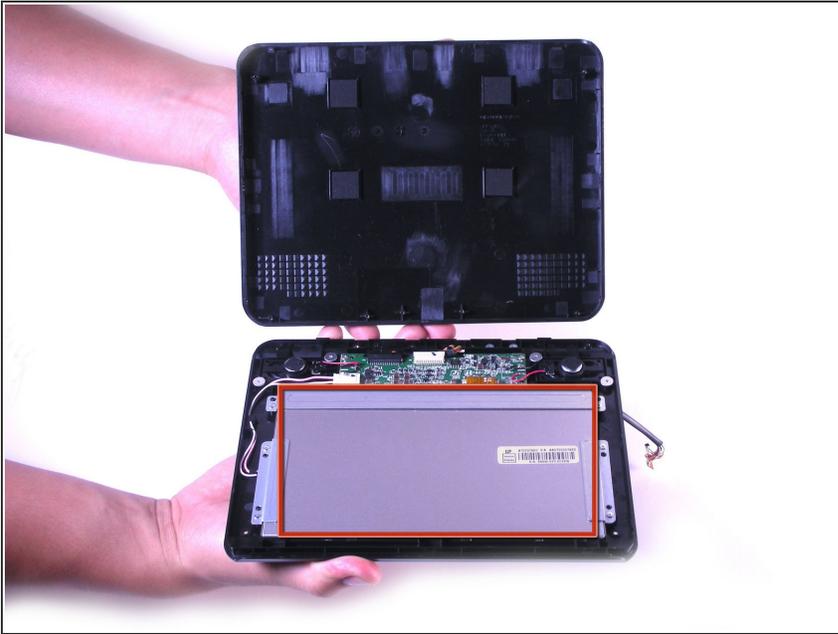

- Identify the gray back of the screen.

Step 10





- Remove the screws.

Step 11



- Remove the metal plates.

Step 12

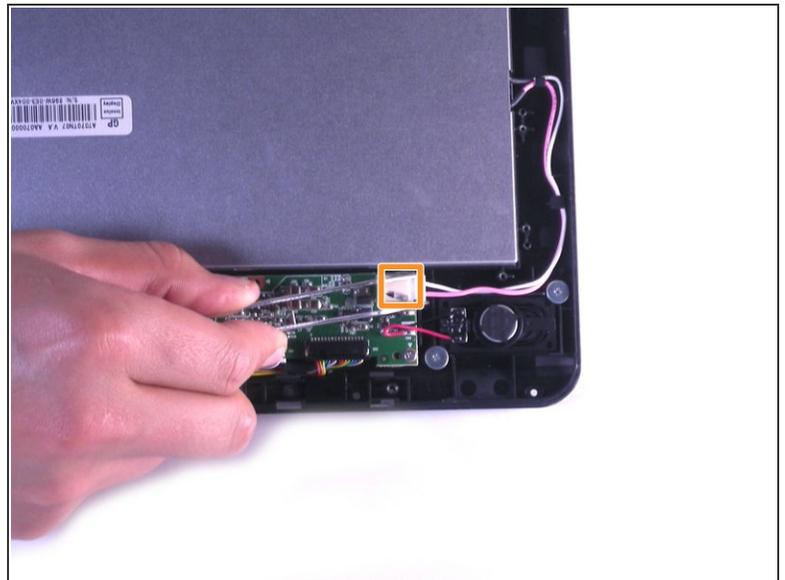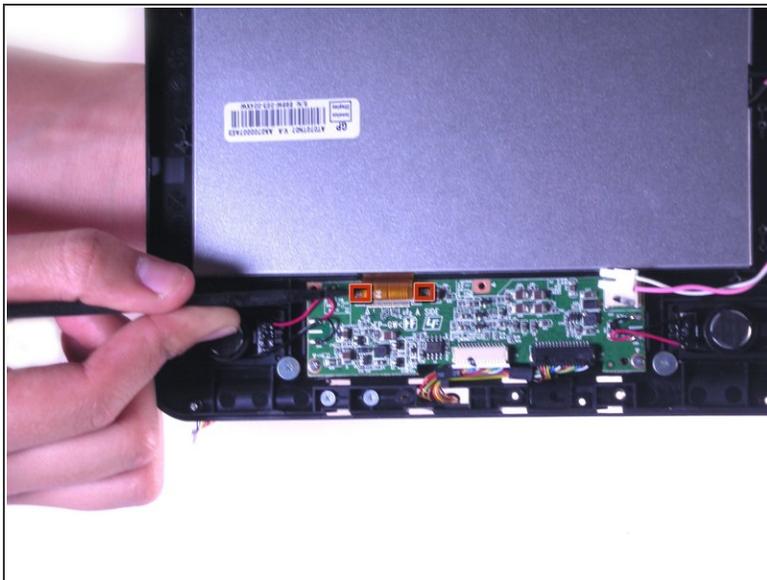

- Using spudger, push the lock clips to unlock the ribbon cable.
- Using tweezers, pull the connector loose.

Step 13



- Place your hand on the front of the screen and push upwards.

To reassemble your device, follow these instructions in reverse order.