



Samsung SCH-3500 Antenna Replacement

How to replace a Samsung SCH-3500 antenna.

Written By: Brett Tomashitis



INTRODUCTION

Samsung SCH-3500 has an easy to replace antenna in the upper right hand corner that will probably wear out over a long period of time. These replacement antennas can be found online and can be shipped right to your door. A new one will be the only part you will need for this guide on replacing an antenna on a Samsung SCH-3500. No other external tools required to do replacement. Pictures of individual steps provided with further details listed beside.

Step 1 — Battery



- Place the phone so that the back is facing you. Depress the locking tab on the back of the phone with a finger or thumb.

Step 2



- Slide the battery toward bottom of the phone, about a quarter of an inch, to clear the hooks that keep it secured to the back of the phone.

Step 3



- Lift the battery away from the phone case.

Step 4 — Antenna




- Grasp the antenna firmly and rotate it counterclockwise to unscrew it from the phone.

Step 5



- When unscrewed, pull the antenna straight up and out.

Step 6

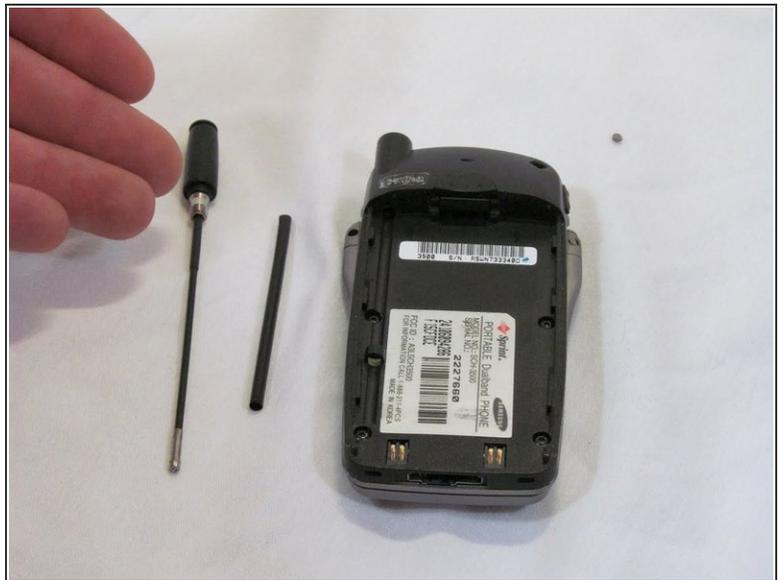

- Pull the guide tube free from its retaining ring and slide it out the top.

To reassemble your device, follow these instructions in reverse order.