



# Disassembling Sony Cyber-shot DSC-W230 Separating Camera and Display

Before the display and camera housing can be...

Written By: Steve Van Hall



# INTRODUCTION

Before the display and camera housing can be repaired or replaced they must first be separated. This guide will detail how to prepare the display and camera for separation.

## TOOLS:

[iFixit Opening Tool](#) (1)

### Step 1 — Case



- Begin by placing the camera upside down and removing the three small center screws.
- ① All screws are the same size and length and can be used interchangeably.



## Step 2



- Turn the camera on its side (Counterclockwise). Remove the two small screws on either side of the silver panel.
- Turn the camera 180 degrees onto its other side and remove the two small screws on either side of the silver panel.

## Step 3



- Locate the camera's tripod mount located on the bottom of the camera.
- Carefully remove the camera's tripod mount and place it aside.
- Be careful not to lose this piece.
- Rotate the silver panel labeled 4x clockwise.

## Step 4 — Separating Camera and Display



- Align the camera so that the side with "4x Optical Zoom" is facing toward you.
- Gently twist the bottom corner clockwise until you feel the side panel unlock.
- Lift off the side panel and set aside.



## Step 5



- Rotate the camera 180 degrees to face the side panel with the lanyard loop on it.
- Gently lift the panel vertically until it lifts off

⚠ Take care to not lose the small rectangular portion on the bottom of the panel.

## Step 6



- Position the camera so the bottom is facing up and the display away from the surface.
- Gently pry the screen portion from the camera portion with your fingers or a plastic prybar.

⚠ Do not fully separate the two components! the screen is attached by two ribbon cables.

- Lay the display flat to expose the circuit board and the display control ribbon cables.

---

To reassemble your device, follow these instructions in reverse order.