



Toshiba Dynabook AX 53D Memory Replacement

This guide will detail how to replace memory (RAM) in the Toshiba Dynabook AX 53D.

Written By: Christopher



INTRODUCTION

This guide will show users how to replace the memory (RAM) from the Toshiba Dynabook.



TOOLS:

- [JIS Driver Set](#) (1)
-

Step 1 — Battery



- Push apart the two spring loaded plastic tabs labeled #1 and #2.

⚠ Make sure to unplug any external power sources before working on the computer.

Step 2




- The battery is now easily removed by pulling up from the notched tab on the inside edge.

Step 3 — Memory



- Remove the 4.5 mm screw labeled 4 and lift up panel from the vented 2" x "4 memory cover in the middle of the computer.

Step 4

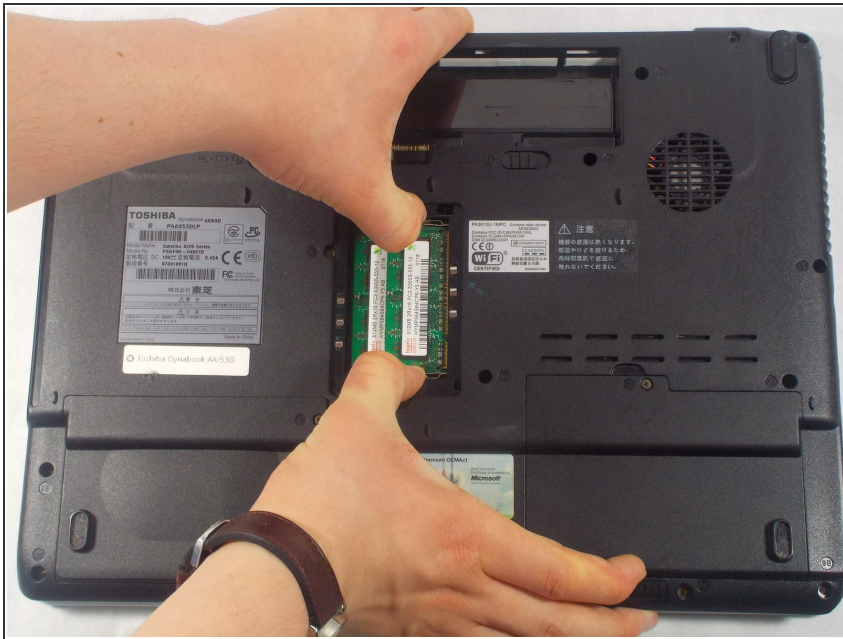

- Gently pull apart the two metal support clips on either side of the chip to release from the socket. It will spring upwards when it is properly released.

Step 5



- Gently pull the chip out of the clips.
- ⚠ Touching the contacts or the chips on the board could destroy the components.

To reassemble your device, follow these instructions in reverse order.