


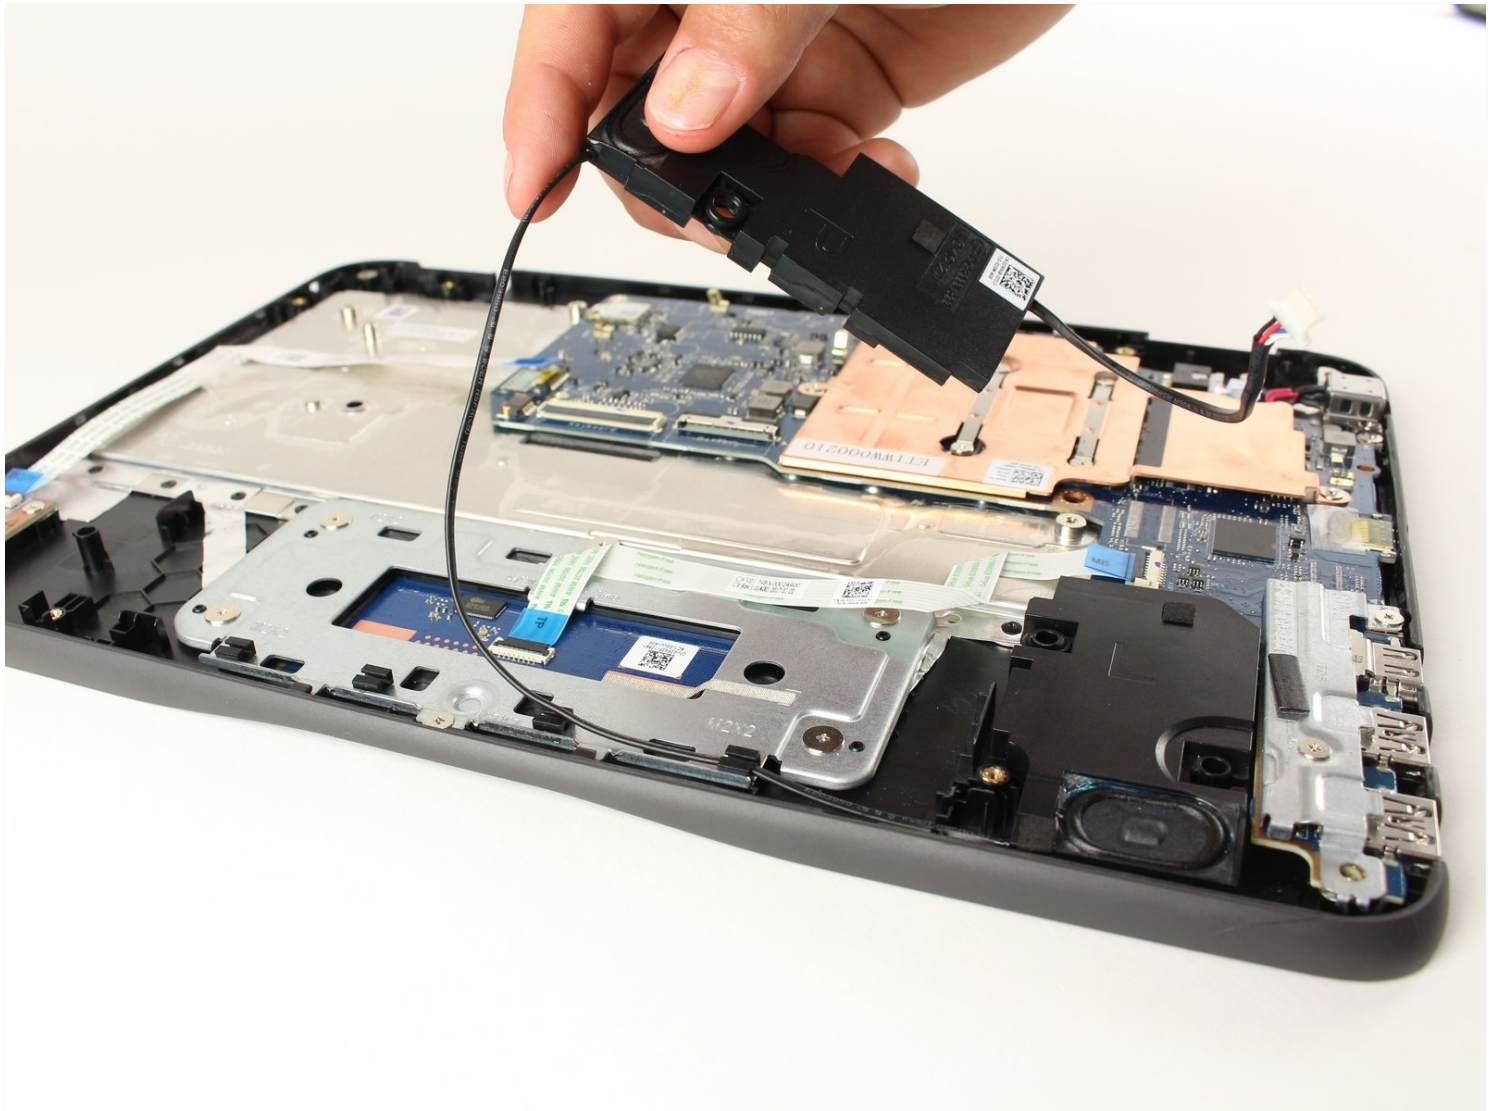

# Dell Chromebook 11 3180 Speakers Replacement

This guide will show you how to replace the...

Written By: George Erie



# INTRODUCTION

This guide will show you how to replace the speakers of your Chromebook. This is a very straightforward and easy repair.



## TOOLS:

[Phillips #0 Screwdriver](#) (1)  
[iFixit Opening Tool](#) (1)



## PARTS:

[Dell Chromebook 11 3180 Speaker Set](#)  
(1)

---

## Step 1 — Back Cover




- Set your laptop upside down on your work space.

## Step 2




- Using [tweezers](#), remove the circular stickers that are covering the two screws near the middle of the back cover. Stick them to the laptop next to the screws.

## Step 3

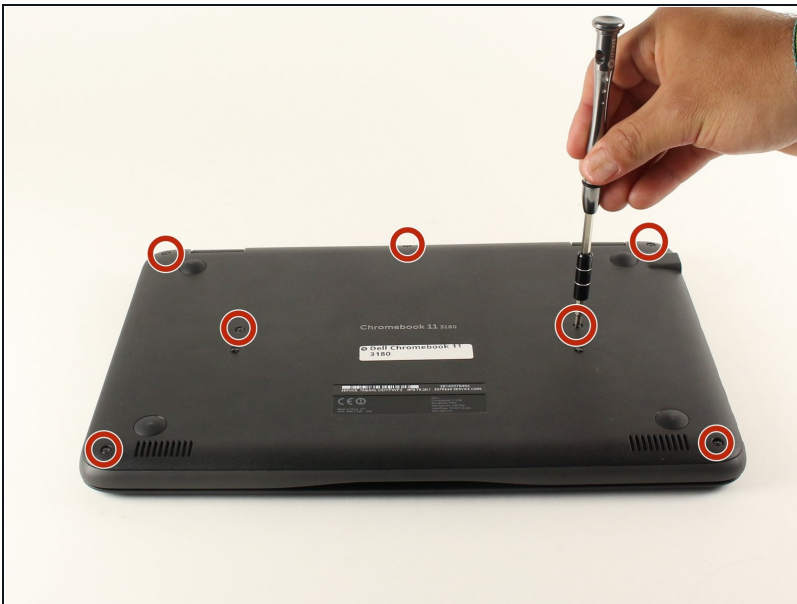

- Using a Phillips #0 screwdriver, loosen all seven 2.5mm screws on the back cover of the device.
- ⓘ These screws will stay attached to the back cover, so just loosen them until they rattle around.

## Step 4

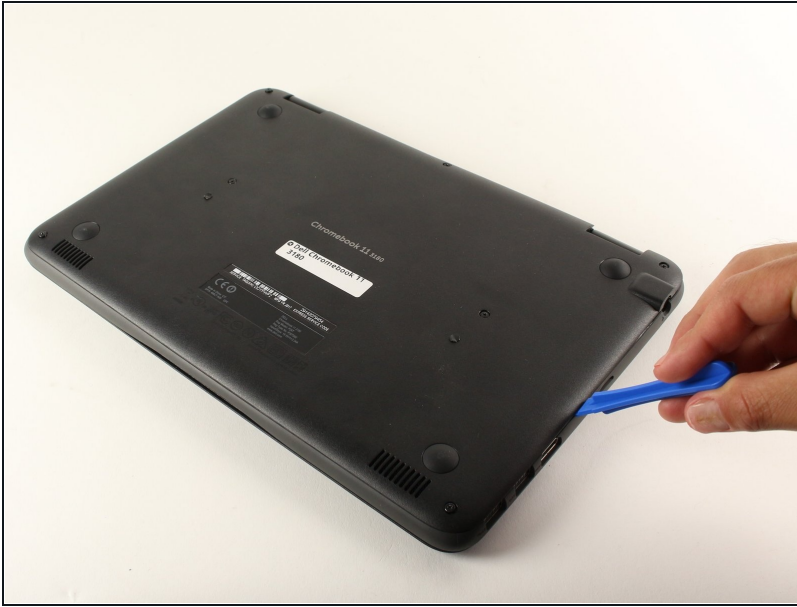

- Using a plastic opening tool, begin to separate the back cover from the body of the computer.
- ❗ If you have trouble prying a particular part of the back cover off, make sure that the nearest screws are fully loosened.


## Step 5



- Using your hands, pull the back cover fully off of the body of the computer.




## Step 6 — Speakers

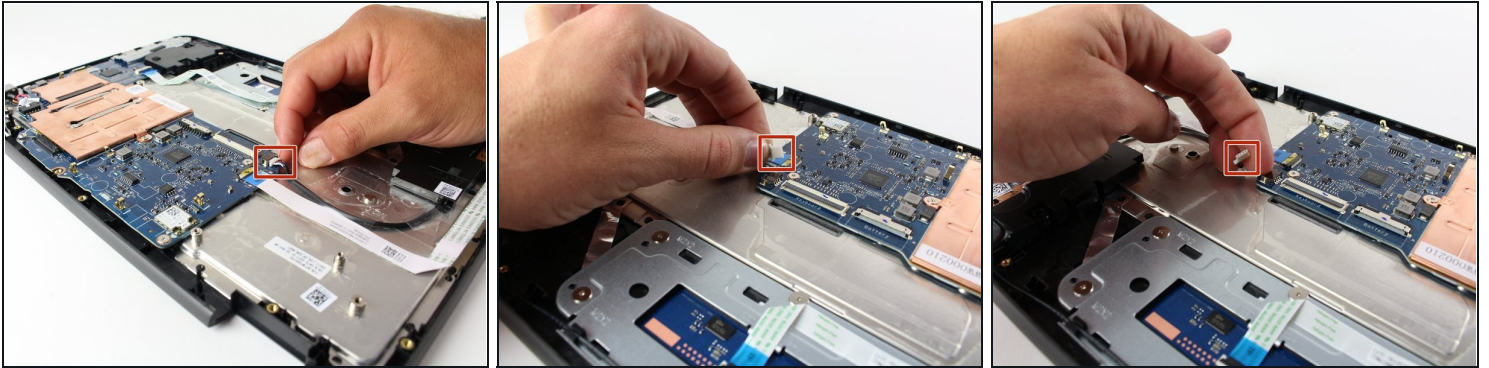

- Locate and gently pull the wire harness (small plastic box with wires leading to black audio speakers) directly out of the connector on the motherboard.
- ⓘ Some components are not shown in pictures for simplicity. There is no need to remove any of the missing components to successfully remove the speakers.

## Step 7

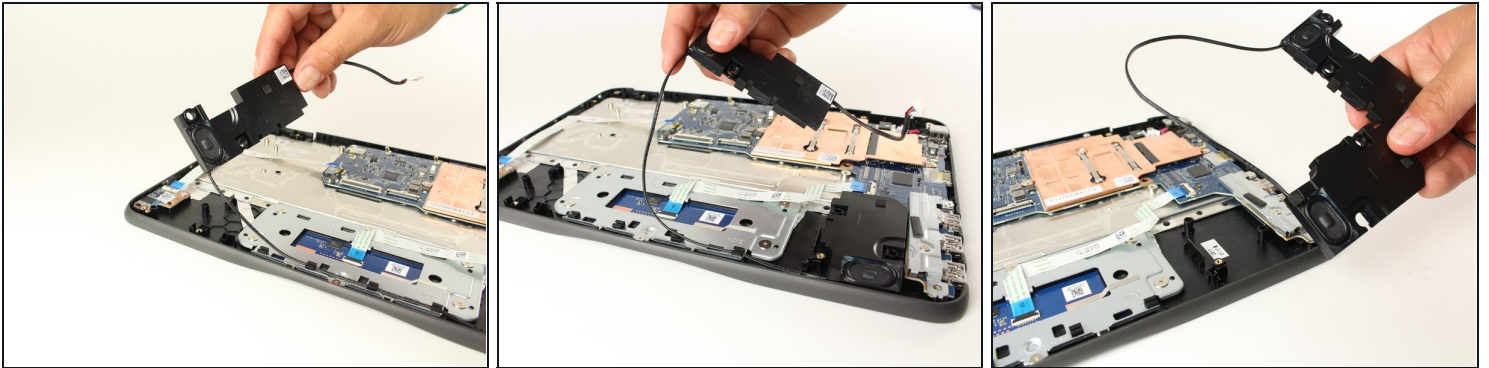

- Remove any existing tape attached to the audio wire you unplugged in the previous step.
- Gently lift and remove speakers.
- ⓘ No screws should be removed

---

To reassemble your device, follow these instructions in reverse order.