


# Palm Pre Speaker Replacement

Guide to replacing the Palm Pre speaker.

Written By: noha



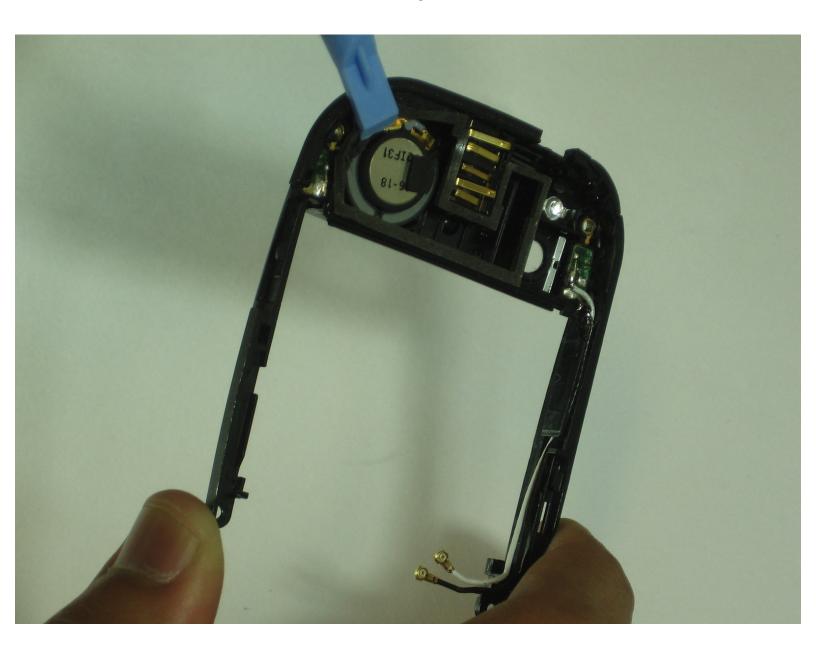

- Spudger (1)
- T4 Torx Screwdriver (1)

## Step 1 — Battery



- Make sure your Palm Pre is turned off before disassembling the phone.
- Snap off the back panel to reveal the battery.

## Step 2



 Carefully pull up on the tab to remove the current battery.


#### Step 3 — Speaker






Use the t4 screwdriver to remove all 6 of the 3.6mm long screws.


#### Step 4

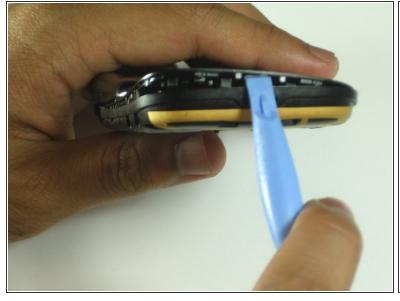

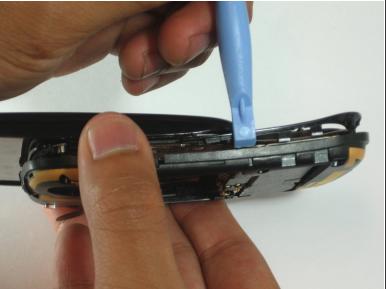


- Use the spudger to locate the crease at the bottom of the keyboard.
- Carefully work your way around the phone separating the back frame from the keyboard.

#### Step 5

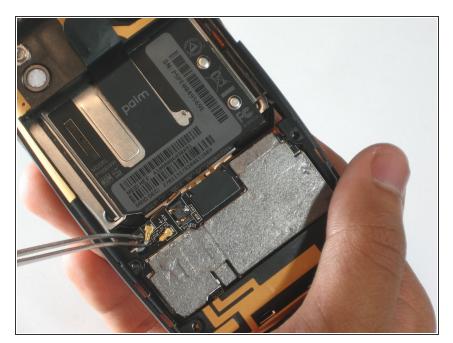

 Use tweezers to remove the DIV and GPS antennas from the back of the keyboard.

### Step 6

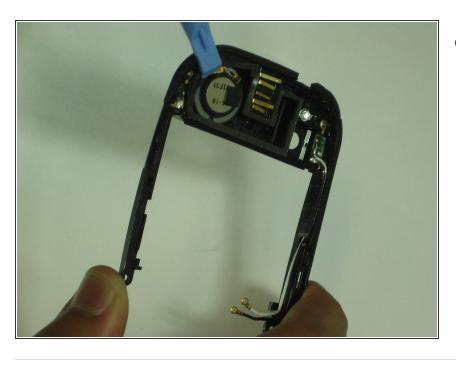

- Use the spuger to pry out the speaker. It is magnetically connected so do not be afraid to use the necessary force.
  - Make sure to take note of the orientation of the speaker for reinstallation.
  - Make sure not the puncture the screen on the outside of the back frame.

To reassemble your device, follow these instructions in reverse order.