



# Palm Treo 700P Keypad Replacement

This guide will illustrate how to remove the keypad of the Palm Treo 700P.

Written By: James Smith



---

## INTRODUCTION

Follow this guide to remove the keypad of the cell phone

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
  - [T5 Torx Screwdriver](#) (1)
-

## Step 1 — Battery



- Press the button located just above the Sprint™ logo and then slide the cover down.

## Step 2



- Use the small notch on the left hand side of the phone to remove the battery.

### Step 3 — Back Case



- Remove the stylus from the phone.

### Step 4



- After removing the battery and stylus, unscrew the 5 Torx screws (using a T-5 Torx screw driver)

## Step 5



- Using the spudger, remove the small rubberized patch under the antenna.

## Step 6




- Unscrew the last two screws using the previous screw driver.

## Step 7




- Using the plastic opening tool, gently separate the back case from the phone body.

## Step 8 — Motherboard

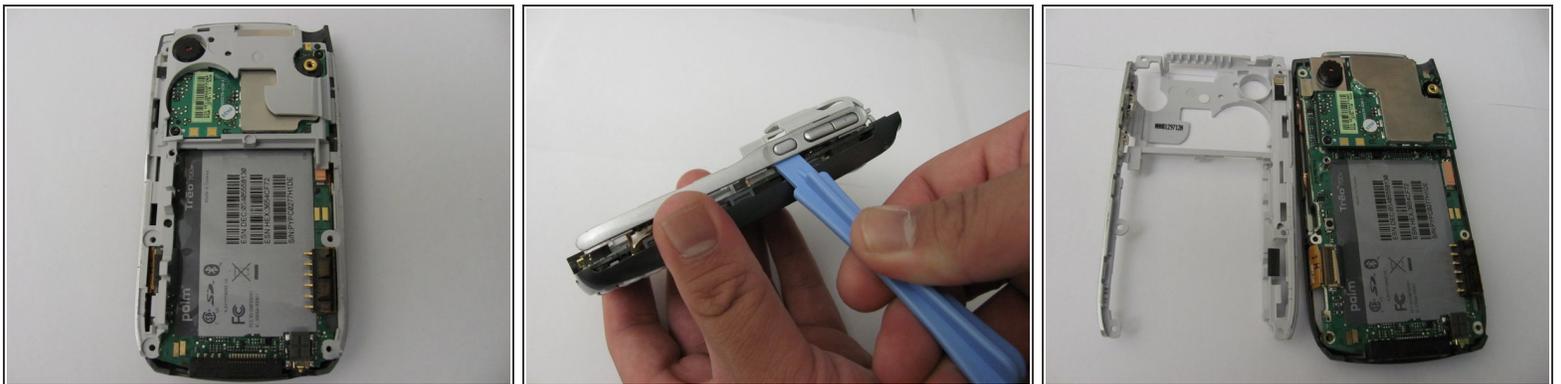


- Using a plastic opening tool, gently edge your way between the back and border case (Picture 2) until they are completely separated (Picture 3).

## Step 9

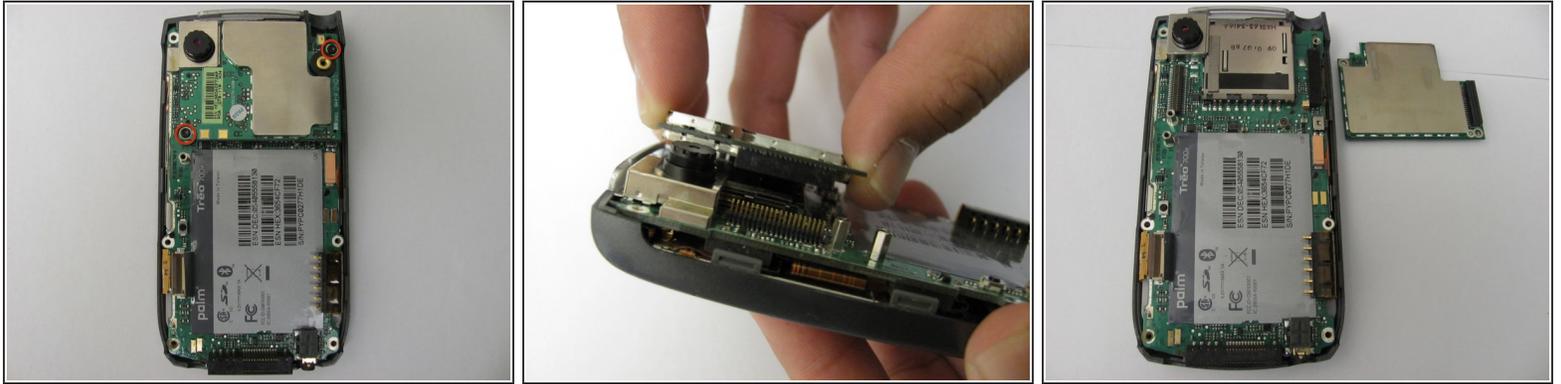

- Remove the antenna chip by unscrewing the two screws with Torx T-5 screwdriver (Picture 1).
- Once unscrewed, gently detach the antenna chip with your hands (Picture 2).

## Step 10

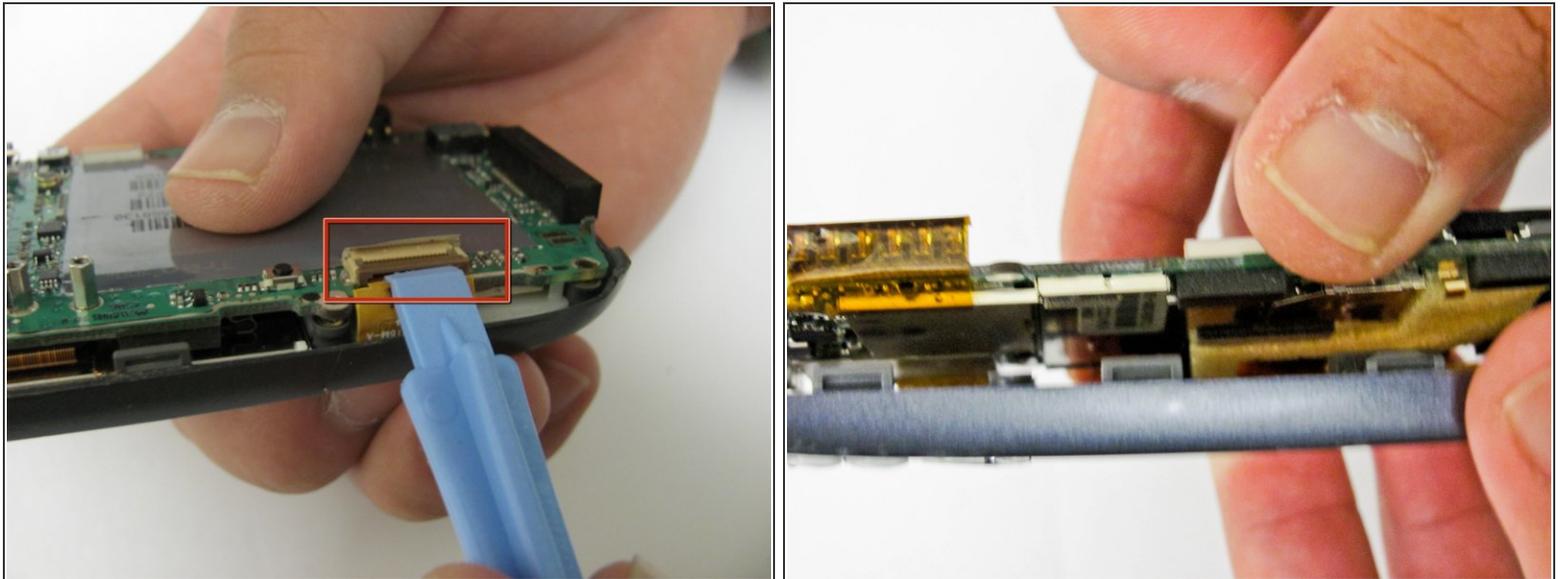


- Use the plastic opening tool to unlock the tab holding the keyboard connection (Picture 1).
- Once the keyboard connection is detached, use your hands to gently separate the motherboard from the back panel (Picture 2).

## Step 11




- To completely detach the motherboard from the back panel, use the plastic opening tool to unlock the LCD connection from the motherboard (Picture 2).
- Once the LCD connection is unlocked, the motherboard should now be completely detached from the back panel, keyboard, and LCD (Picture 3).

## Step 12 — LCD

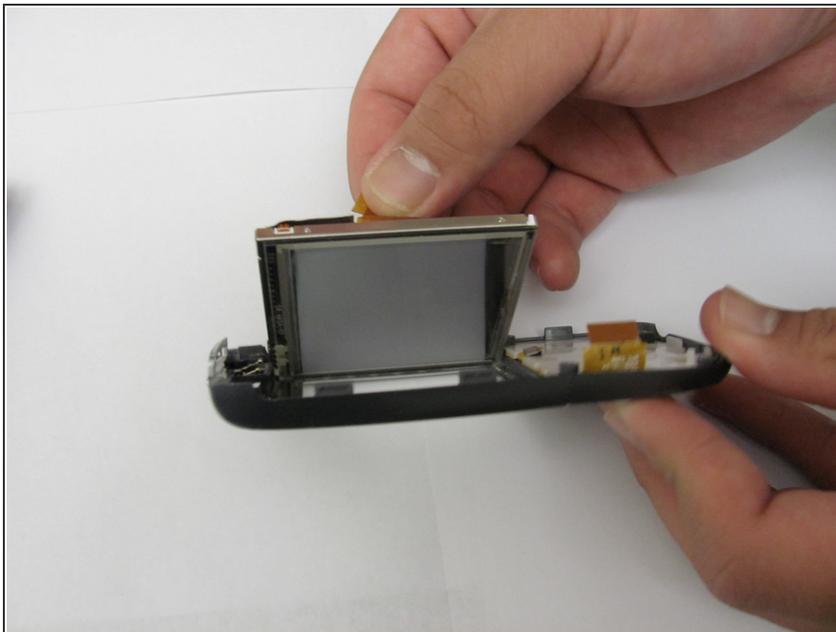


- Once the motherboard is removed, the LCD should be resting on the front case of the phone.

## Step 13 — Keypad

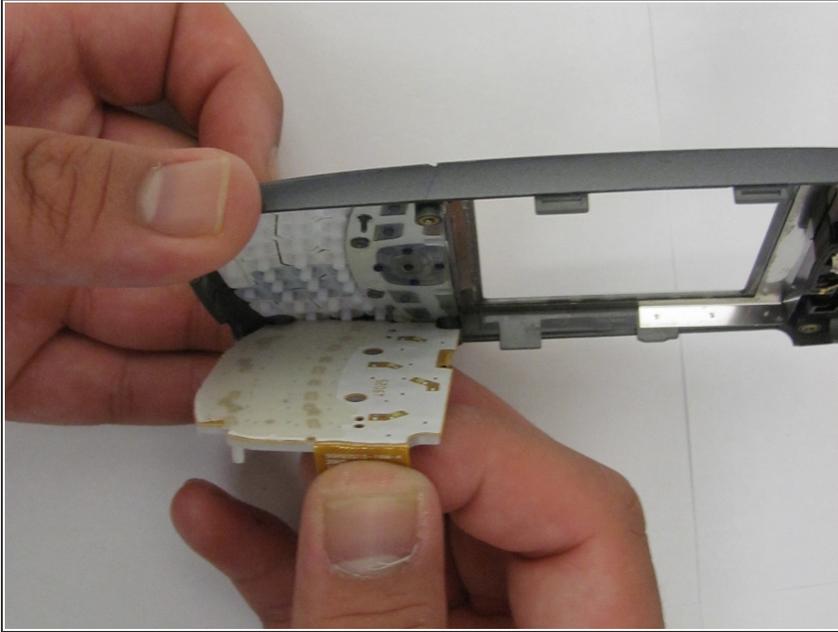

- Peel the keypad from the front panel of the case

## Step 14

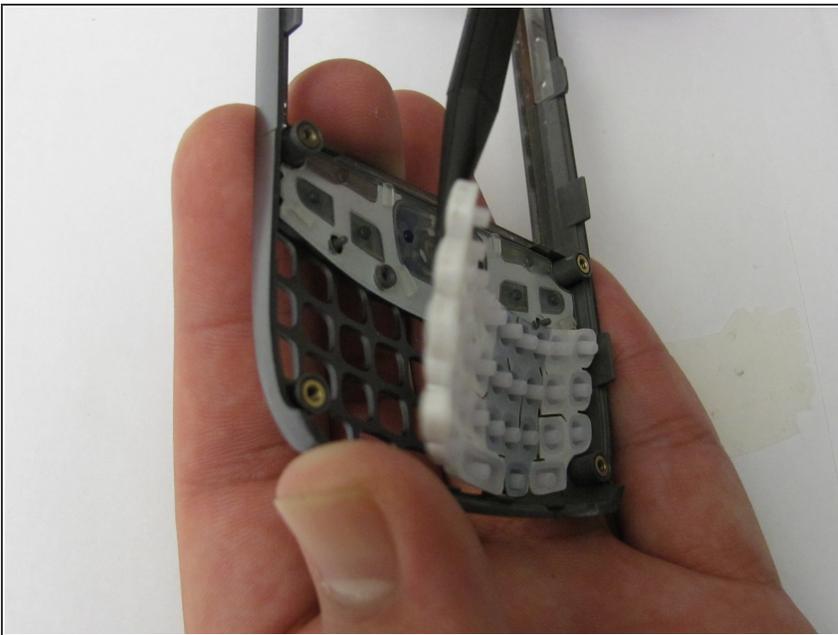

- Using a spudger, remove the gel keyboard from the front case.

To reassemble your device, follow these instructions in reverse order.