



1998-2002 Toyota Corolla Engine Air Filter Replacement

A video tutorial on how to change an old worn out engine air filter on the 1998-2002 Toyota Corolla.

Written By: eCuration



This document was generated on 2020-11-28 05:58:13 AM (MST).

INTRODUCTION

The engine air filter should be replaced every 15,000-30,000 miles depending upon your driving habits.

Follow this video tutorial by YouTuber [NutzAboutBolts](#) to complete the replacement yourself.



TOOLS:

- [Pair of Hands](#) (1)



PARTS:

- [Engine Air Filter](#) (1)

To reassemble your device, follow these instructions in reverse order.