



# Vornado 133 Compact Air Circulator Fuse Replacement

How to easily replace your fuse.

Written By: Erin Klein



## INTRODUCTION

The Vornado 133 has a small fuse in the plug end as a safety feature; if the fuse has burnt out, your fan will not start. This guide will illustrate how to remove and replace the fuse.



### TOOLS:

- [Tweezers](#) (1)
- [Spudger](#) (1)



### PARTS:


- [Fuse \(2.5 amp, 125 volt\)](#) (1)

## Step 1 — Fuse



- Ensure the unit is powered off and remove the plug from the outlet.

## Step 2

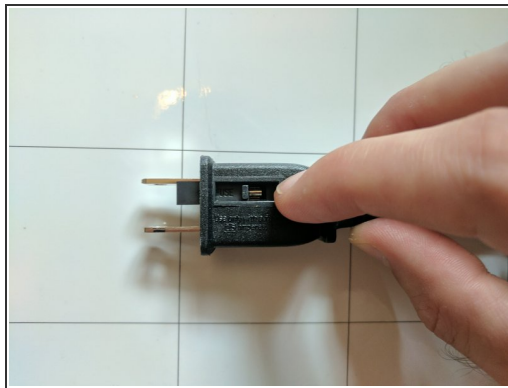

- Slide open the fuse access cover on the top of the plug by moving it towards the end of the plug.

### Step 3



- Use a pair of tweezers or a small plastic spudger to remove the fuse from the fuse casing. Remove the end nearer to the fan body first, then the end nearer to the plug end.

ⓘ The replacement fuse must be 2.5 amp, 125 volt.

⚠ Do not push against the glass center of the fuse, only the metal end pieces.

Follow these instructions in reverse order to install the new fuse and close the access panel.