



Hoover Windtunnel Air Steerable Upright Motor Assembly Replacement

Hoover air steerable upright uh72400 motor replacement

Written By: steven hoover



INTRODUCTION

This guide will help assist you with removing and replacing the motor assembly in your Hoover UH72400.



TOOLS:

- [Phillips #3 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — HEPA Filter



- Put the cleaner into the upright position, turn the power off, and unplug the power cord.

Step 2



- Remove the dirt cup from the cleaner.
- ⓘ The HEPA filter is located under the dirt cup and under where it says HEPA.
- Twist the top counterclockwise to unlock the cap.

Step 3



- Lift the HEPA filter out.
- ⓘ Tap the filter against the inside of a trashcan to knock out the dirt and debris or replace as necessary.
- ☑ Do not wash the HEPA Filter.

Step 4 — Motor Assembly




- Remove the 4 retaining screws and remove the filter tray.
- ⓘ Screw lengths are approximately 3/4".

Step 5



- Pull the motor housing vertically to dislodge the motor.

Step 6

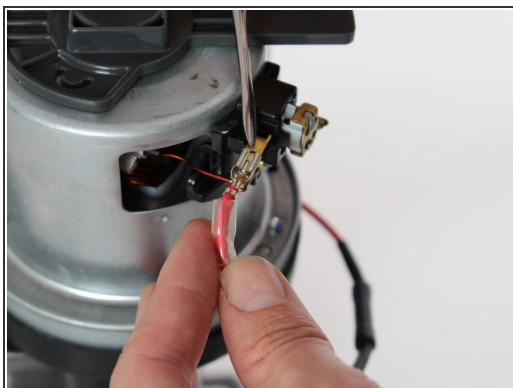

- Use a **plastic** spudger or opening tool to press on the small circle and wiggle clips free.

To reassemble your device, follow these instructions in reverse order.