




Acer Aspire One Cloudbook 11 AO1-131-C7DW

Back Panel Replacement

A replacement guide on how to replace the back panel of the Acer Aspire One Cloudbook 11 AO1-131-C7DW.

Written By: John Hasenbein

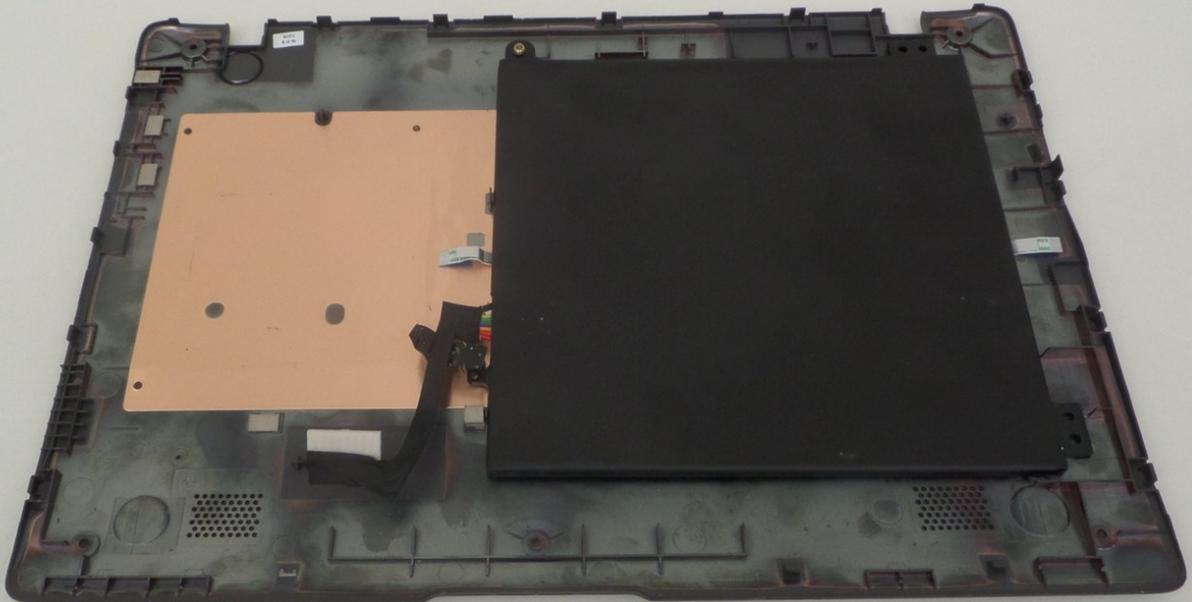

 **TOOLS:**

- [IFIXIT screwdriver with a PH0 bit](#) (1)
 - [nylon pry tool](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Back Panel



- Power the laptop off.
- Flip the laptop over and position it so the opening faces you.
- Remove the rubber foot located near the opening side of the device using tweezers.

Step 2



- Unscrew the five 5-mm screws using the PH0 screwdriver.

Step 3




- Identify the HDMI port located in the side of the laptop opposite to the power button.
 - Insert the plastic opening tool into the divet of the back panel located above the HDMI port.
 - Pry along the laptop frame until the back panel comes loose.
-  Do not pull the back panel too hard as the battery is still connected to the back panel and the motherboard. This can damage your device.

Step 4



- Rotate the device so the opening faces you again.
- Hold the back panel away from the laptop and remove the 4-mm screw using the PH0 screwdriver.
 - ⓘ This screw is fastening the battery to the laptop.
- Lift the back panel gently.

Step 5

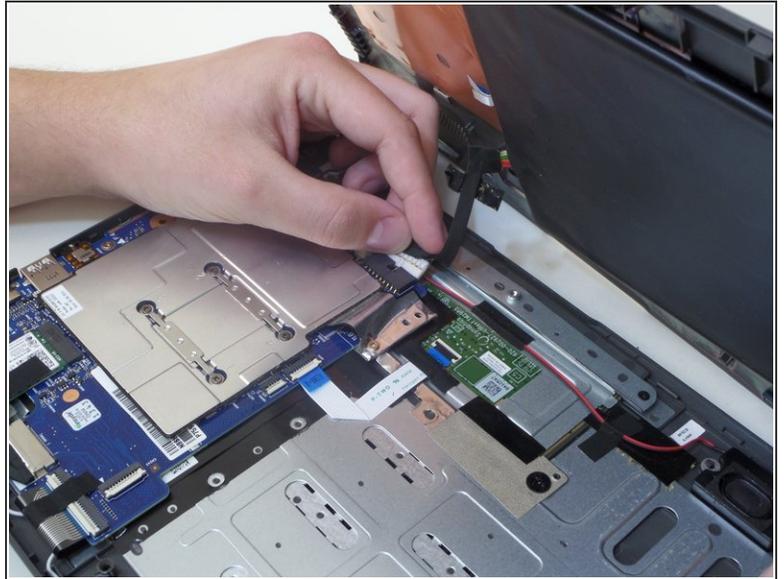

- Unplug the cable that connects the battery to the motherboard.
- Detach the back panel, which still includes the battery.

To reassemble your device, follow these instructions in reverse order.