




Acer Aspire One Cloudbook 11 AO1-131-C7DW

Battery Replacement

This guide will help you replace the battery of the Acer Aspire One Cloudbook 11 AO1-131-C7DW.

Written By: Luz Villegas

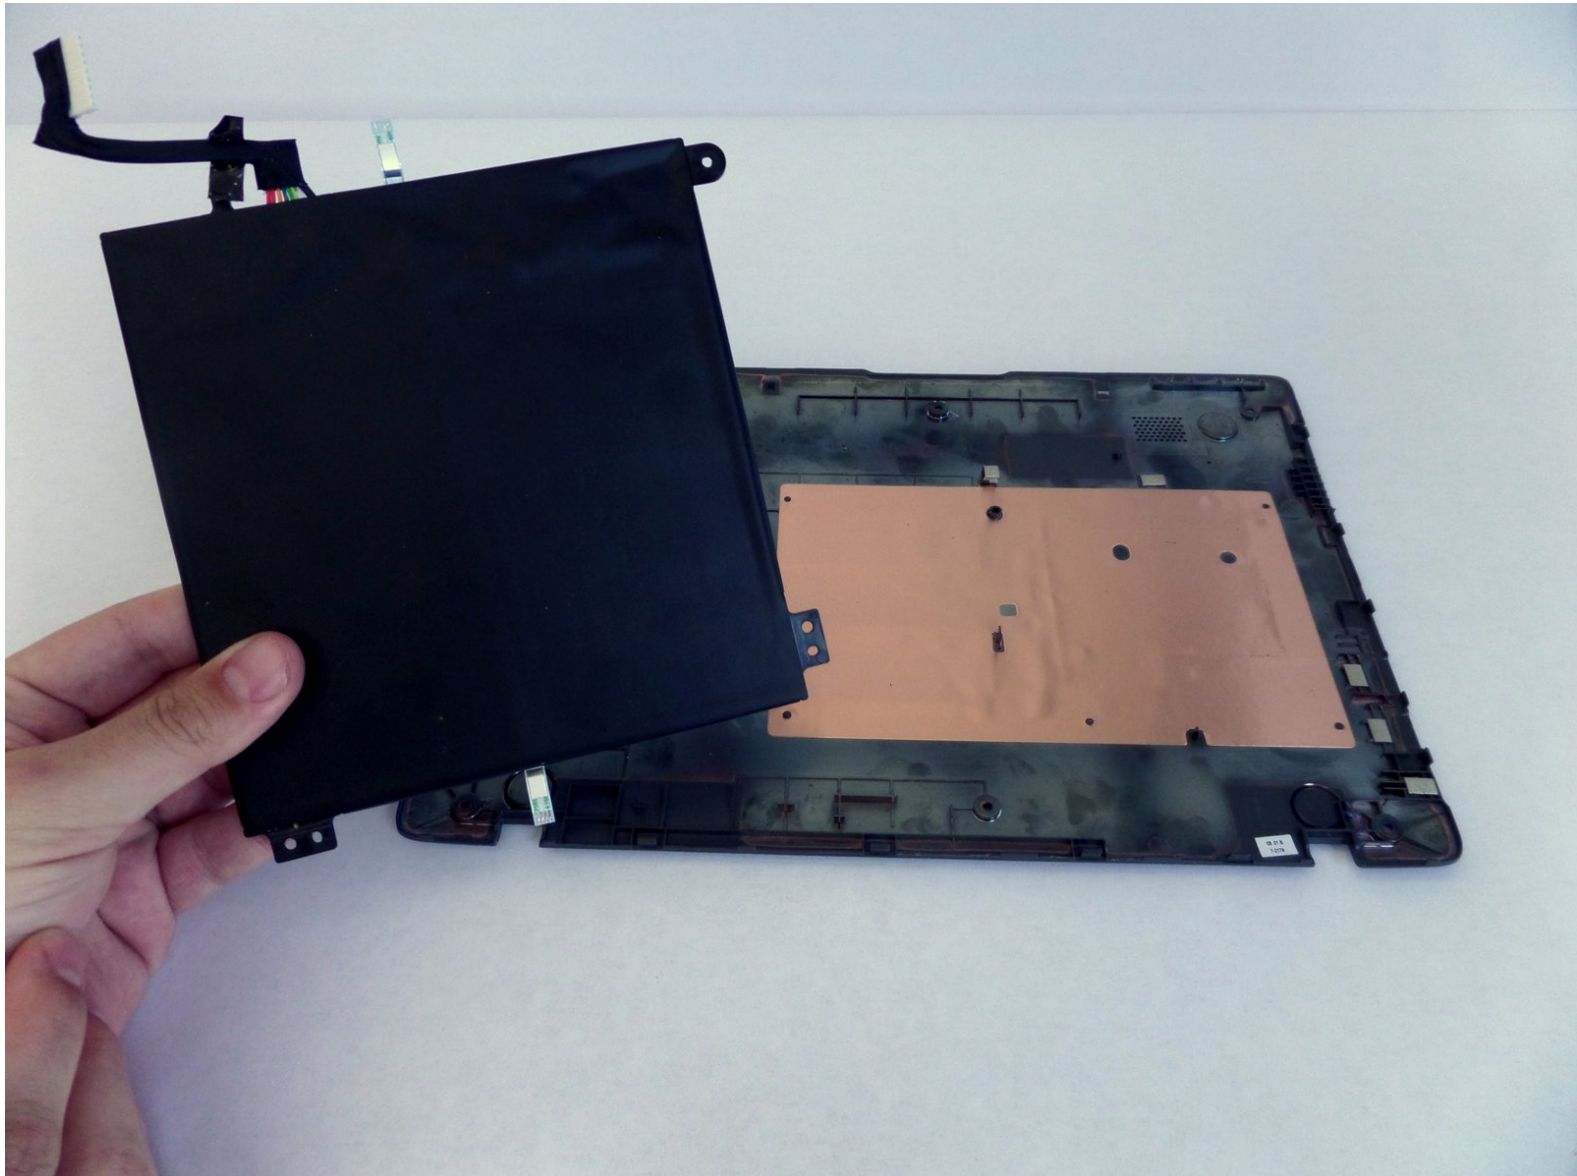

INTRODUCTION

If the life of your battery is significantly shortened, it may be damaged or old. This guide can help you replace the battery by yourself!

TOOLS:

- [iFixIT screwdriver with a PH0 bit](#) (1)
 - [nylon pry tool](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Back Panel



- Power the laptop off.
- Flip the laptop over and position it so the opening faces you.
- Remove the rubber foot located near the opening side of the device using tweezers.

Step 2



- Unscrew the five 5-mm screws using the PH0 screwdriver.

Step 3





- Identify the HDMI port located in the side of the laptop opposite to the power button.
 - Insert the plastic opening tool into the divet of the back panel located above the HDMI port.
 - Pry along the laptop frame until the back panel comes loose.
- ⚠ Do not pull the back panel too hard as the battery is still connected to the back panel and the motherboard. This can damage your device.

Step 4



- Rotate the device so the opening faces you again.
- Hold the back panel away from the laptop and remove the 4-mm screw using the PH0 screwdriver.
 - ⓘ This screw is fastening the battery to the laptop.
- Lift the back panel gently.

Step 5

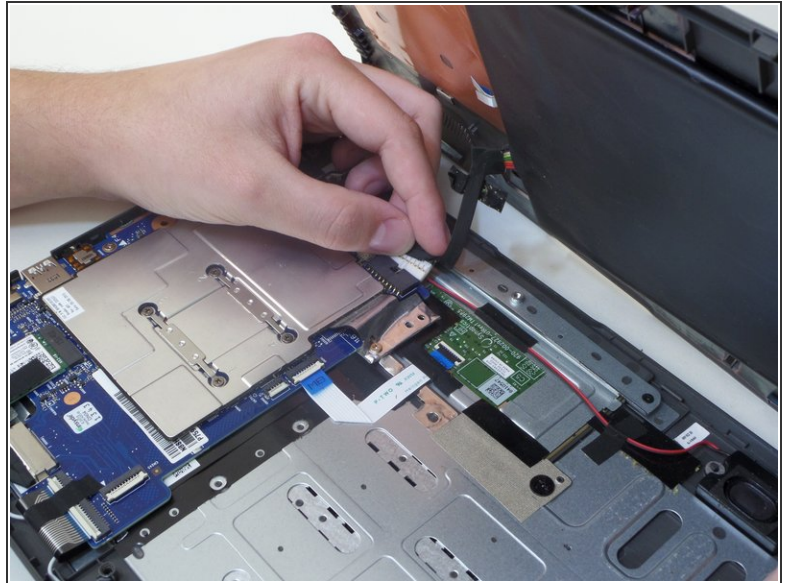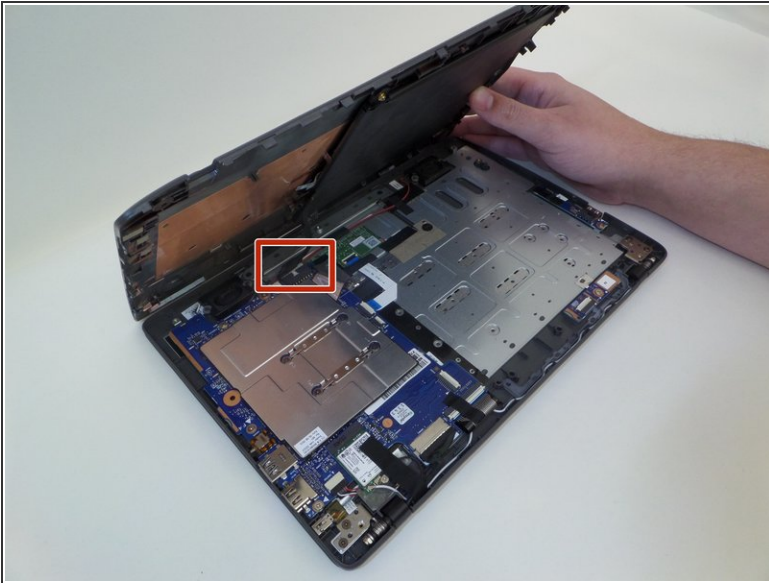



- Unplug the cable that connects the battery to the motherboard.
- Detach the back panel, which still includes the battery.

Step 6 — Battery



- Flip the back panel so the battery faces down.
- Remove the rubber foot with tweezers.

Step 7

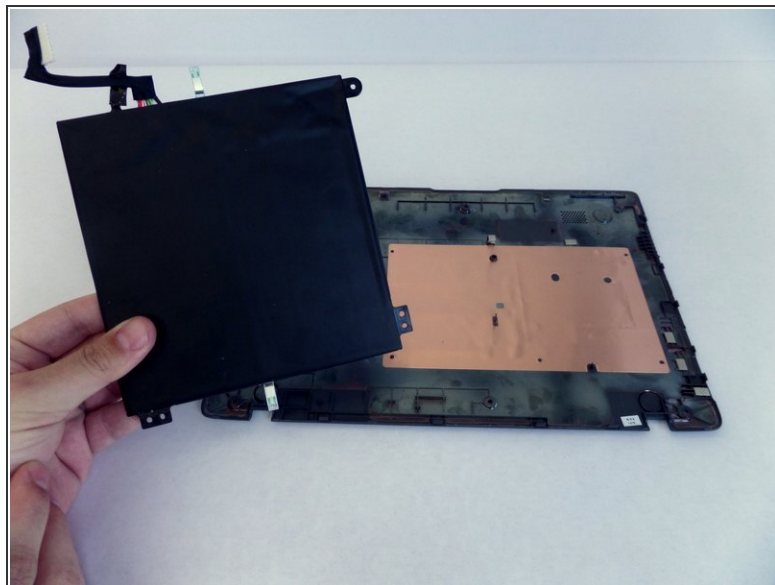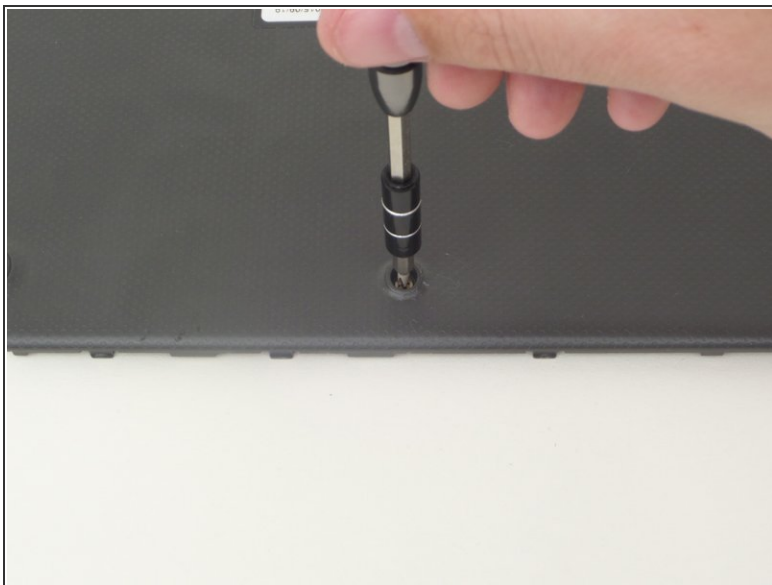

- Remove the 5-mm screw that is located underneath the rubber foot using the PH0 screwdriver.
- Lift the battery and detach it from the back panel.

To reassemble your device, follow these instructions in reverse order.