



Acer Aspire E1-532-2616 Battery Replacement

This guide will help users remove and replace the battery of the Acer Aspire E1-532-2616.

Written By: John Alberts



INTRODUCTION

This guide will help users remove and replace the battery of the Acer Aspire E1-532-2616.



TOOLS:

- [Spudger](#) (1)



PARTS:

- [Acer AL12A32 Replacement Battery](#) (1)

Step 1 — Battery



- i Before you begin, be sure to turn off your laptop and unplug it from the outlet.
- Insert a small, skinny tool, such as a spudger, into the battery release latch.

Step 2



- Slide the latch into the unlock position and pull the battery away from the laptop.

To reassemble your device, follow these instructions in reverse order.

For optimal performance, after completing this guide, [calibrate](#) your newly installed battery.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Repair didn't go as planned? Try some [basic troubleshooting](#), or ask our [Answers community](#) for help.