



Dell Venue 11 Pro Battery Replacement

This guide will show you how to remove and replace the battery.

Written By: Tom Nguyen



INTRODUCTION

This guide will explain the intricate process in removing the battery. It is also the first prerequisite guide to all available Dell Venue 11 pro replacement guides.

TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Turn your device over to the backside. On the notch at the bottom portion of the tablet, use your fingers to lift up the back cover.

Step 2



- Below the battery pack, there are two lock mechanisms. Push EACH lock to the LEFT until it makes a click noise. Lift the battery from the bottom up and remove.

To reassemble your device, follow these instructions in reverse order.