


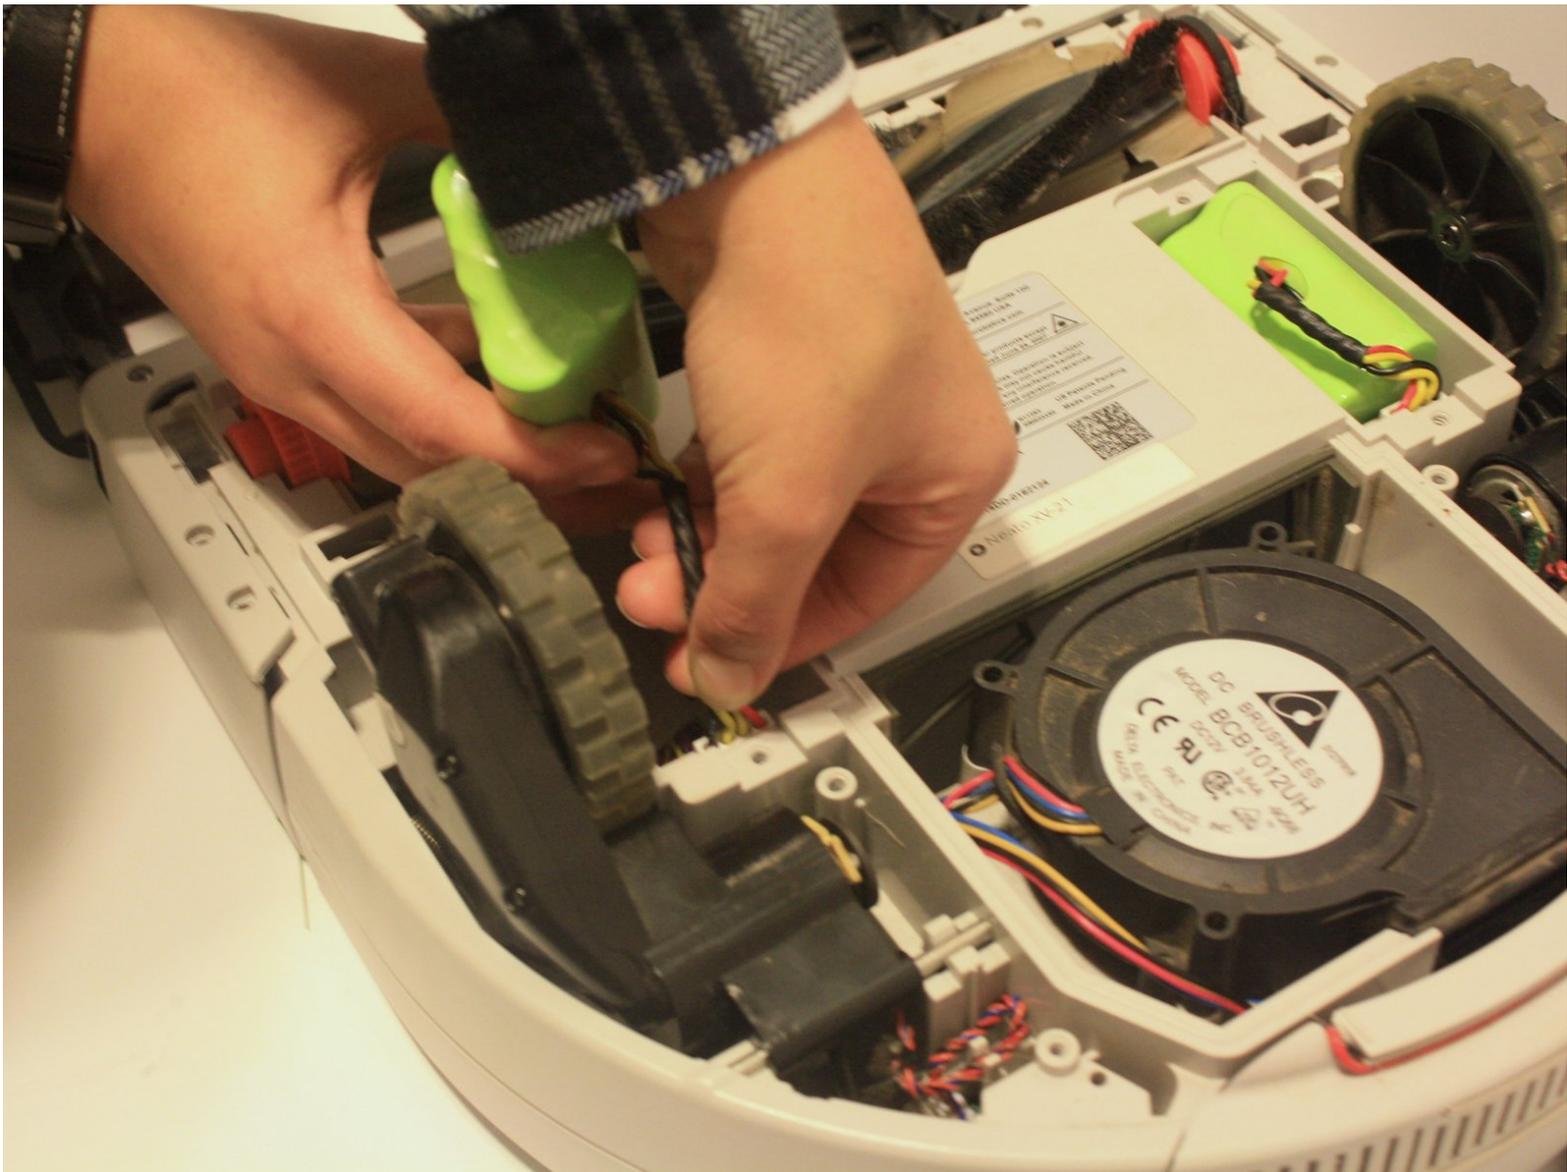

Neato XV-21 Battery Replacement/Removal

Use this guide to replace batteries in your Neato XV-21 robot.

Written By: Fernando Aguilar



INTRODUCTION

This guide will show how to replace the dead, dying, or faulty batteries in your Neato XV-21.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)



PARTS:

- [Neato XV Series Replacement Batteries](#) (1)

Step 1 — Back Panels of Neato XV-21

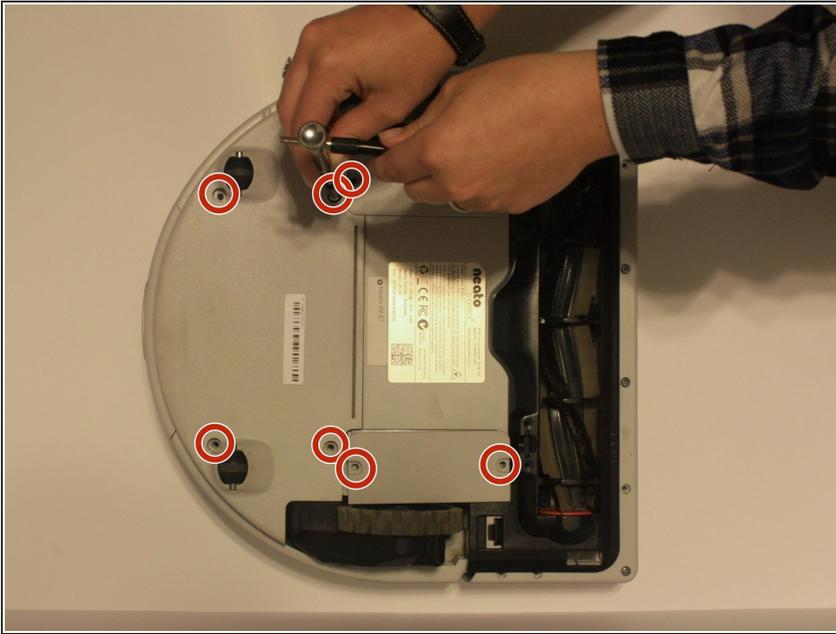


- Flip the Neato on its back so the bottom is exposed
- Unscrew the seven screws.

Step 2




- Lift the panels to reveal the batteries, brush and fan
- ⓘ There should be little to no resistance during this step, do not continue if the pieces do not separate easily

Step 3

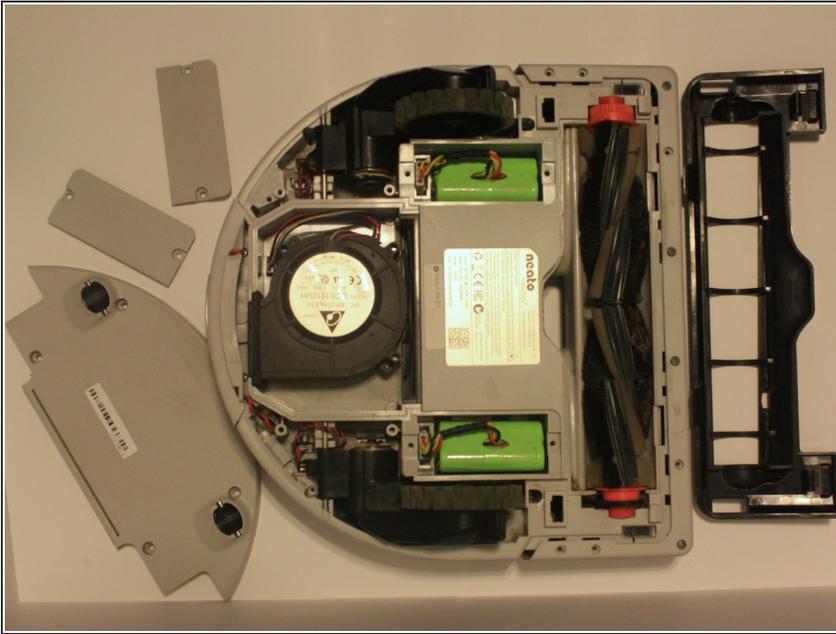

- The Neato's core components are now exposed and ready to be cleaned and/or replaced.

Step 4 — Battery

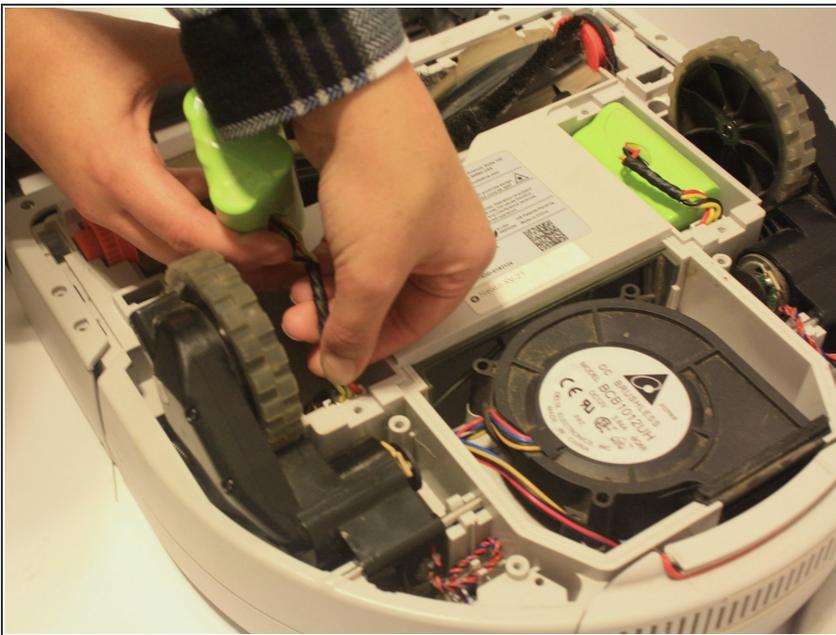

- Pinch and pull the white connector to disconnect the battery from the device
- ⚠ Failure to complete this step could cause electric shock or later complications
- Lift and remove the battery from the cavity
- ⓘ If replacing the battery, make sure to use proper disposal methods.

To reassemble your device, follow these instructions in reverse order.