



# SiriusXM Onyx Casing Replacement

How to replace the front casing of the SiriusXM Onyx.

Written By: Christina Tao



---

## INTRODUCTION


The casing of the device can sometimes crack. This guide will show you how to take apart the device and replace the casing.



### TOOLS:


- [iFixit Opening Tools](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Casing

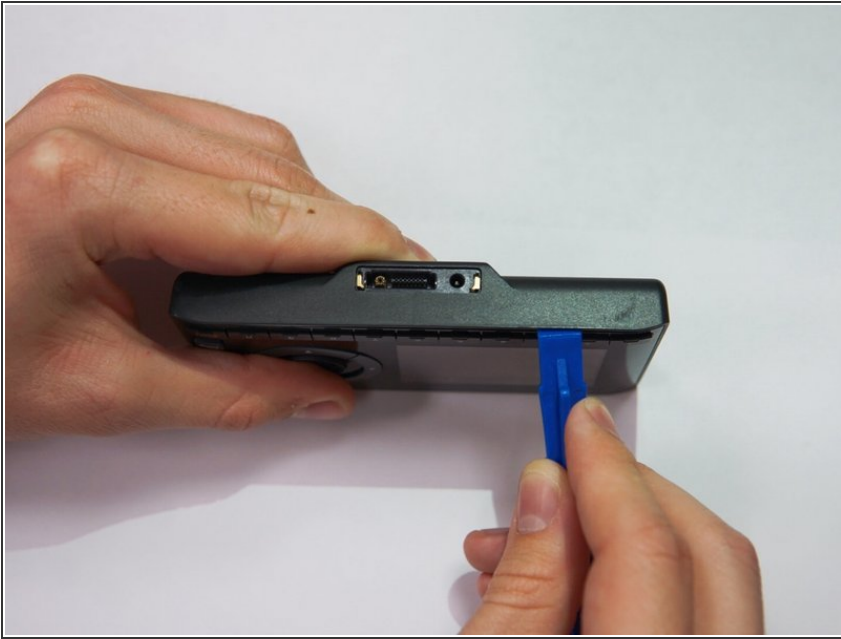



- Take the iFixit opening tool and place it between the back casing and the device as shown.

## Step 2

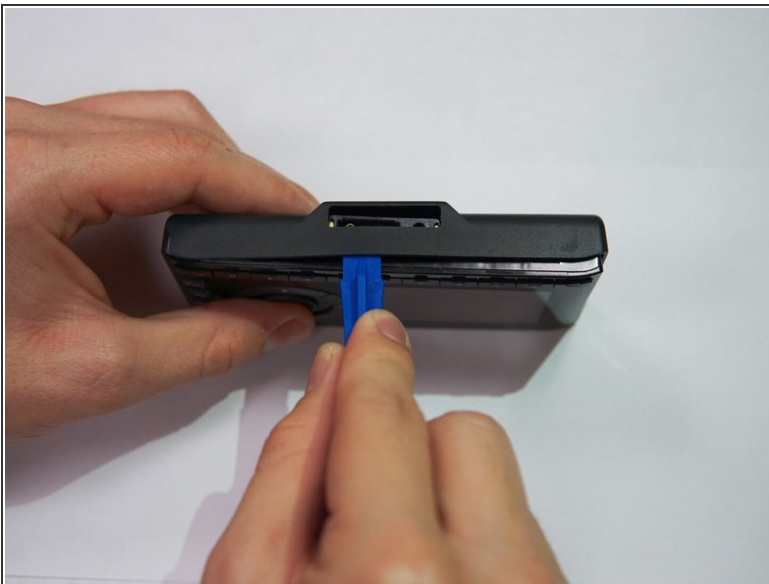




- Apply pressure to the iFixit opening tool, pushing down until the the plastic casing pops off.

### Step 3

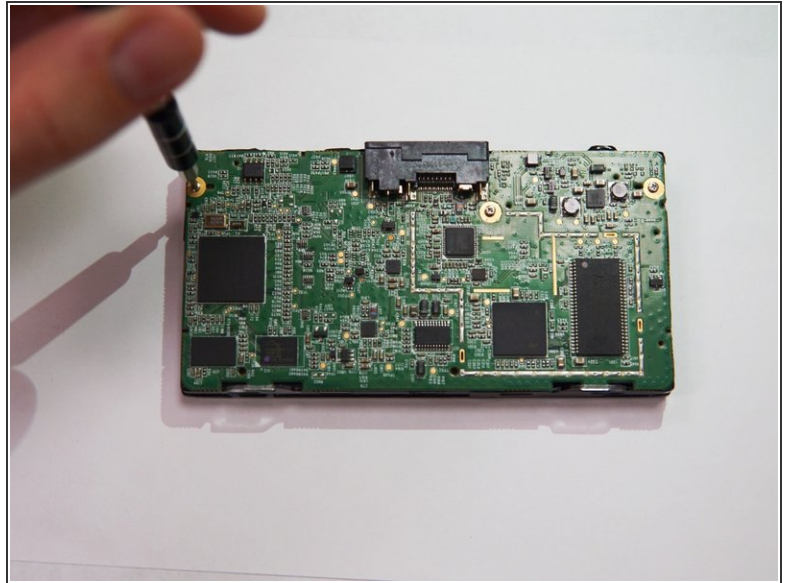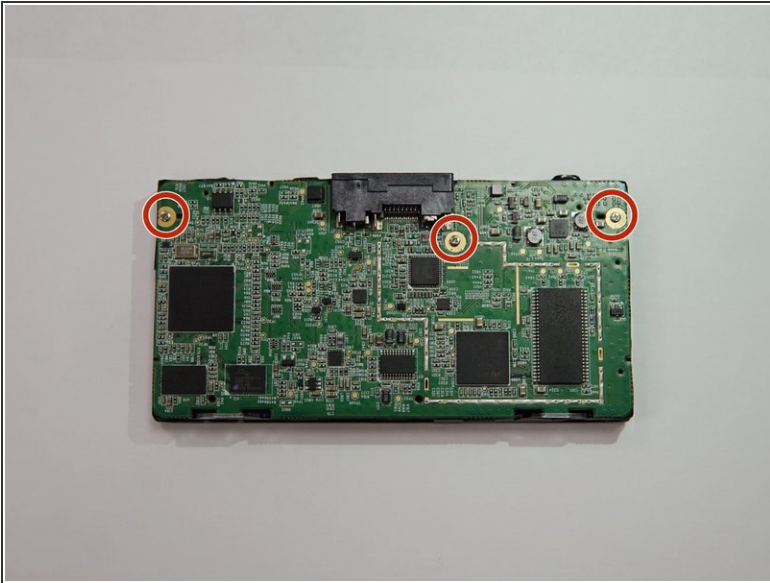

- Use the Phillips PH00 screwdriver to remove the three marked screws.



### Step 4

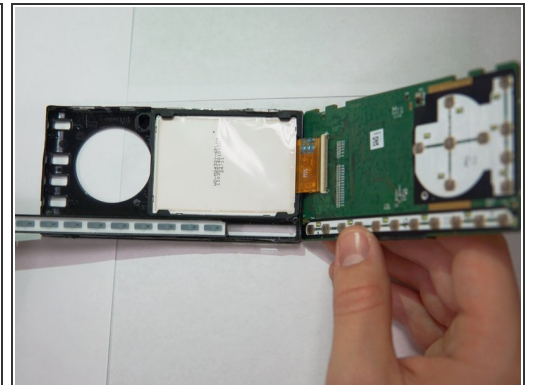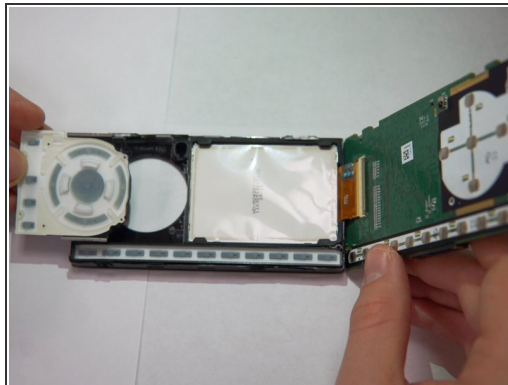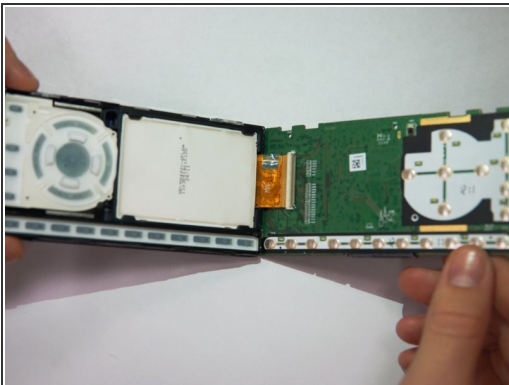

- Remove the buttons from the casing.



## Step 5

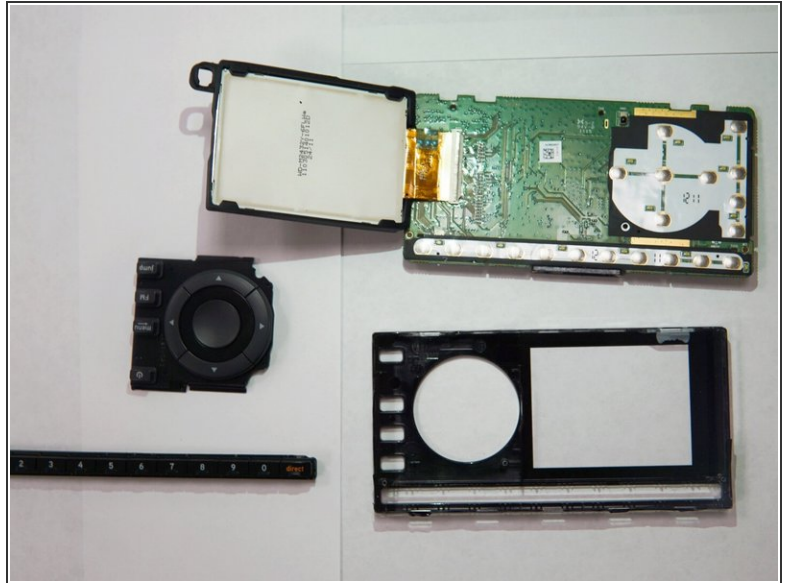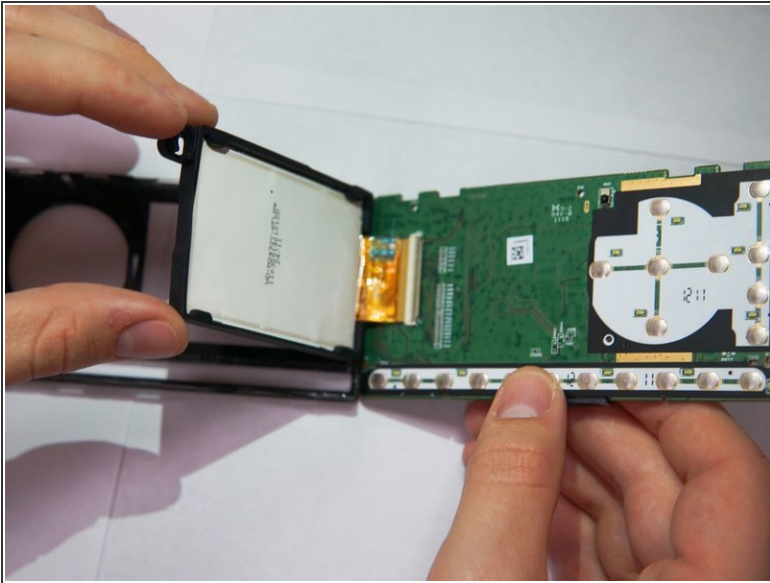

- Remove the motherboard, and the casing should be free.

To reassemble your device, follow these instructions in reverse order.