


Acer Aspire TimelineX 4830T-6682 Battery Replacement

Written By: Rachel Wagner



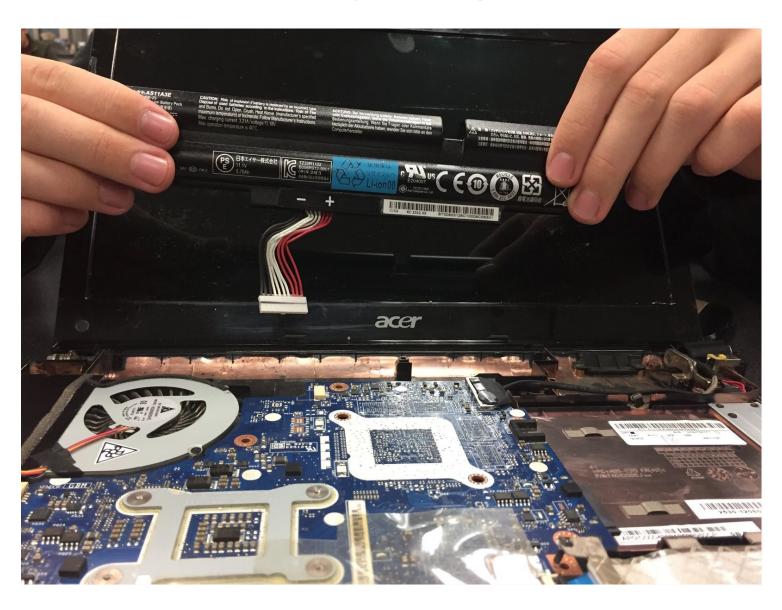

Phillips #0 Screwdriver (1) Tweezers (1) iFixit Opening Tool (1) Spudger (1)

Step 1 — Lower Back Panel







- Remove the single screw with a Phillips #0 screwdriver.
- Use a plastic opening tool on the upper part of the panel to remove it and access the RAM.
- (i) The other way to remove the panel is by sliding it away from the laptop. The difficulty of sliding it depends on the condition of your laptop.

Step 2 — RAM







- After the panel has been removed, locate the RAM. It should be on the lower right.
- There are pins around the RAM that need to be pulled back. After the pins are removed, pull the RAM chip towards you to remove it.

Step 3 — Keyboard



 Remove the eleven screws that hold that back panel to the laptop using a J0 Phillips screwdriver bit.

Step 4








- Place the laptop in the upright position, the lower front touchpad panel should be easily detatched at this point.
- Remove the lower front touchpad panel by using an angled <u>tweezers</u> to disconnect the only wired tape connected to the motherboard.

Step 5




 Next, disconnect the 4 wired tapes of the keyboard from the motherboard just like we did with the lower front touchpad panel.

Step 6

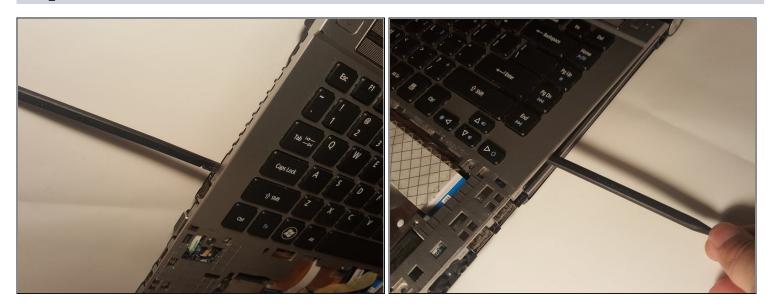


• Finally, using an opening tool, gently pry along the edge of the keyboard to separate it from the laptop.

Step 7 — Battery

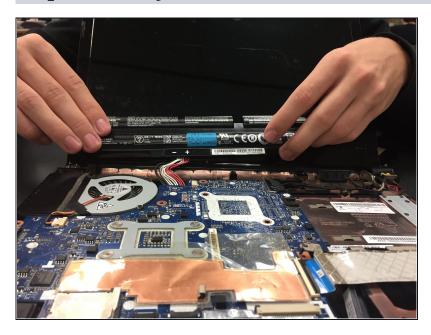

- The battery will be on the side closest to the screen.
- Gently lift it out. It will still be attached by white, red, and black wires.

Step 8

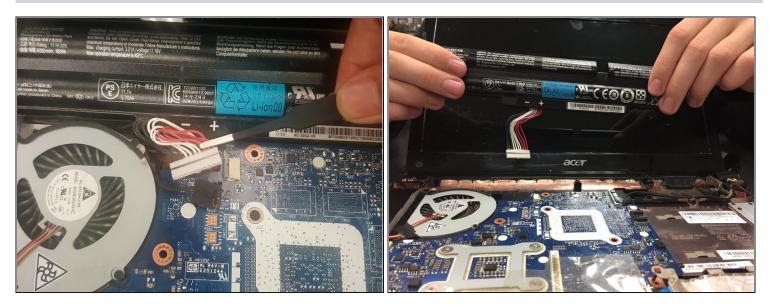

- Pull the white plug, it should easily detach.
- Remove the battery from the device.

To reassemble your device, follow these instructions in reverse order. When reattaching the back panel, make sure to pry out the pwr on/off slide switch near the center. The back panel switches it off when closing, and there is no other way to avoid it.