




Lenovo N23 Yoga Keyboard Replacement

Lenovo N23 Yoga Keyboard Replacement Guide

Written By: Drew Canada

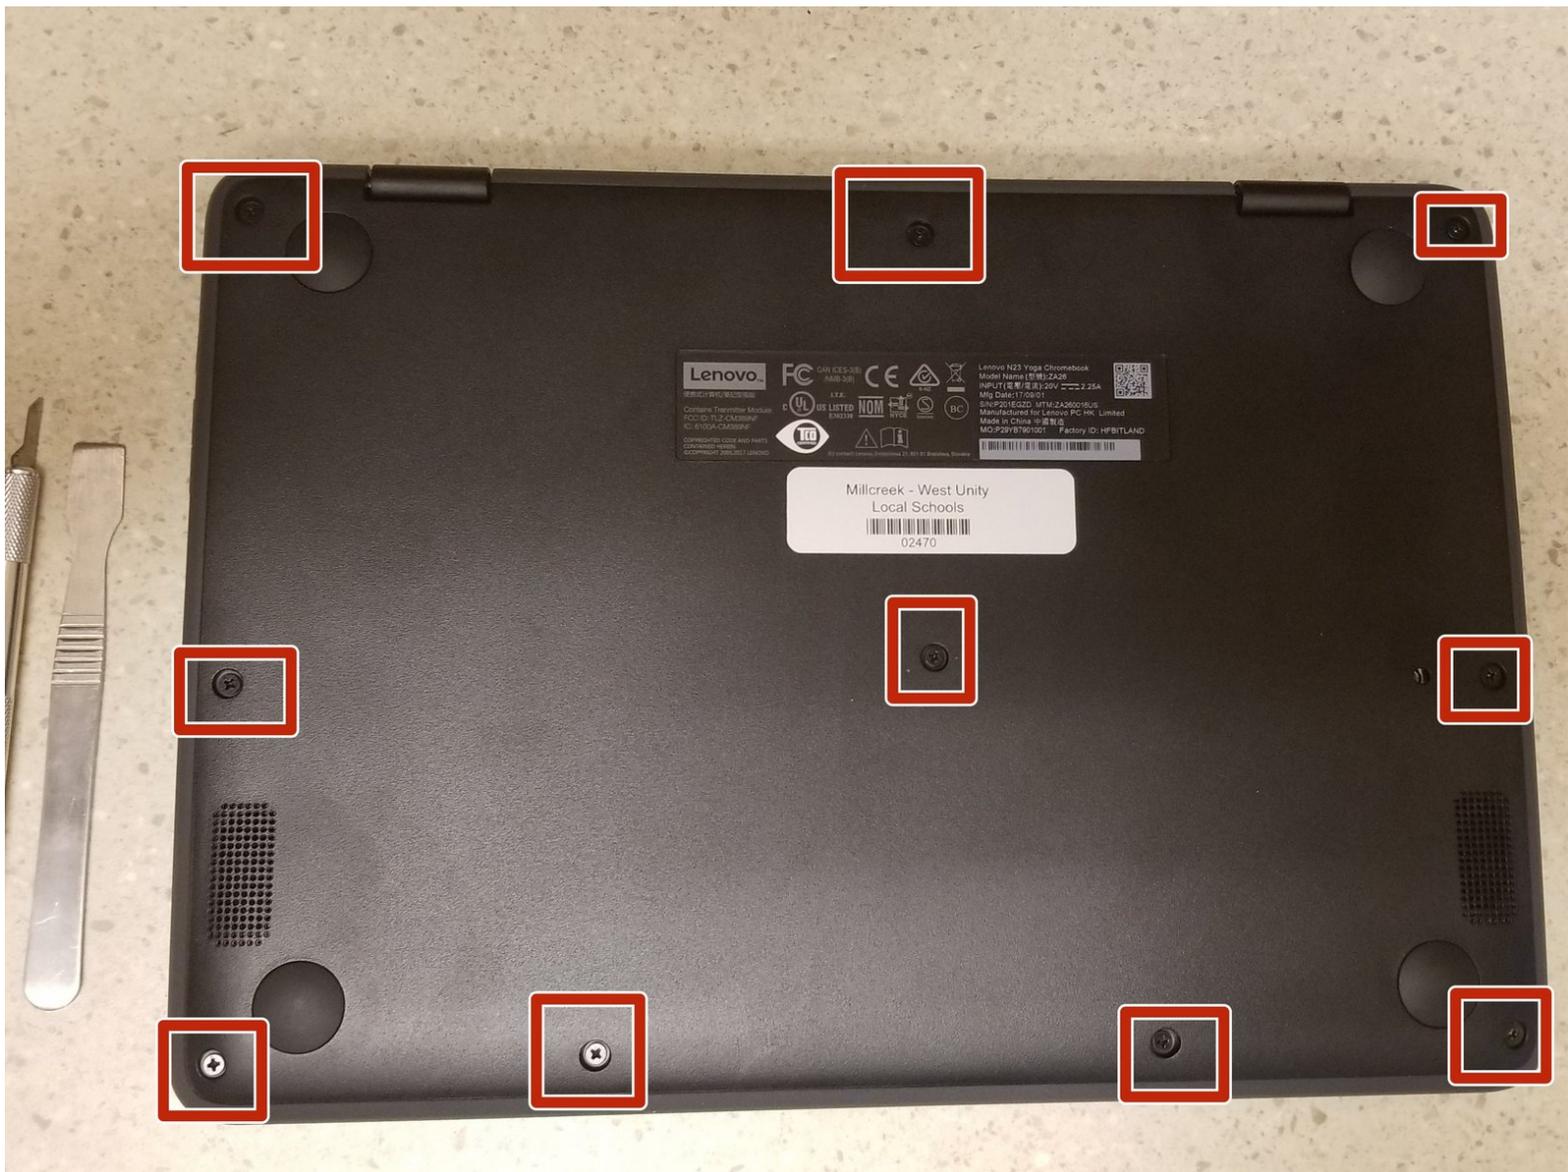

INTRODUCTION

This will show you how to remove the keyboard on the Lenovo N23 Yoga Chromebook



TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)



PARTS:


- [keyboard panel](#) (1)

Step 1 — Keyboard




- Flip the computer over.
- Remove the 9 screws surrounding the edges of the computer.
- Remove the single screw near the center of the computer.

Step 2

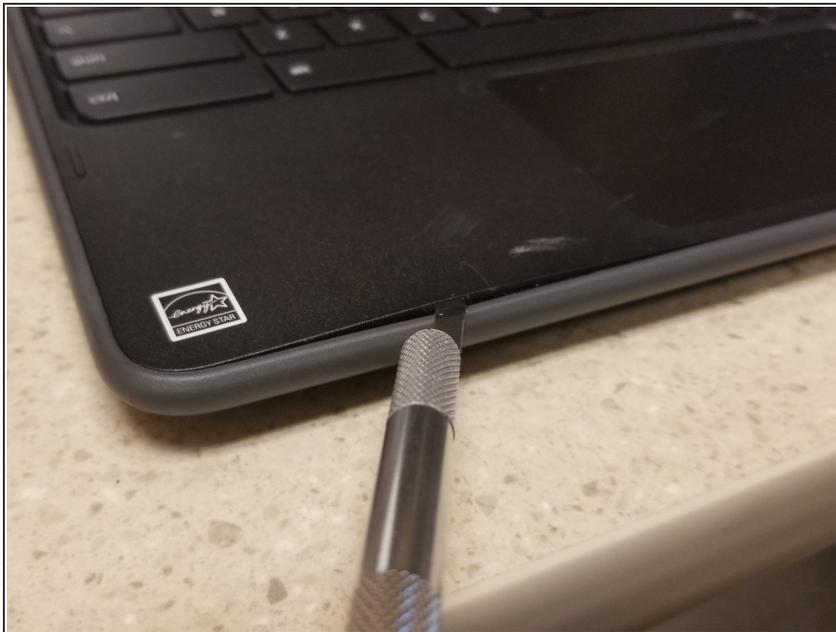


- Use a smaller plastic panel popping tool to begin (if you have one). You may increase to a larger size as you go (if you have one)
- Slowly work your way around the edges of the computer.
- Closer to the screen the clips will be sturdier, use a little more force but still be cautious.

Step 3

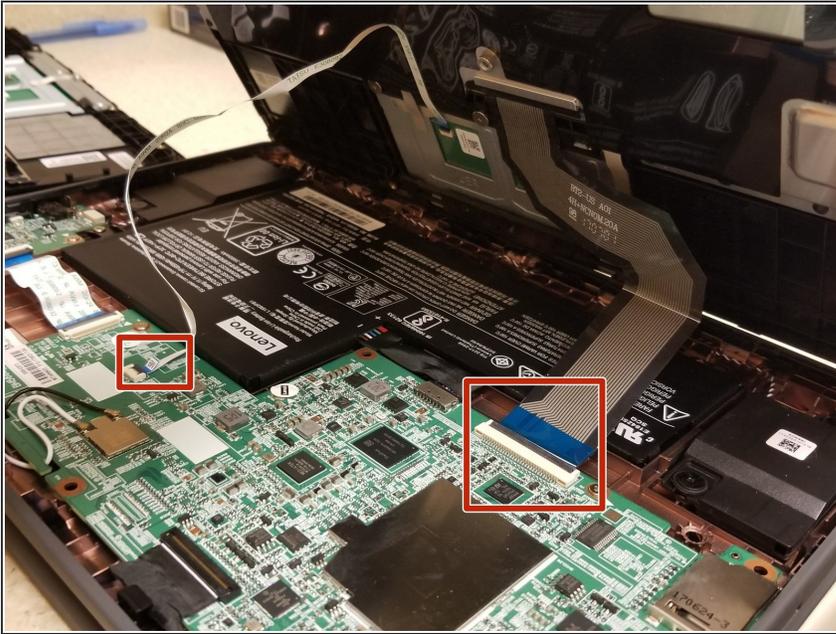

- On the main board, lift up on the black tabs of the connectors that are connected to the ribbons.
- Remove the ribbon connectors gently from the main board.

Step 4

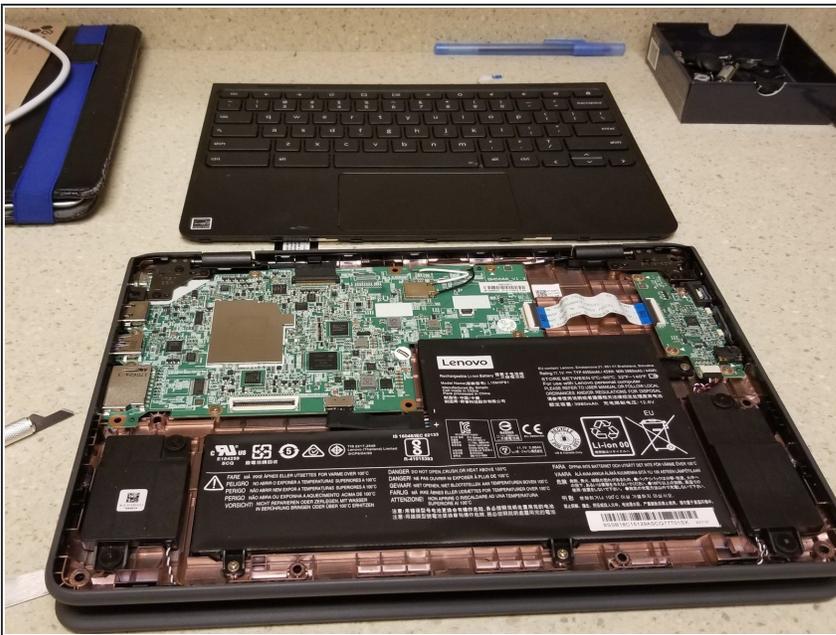

- The keyboard should be free and disconnected from the rest of the computer.

To reassemble your device, follow these instructions in reverse order.