




Lenovo IdeaPad Flex 4-1470 Touchpad Replacement

How to replace the touchpad in your Lenovo IdeaPad Flex 4-1470.

Written By: Elijah Ellis

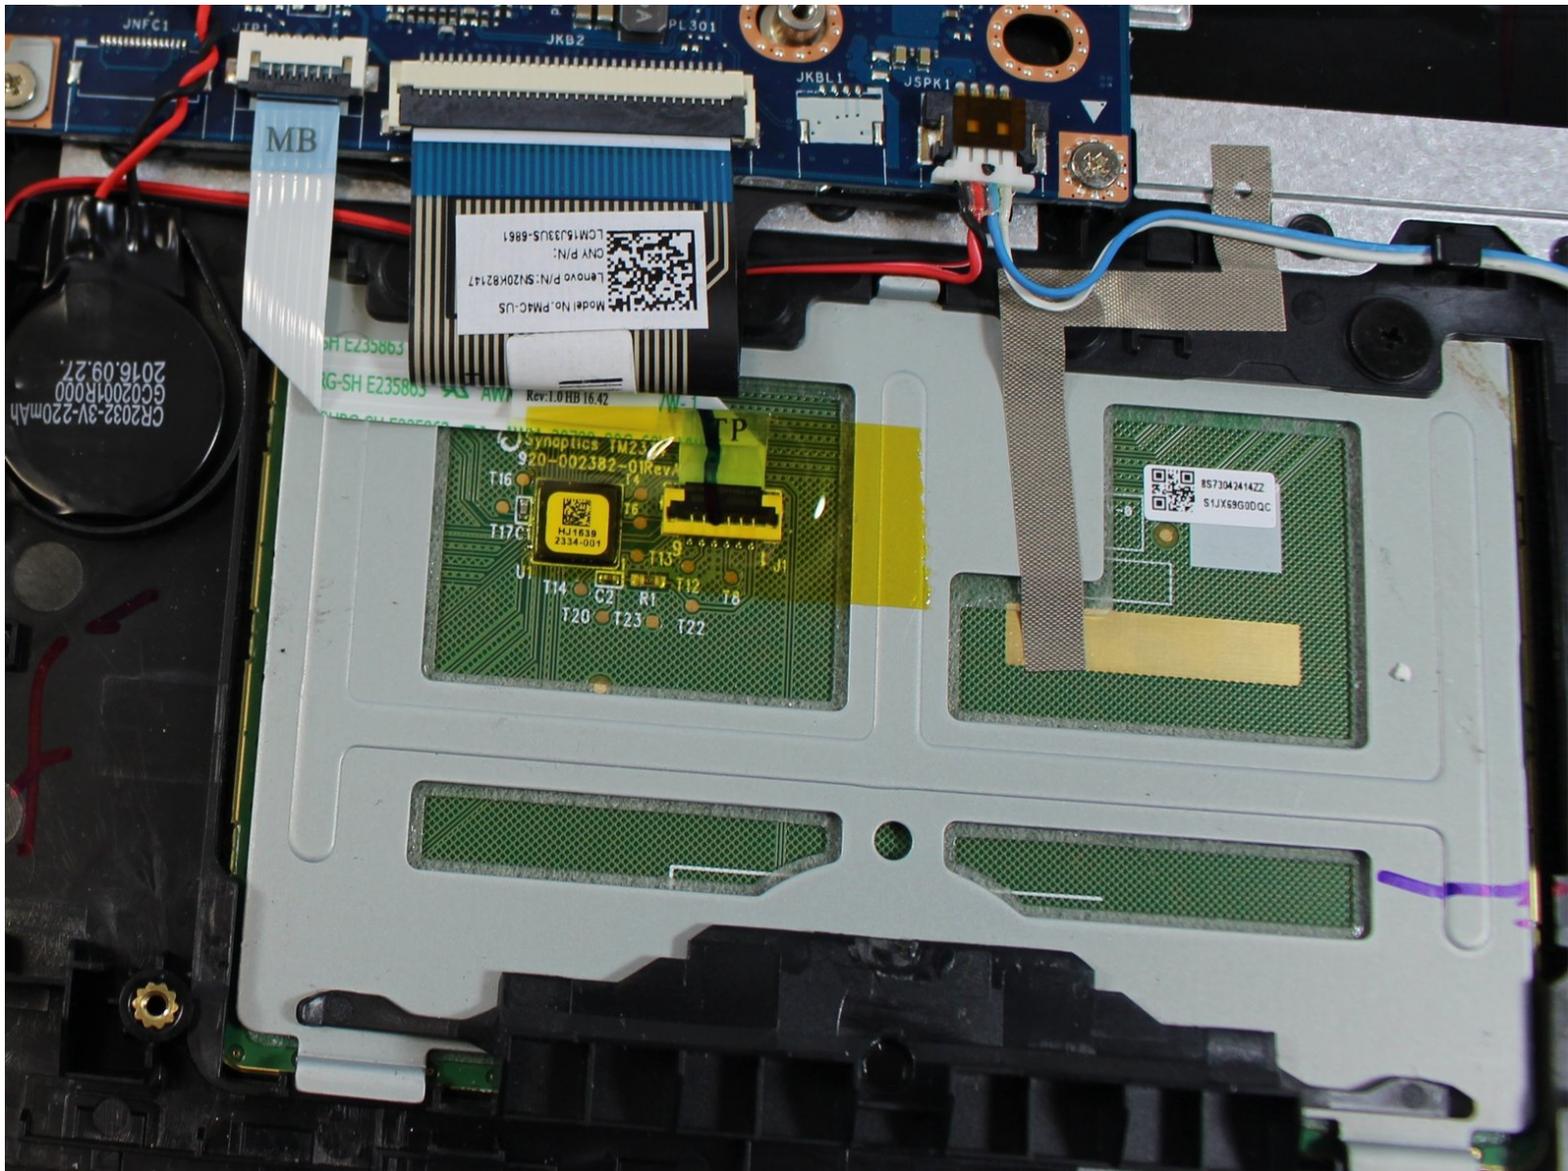


INTRODUCTION

The touch pad is the laptop's on-board mouse analogue, and as such is important for the laptop's operation. To remove and replace it you will need the proper, specific replacement part.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-



Step 1 — Lower Case

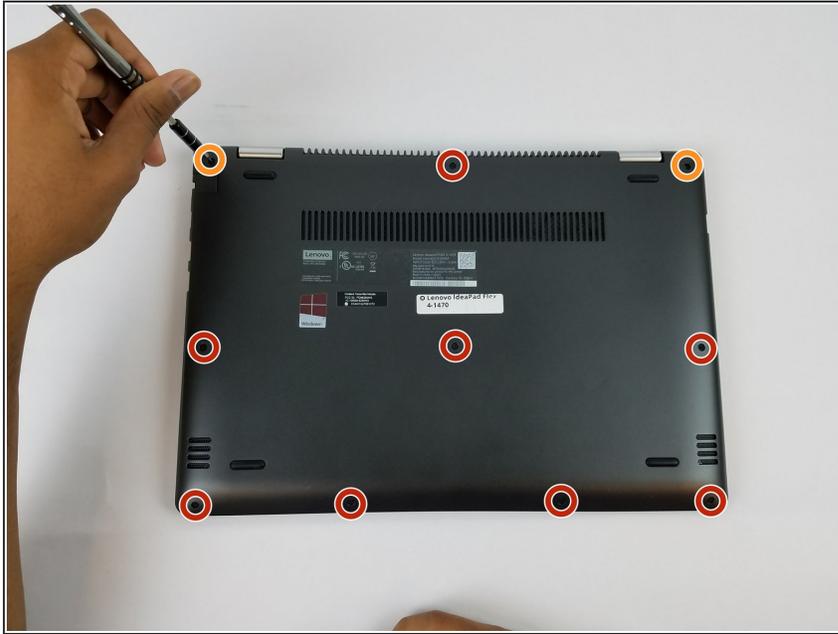

 Ensure your computer is completely OFF before starting this guide.


-  Remove the eight 6 mm screws using a Phillips #0 screwdriver.
-  Remove the two 11 mm screws using a Phillips #0 screwdriver.

Step 2

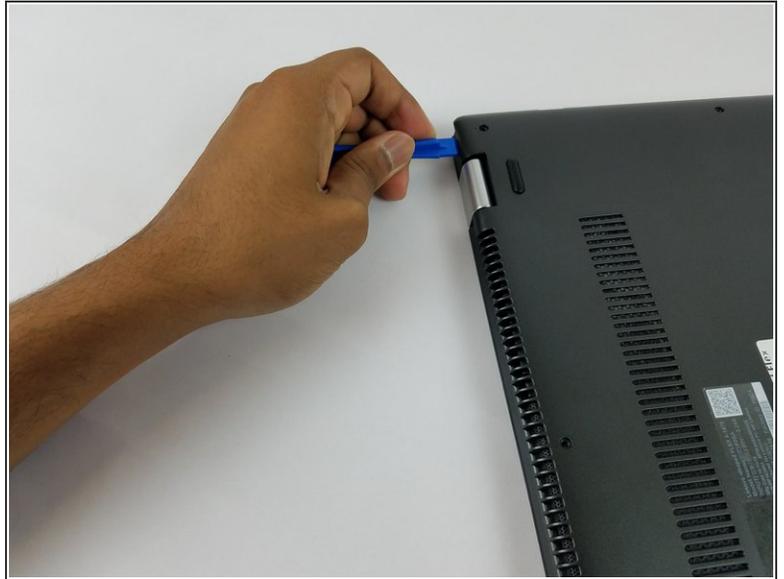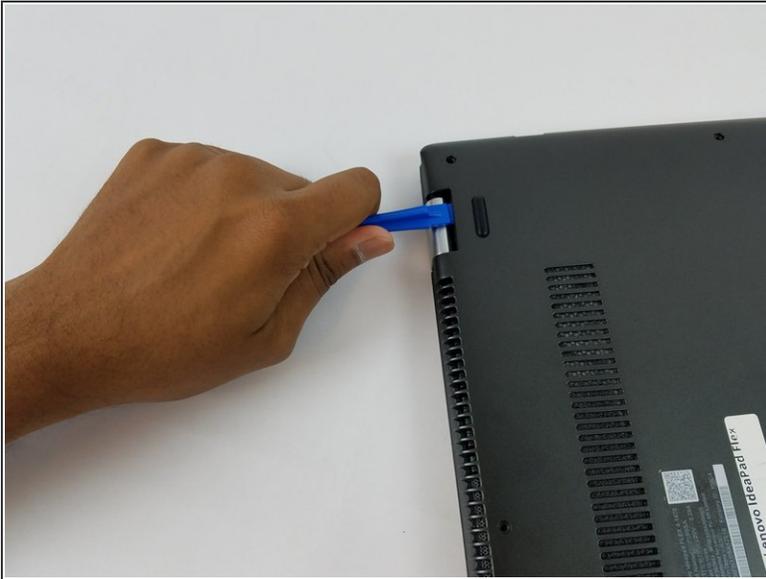

- Pry the back cover off by inserting the plastic opening tool at the hinges and wedging it between the Back cover and the body.
- Follow along the back edge with the plastic opening tool, lifting the cover off as you go. It is normal to hear snapping/clicking sounds as the back cover is held on by clips.
- Remove the cover.

Step 3 — Battery

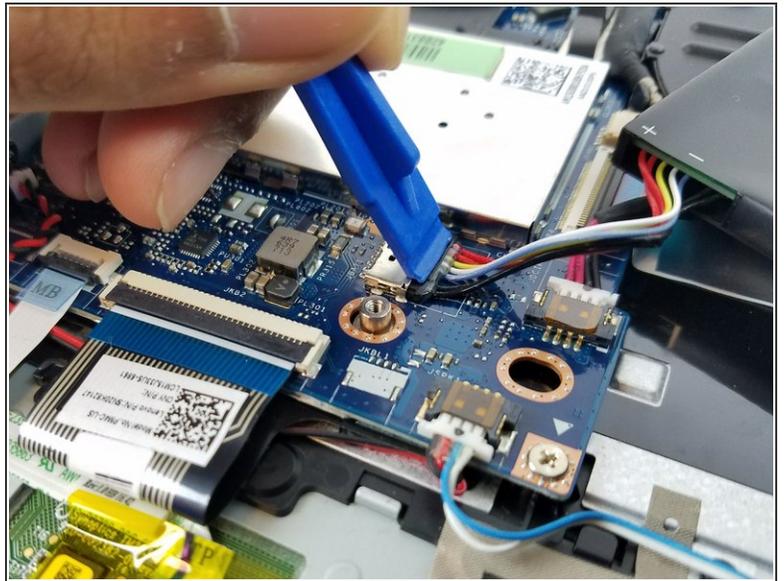

- Disconnect the battery connector by using a plastic pry tool or your fingers to push the cable right towards the battery.
- ⚠ Do not pry or push on the socket itself or you risk damaging the motherboard.

Step 4




- Remove the three 4 mm Phillips #0 screws holding the battery in place.

Step 5





- Lift the battery up and out of the laptop.

Step 6 — Touchpad

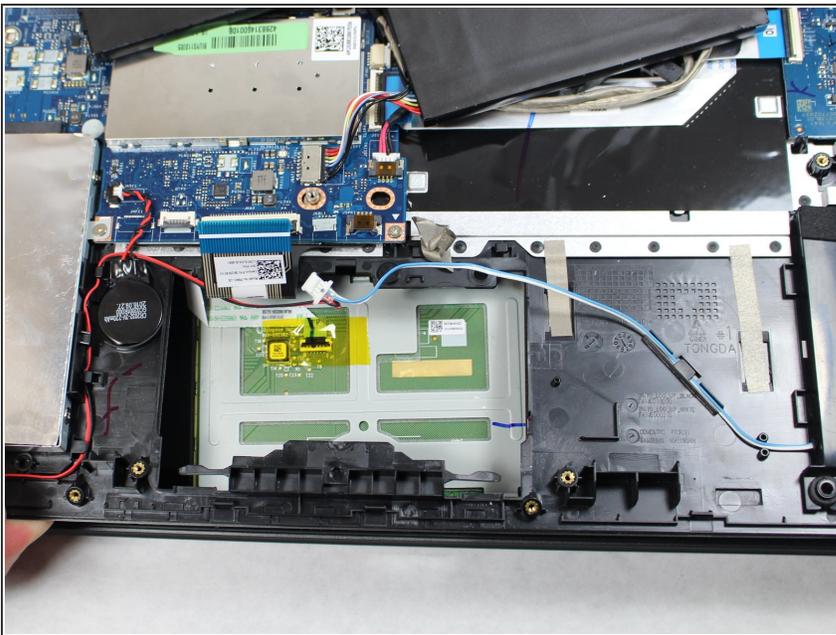


- Locate the touchpad.

Step 7

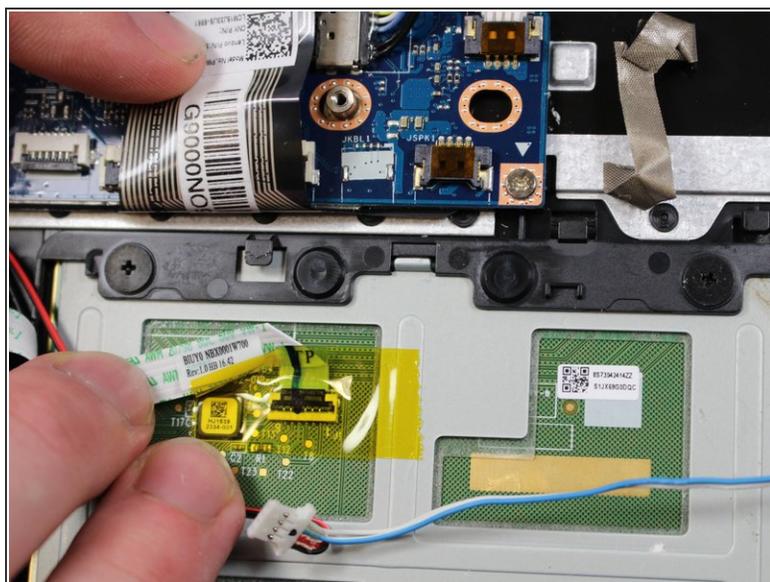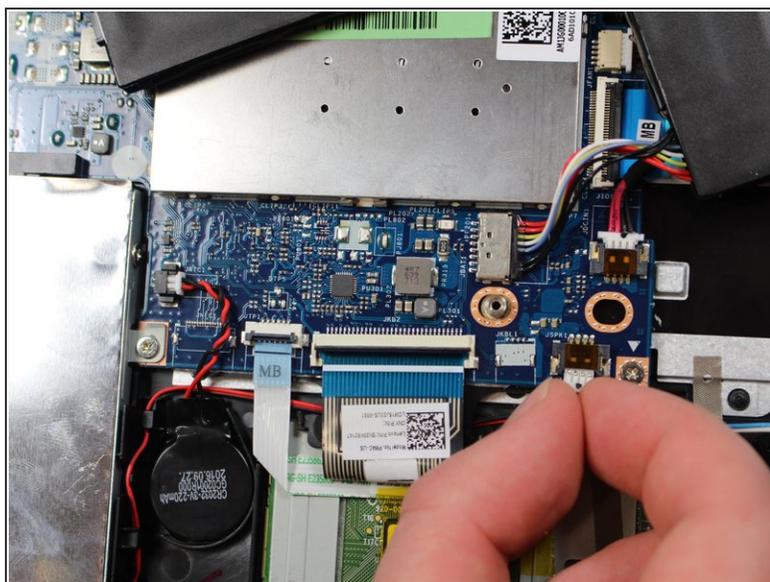

- Remove the three ribbon cables surrounding the touch pad.

Step 8

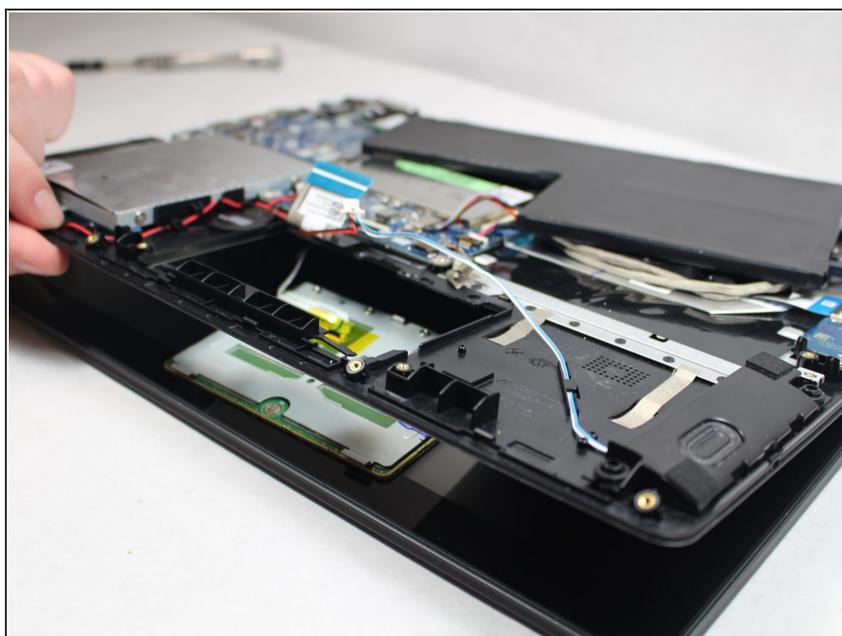

- Lift the base of the laptop from the screen and gently push the touchpad to remove.

To reassemble your device, follow these instructions in reverse order.