




# Lenovo Yoga C930-13IKB Touch Pad Replacement

If you are having trouble with your Lenovo Yoga...

Written By: Matteo

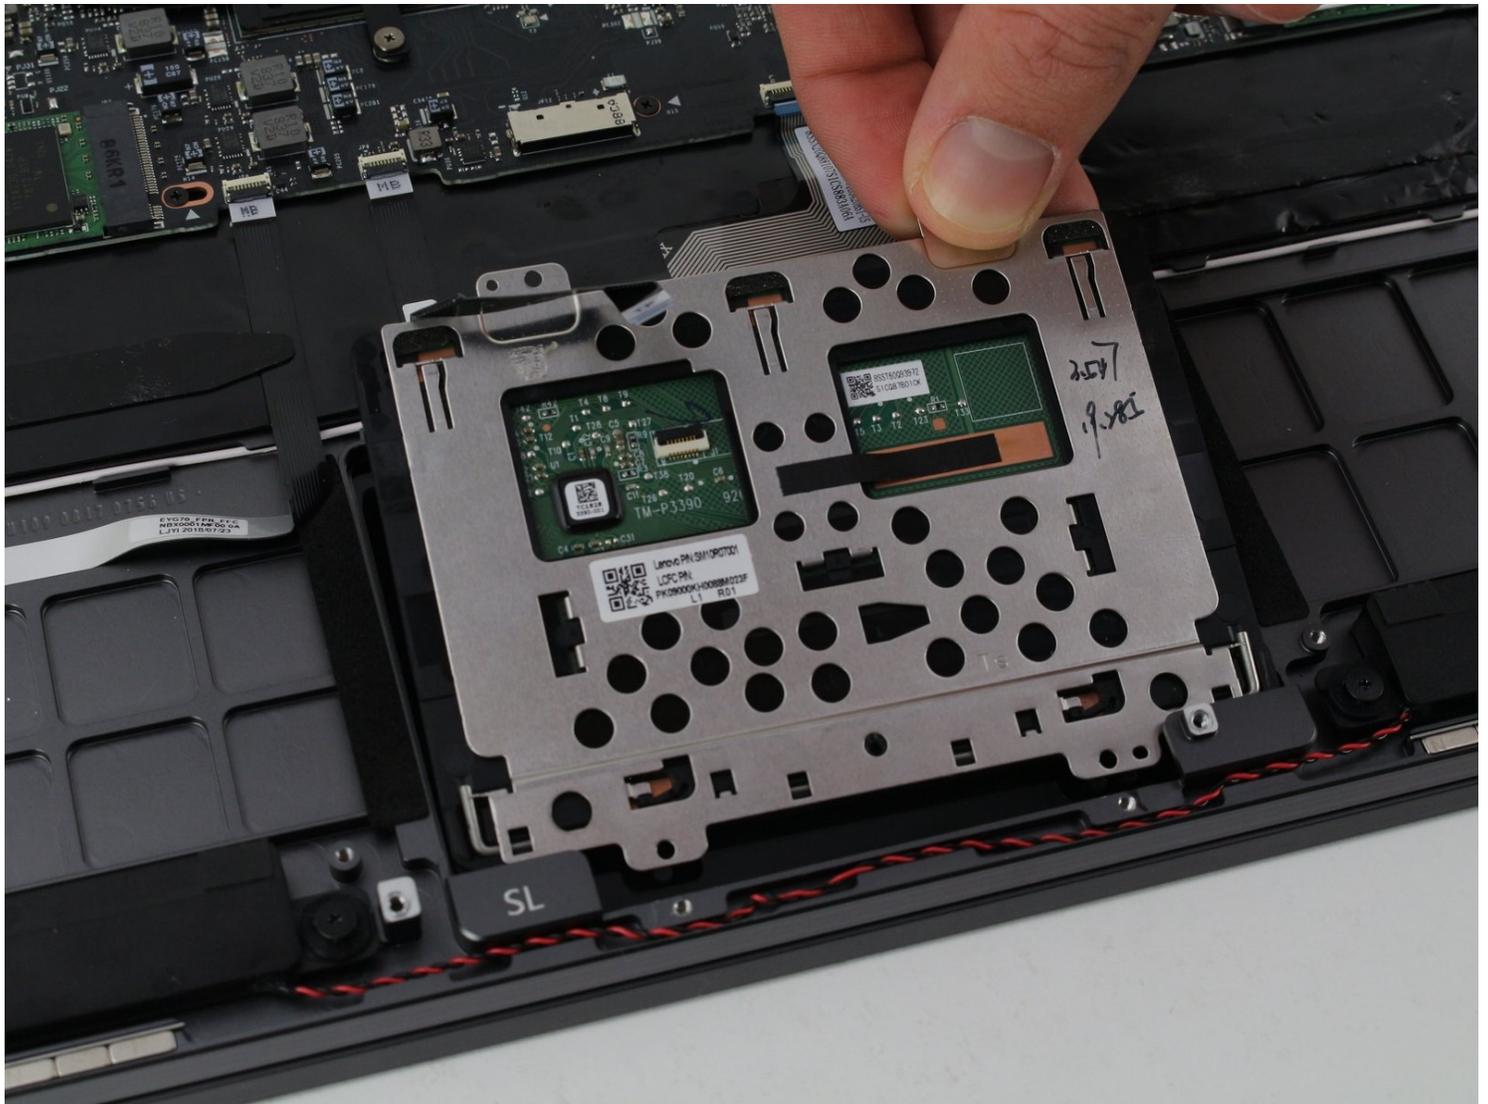

# INTRODUCTION

If you are having trouble with your Lenovo Yoga C930-13IKB touch pad or your touch pad is damaged, this guide will help you replace it. First, check out this [troubleshooting guide](#) to try other ways to fix a faulty touch pad before replacing it.

To access the touch pad, you will need to remove the back cover and the battery, which is outlined below. Then the back of the touch pad will be exposed and you can take it out once all the fasteners have been removed.

## TOOLS:

T5 Torx Screwdriver (1)  
iFixit Opening Tool (1)  
Phillips #00 Screwdriver (1)

## PARTS:

5CB0S72607 - Lenovo Laptop Upper Case (US) (1)

## Step 1 — Back Cover



- Flip the device over so that the underside is facing up.
- Remove the six 3.5 mm T5 Torx screws.

## Step 2



- Pry off the back cover using the plastic opening tool.
- Loosen the back cover in multiple spots using the opening tool, then remove the whole back.
- ⓘ You may have to run the plastic tool along the edges until you find a small gap to separate the back cover from the laptop.

**⚠ Do not use a metal tool when working with your device.**

### Step 3



- Carefully lift the cover off with your hands.

### Step 4 — Battery



- Unplug the battery from the motherboard by pinching the cables with your fingers and tugging out with force.

ⓘ Use the spudger for assistance.



## Step 6




① The battery is still held in place with two stretch-release adhesive strips, [similar to ones found in an iPhone](#).

- Use your fingers to pry up the clear plastic pull-tab for one of the stretch release adhesives.
- Grasp the pull-tab and slowly pull away from the battery at a shallow angle. The adhesive strip will stretch to many times its length and slowly release from underneath the battery.
- Repeat the procedure for the second strip on the opposite side of the battery.

⚠ Be careful not to bend the battery. Breaking the battery is dangerous.


- Remove the battery with your hands.

## Step 7 — Touch Pad

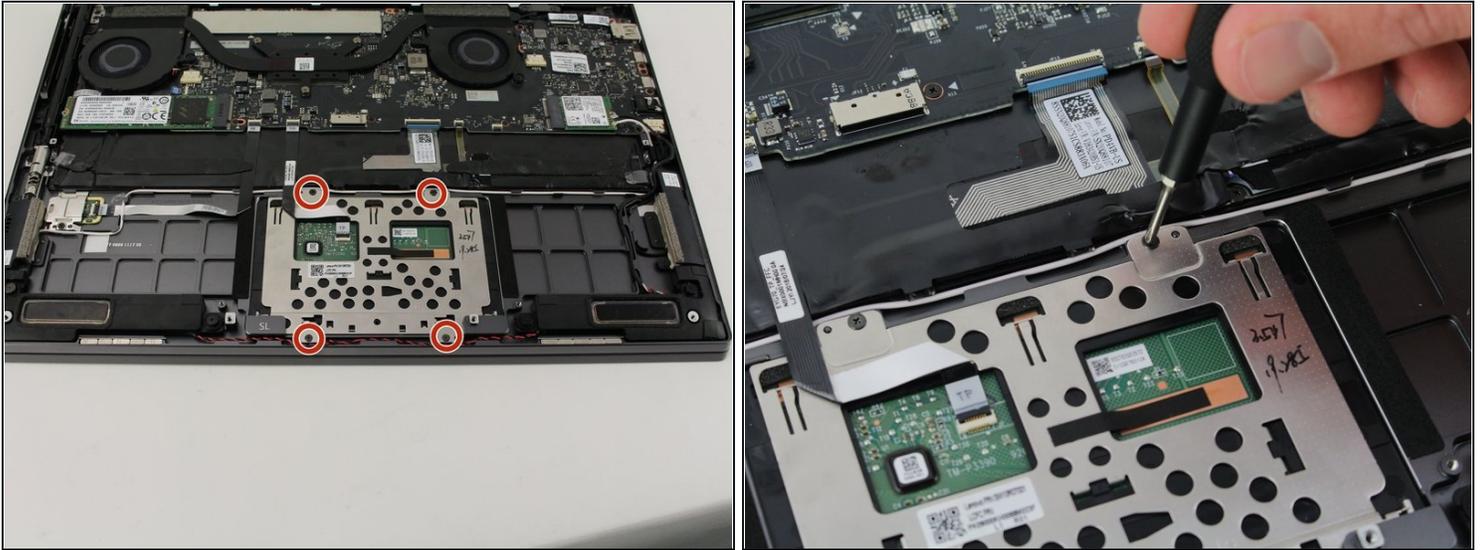



- Unscrew the four 2 mm screws with a Phillips #00 screwdriver.

## Step 8

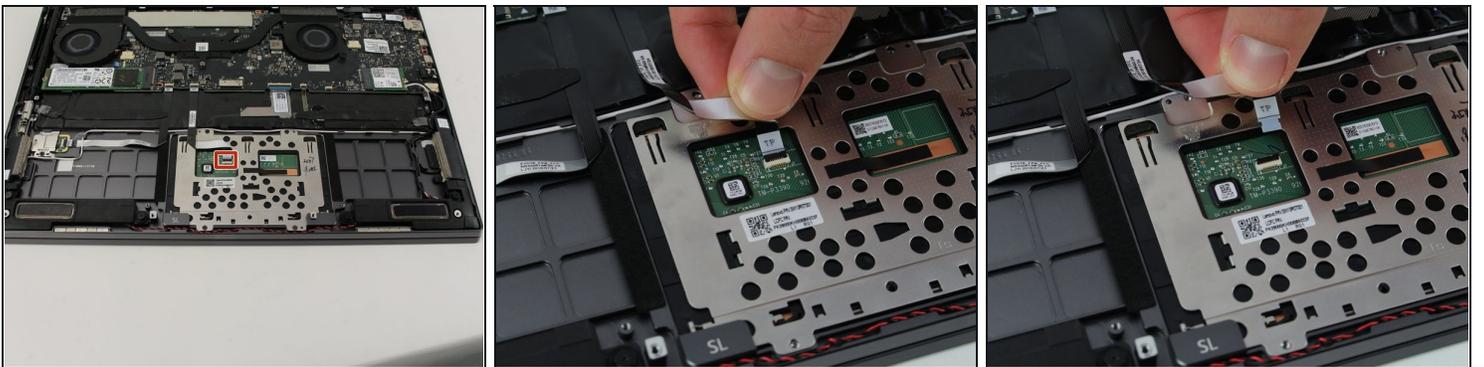

- Carefully pull out the small electrical wire from the back of the touch pad.

## Step 9

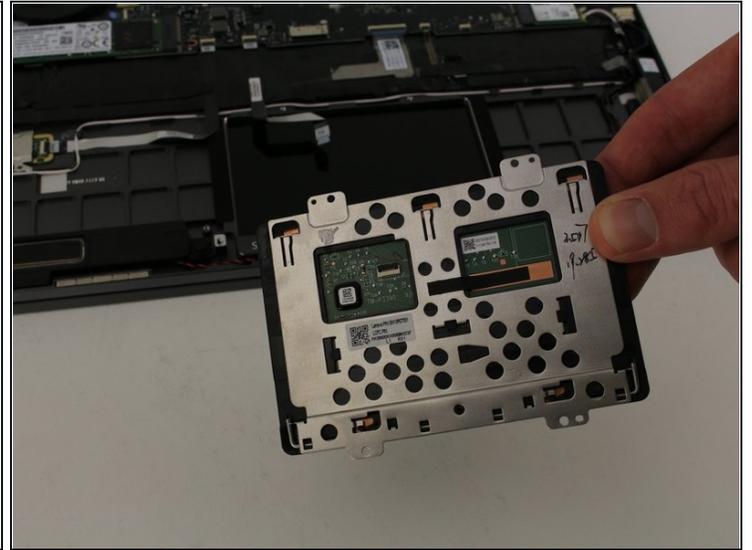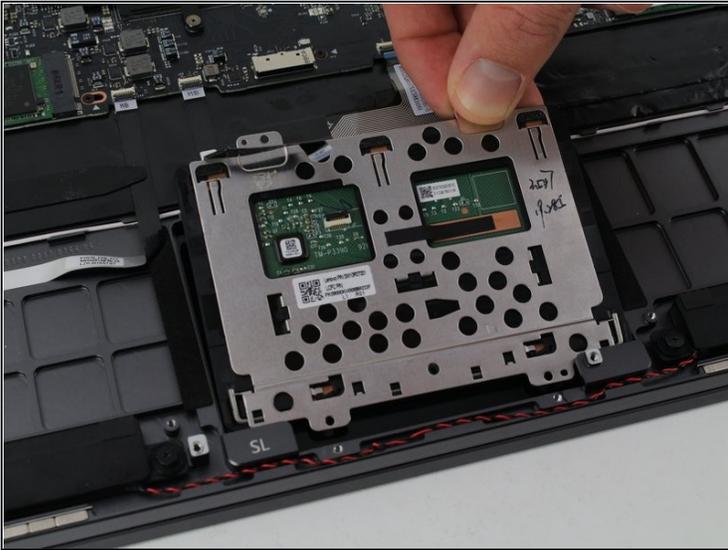

ⓘ The touch pad must be slid out before being lifted out.

- Lift up the touch pad.
- Slide the touch pad out of the laptop.

---

To reassemble your device, follow these instructions in reverse order.