


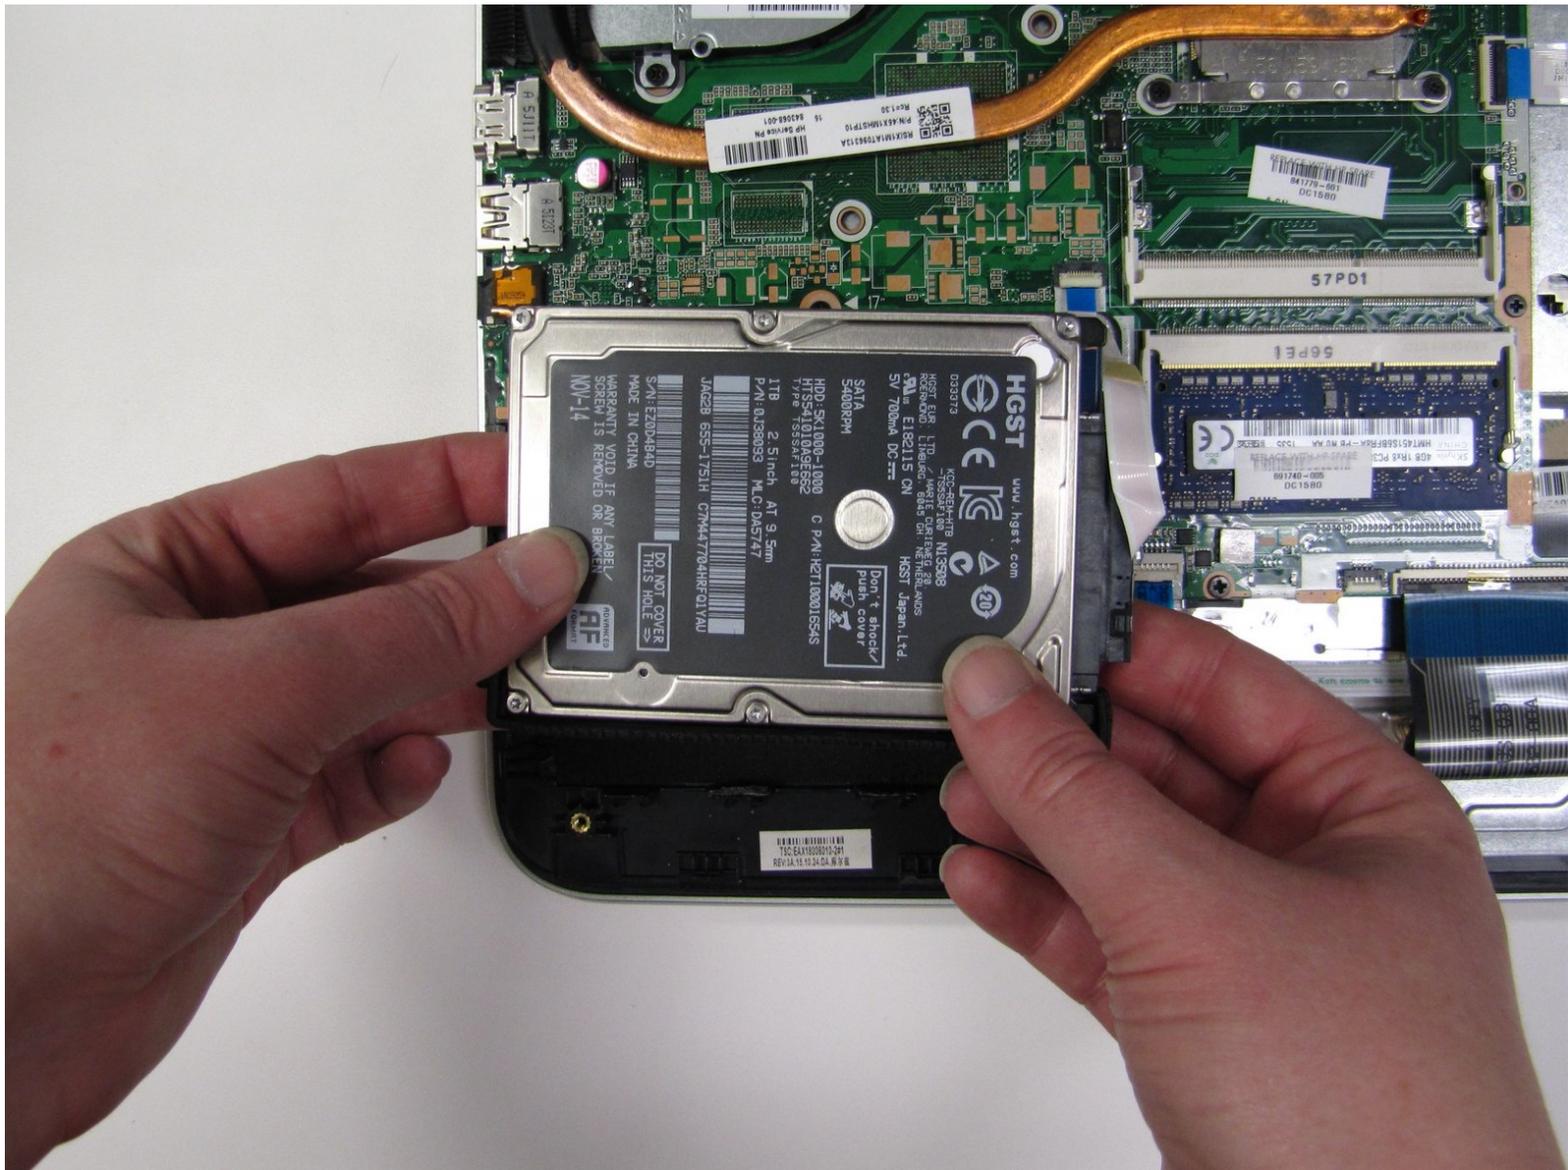

# HP Pavilion 17-g119dx Hard Drive Replacement

This repair guide will show you how to replace the hard drive in your HP Pavilion 17-g119dx laptop.

Written By: Kathryn



This document was generated on 2020-11-28 06:19:34 AM (MST).

## INTRODUCTION

The hard drive can cause the device to run slow. In this guide, you will learn how to replace your HP Pavilion 17-g119dx laptop's hard drive. To perform the replacement, you will need a Phillips head screwdriver and a plastic opening tool to pop open the keyboard.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)

### PARTS:

- [1 TB SSD / Upgrade Bundle](#) (1)
- [250 GB SSD / Upgrade Bundle](#) (1)
- [500 GB SSD / Upgrade Bundle](#) (1)
- [2 TB SSD](#) (1)

## Step 1 — Battery




- Close your laptop and turn it over so that the bottom is facing up.

## Step 2



- In the upper left hand corner, slide the bar with the lock icon to the right. This will unlock the battery.

### Step 3

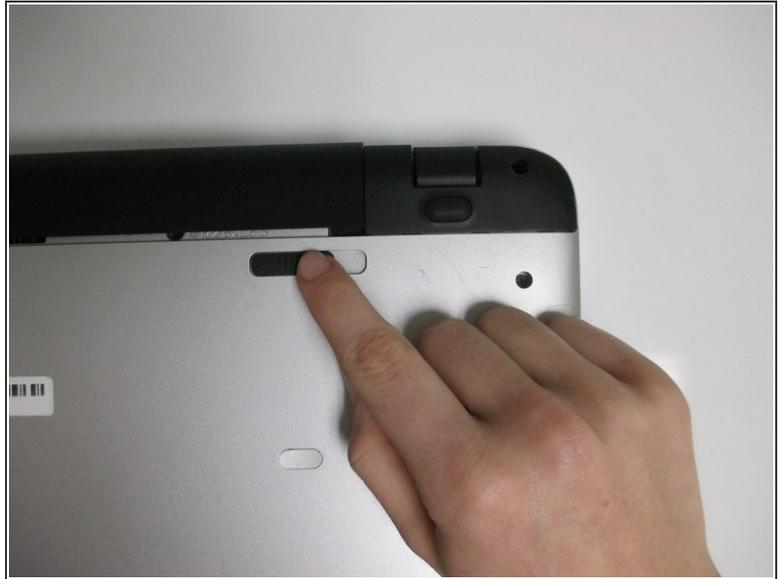


- Slide the bar with the battery icon, on the right of your laptop, to the left to release the battery.

### Step 4



- Grab the battery and remove it from the laptop.

## Step 5 — Hard Drive

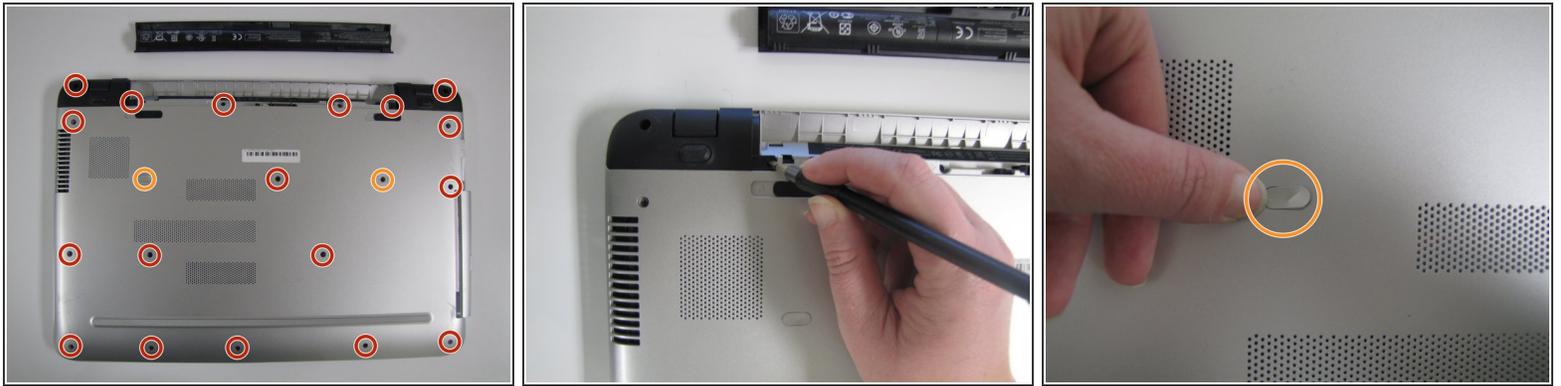


- Remove the twenty 6.5mm screws using the Phillips #00 screwdriver.
- Two of these 6.5mm screws are covered by a silver sticker. Remove the sticker by gently scraping your finger nail under the sticker and then remove the screws.

## Step 6



- Remove the black corner covers on either side of the battery to reveal four additional 6.5mm Phillips #00 screws.

## Step 7

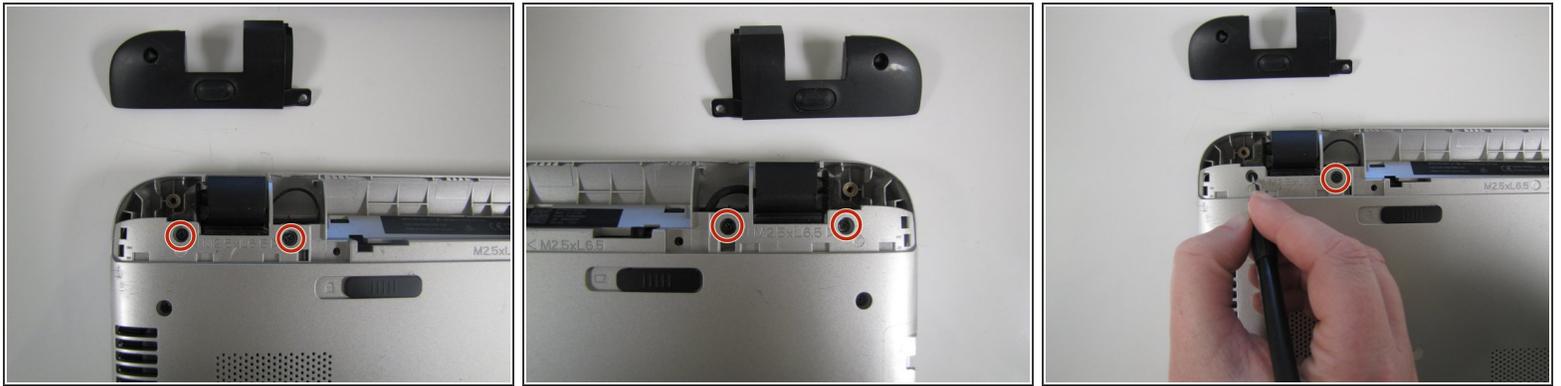

- Remove the four 6.5mm Phillips #00 screws that were underneath the black corner covers.

## Step 8



- On the right-hand corner of the laptop, remove the CD-ROM by pressing the small button on the side. Pull it out of the laptop, and set it to the side.


## Step 9



**⚠** Make sure that all screws and the CD-ROM Drive are removed before trying to complete this step to prevent damaging your laptop. During this step, you will likely hear loud crackling noises. This is normal.

- Flip the computer back over with the screen facing up and open the laptop.
- Use the [Plastic Opening Tool](#) to separate the face plate from the backing.

## Step 10

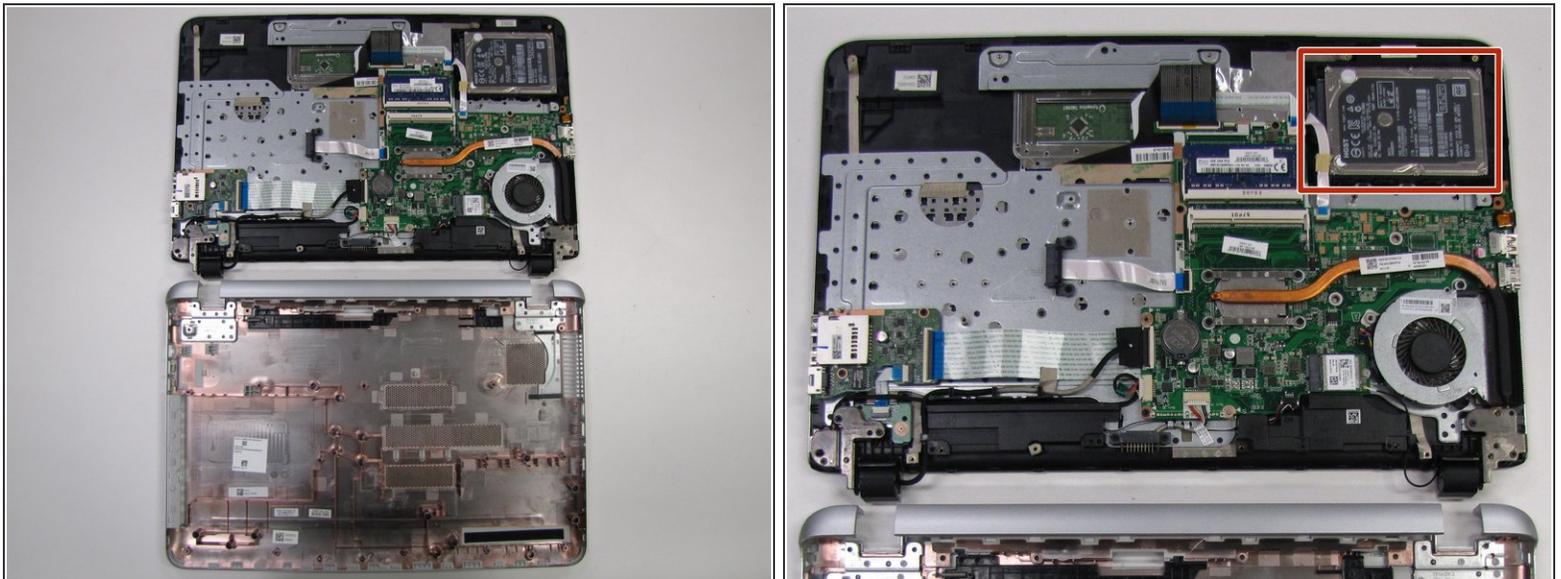

- After running the opening tool along the sides, you can gently pop the keyboard open to access the Hard Drive.
- The Hard Drive is located to the right of the RAM and above the Motherboard.

This document was generated on 2020-11-28 06:19:34 AM (MST).

## Step 11



- To remove the Hard Drive, disconnect it from the cable by pulling out the base. Do not pull on the ribbon.

To reassemble your device, follow these instructions in reverse order.