



Acer Aspire TimelineX 4830T-6682 Keyboard Replacement

This is the keyboard replacement guide for the...

Written By: Tai H Nguyen



INTRODUCTION

This is the keyboard replacement guide for the Acer Aspire TimelineX 4830T-6682. Make sure you have followed all of the prerequisite steps before proceeding!



TOOLS:

Phillips #0 Screwdriver (1)

Tweezers (1)


iFixit Opening Tool (1)

Step 1 — Lower Back Panel

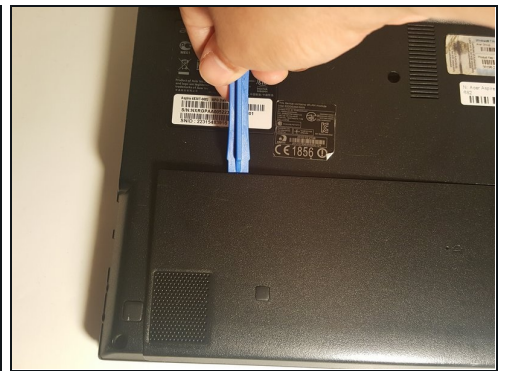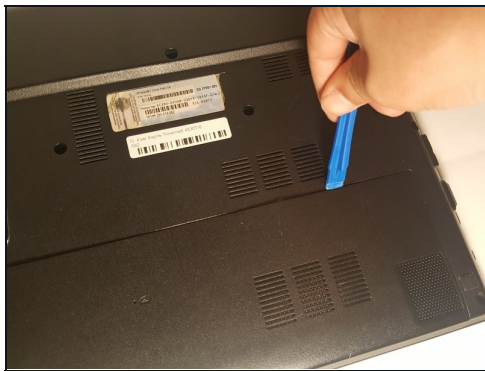


- Remove the single screw with a Phillips #0 screwdriver.
- Use a plastic opening tool on the upper part of the panel to remove it and access the RAM.
- ① The other way to remove the panel is by sliding it away from the laptop. The difficulty of sliding it depends on the condition of your laptop.

Step 2 — Keyboard

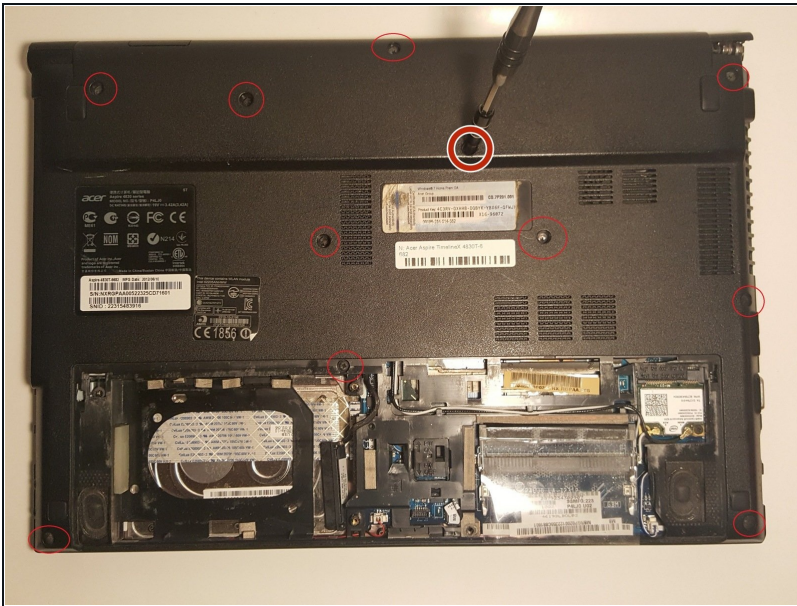


- Remove the eleven screws that hold that back panel to the laptop using a J0 Phillips screwdriver bit.

Step 3

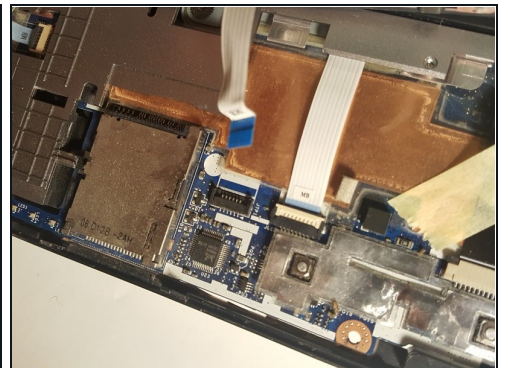

- Place the laptop in the upright position, the lower front touchpad panel should be easily detached at this point.
- Remove the lower front touchpad panel by using an angled [tweezers](#) to disconnect the only wired tape connected to the motherboard.

Step 4

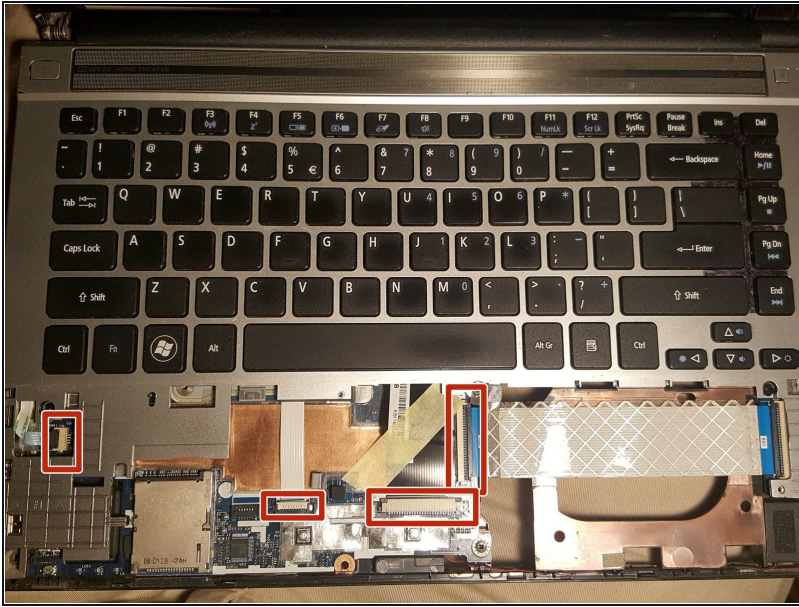

- Next, disconnect the 4 wired tapes of the keyboard from the motherboard just like we did with the lower front touchpad panel.

Step 5



- Finally, using an opening tool, gently pry along the edge of the keyboard to separate it from the laptop.

To reassemble your device, follow these instructions in reverse order.