



Black and Decker Pivot MAX Battery Replacement

This guide is to replace the battery located in the main body of the Black and Decker Pivot MAX.

Written By: Jesse Sipes



INTRODUCTION

This guide is to replace the Lithium Ion battery located in the main body of the Black and Decker Pivot Max. No special tools are necessary, only a phillips screw driver is needed for this replacement.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)



PARTS:

- [Black and Decker Pivot MAX Battery](#) (1)

Step 1 — Battery



- Press in and hold the release button.
- Rotate the dust filter chamber counter-clockwise.
- Remove the dust filter chamber.

Step 2




- Remove the two 10 mm screws from the motor casing with a Phillips #1 screwdriver.

Step 3




- Pull the battery cover up and then slide it away from the motor to remove.

Step 4

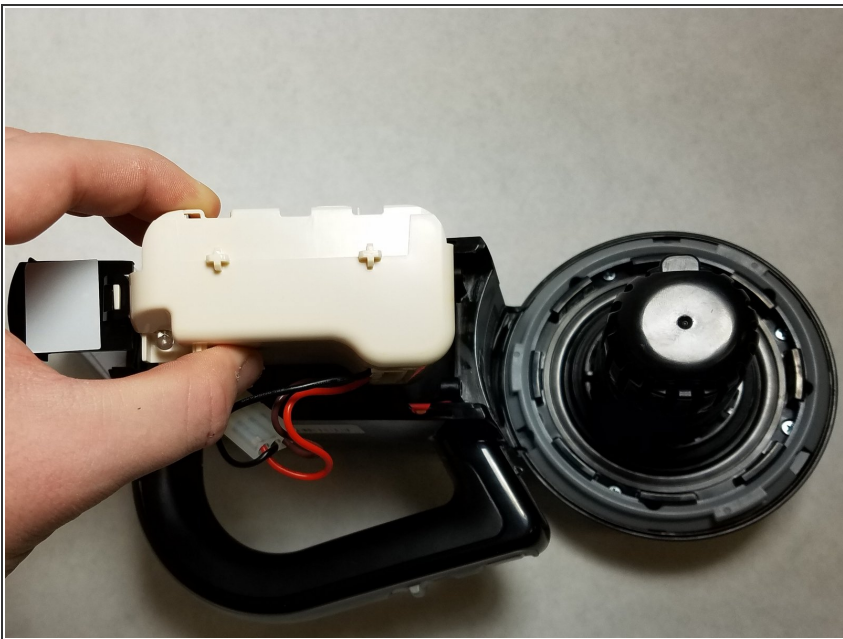

- Remove the battery unit by pulling it out of the main body.

Step 5

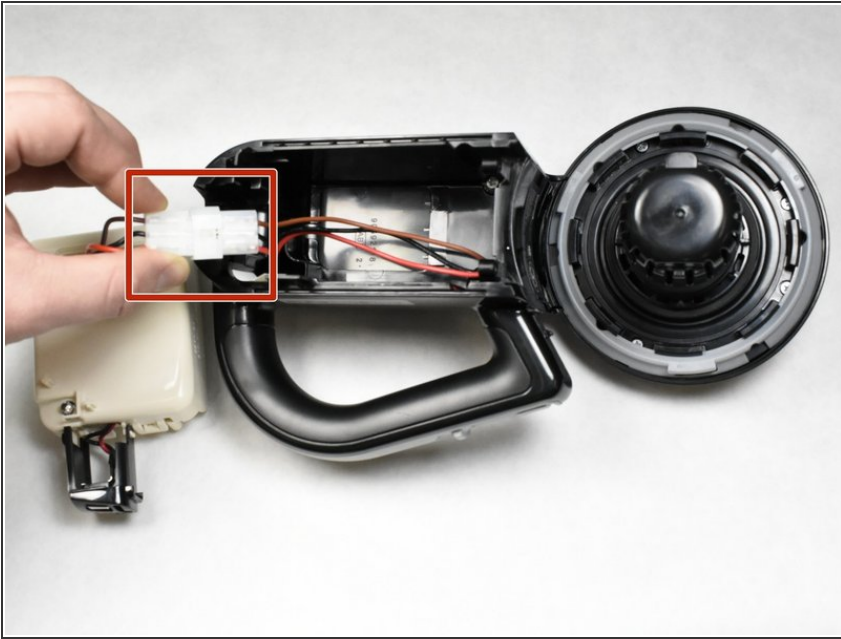

- Disconnect the quick connect wire harness that connects the motor and battery located in the battery storage compartment.

To reassemble your device, follow these instructions in reverse order.