



# Casdon Dyson Ball Battery Replacement

By using the PH00 screwdriver, this guide will...

Written By: Seldon Price



# INTRODUCTION

By using the PH00 screwdriver, this guide will show how to remove the batteries from the Casdon Dyson Ball.

## TOOLS:


Phillips #00 Screwdriver (1)

## Step 1 — Battery



- Remove one 9.2mm (0.36 in) screw using the PH00 screwdriver.
- Remove the battery cover by pulling it away from the vacuum once the 9.2mm (0.36 in) screw is removed.

## Step 2

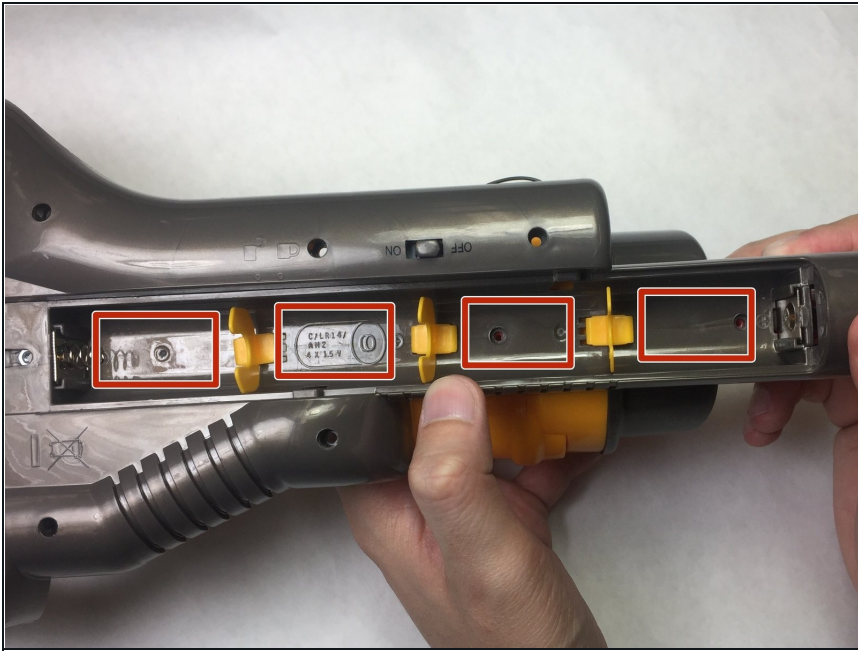

- Remove batteries from the vacuum by pulling them out and away from the vacuum.

---

To reassemble your device, follow these instructions in reverse order.