

Dell Vostro 5560 Battery Replacement

Written By: Johnathan Hammond



INTRODUCTION


In this guide, we will show you how to remove and replace the Battery.



TOOLS:


Phillips #0 Screwdriver (1)

Step 1 — Removing The Optical-Disk Drive

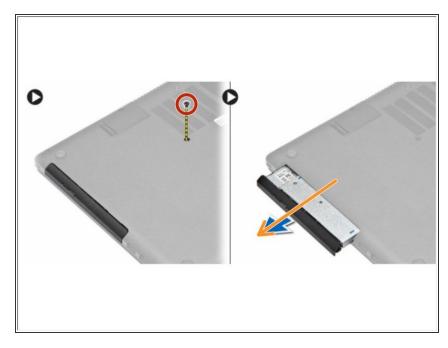

- Remove the screw that secures the base cover to the computer.
 - Pull the optical-drive and remove from the computer.
- If this is all you are doing Follow Step In Reverse if not Go to Next Step.


Step 2 — Replacing the Base Cover

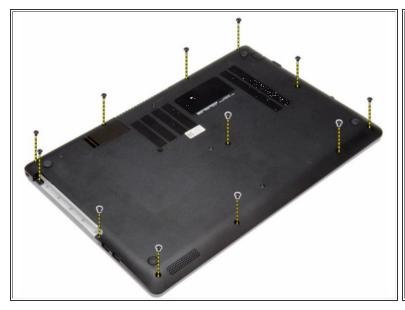



- Remove the screws that secure the base cover to the computer.
 - Pry the base cover along the edges to loosen it. Lift and remove the base cover from the computer.
- If this is all you are doing Follow Step In Reverse if not Go to Next Step.

Step 3 — Removing the Battery

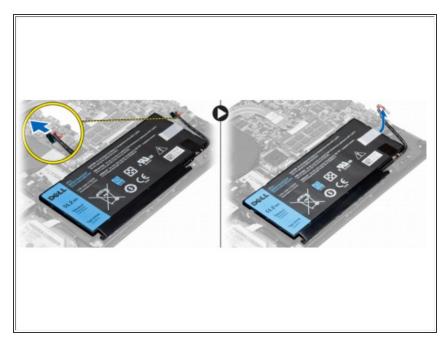

- Disconnect the battery cable from its connector on the system board.
 - Lift and remove the battery from the computer.
- If this is all you are doing Follow Step In Reverse if not Go to Next Step.