



# How to clean drain stoppage on Bosch Avantixx 7 Washing Machine

Sometimes stuff gets stuck and obstructs the evacuation of water from the machine. If heavy stoppage, you will get an error code. Don't remember nr now.

Written By: Peter Nelly



---

## INTRODUCTION



Cleaning drainage stop.

---

### TOOLS:


- [Flathead Screwdriver](#) (1)
-

## Step 1 — How to clean drain stoppage on Bosch Avantixx 7 Washing Machine

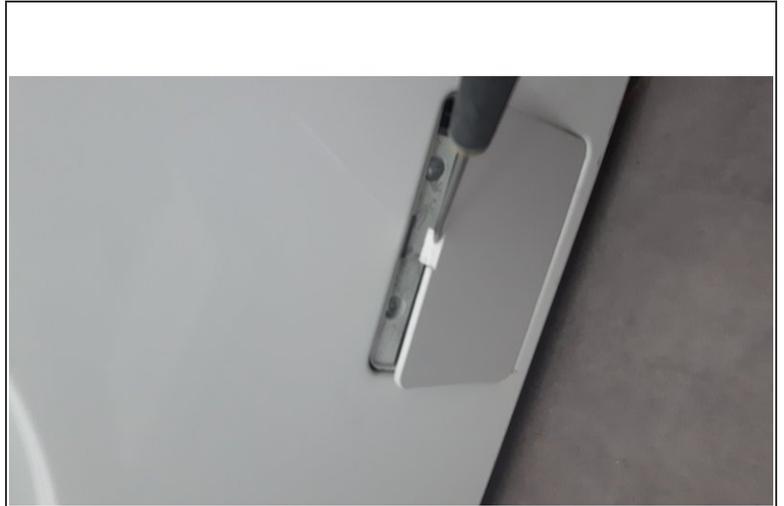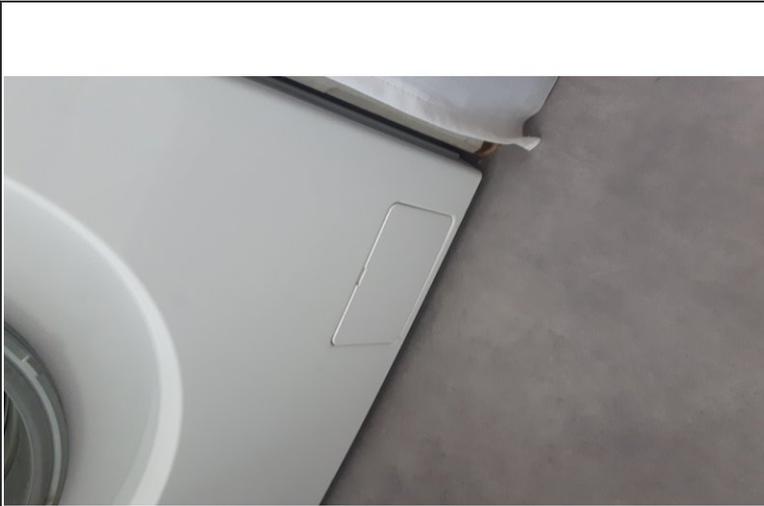



- Open the hatch in lower right front with a flat screwdriver.

## Step 2

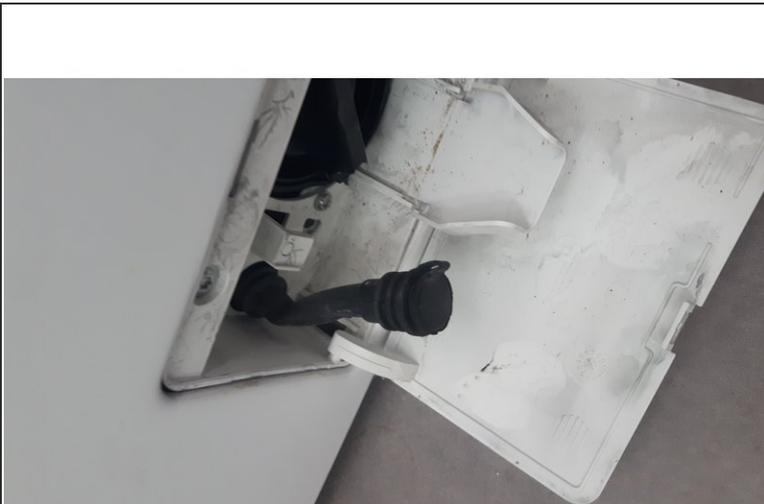

- Bleed out water if you don't want to slosh on the floor.

### Step 3

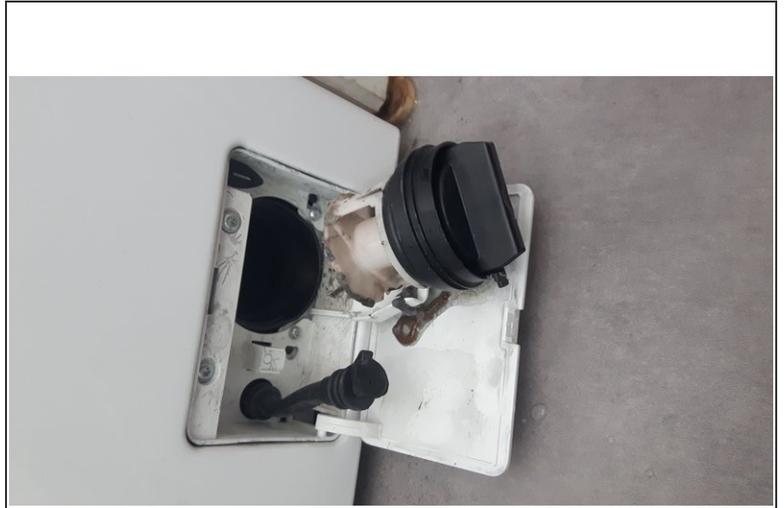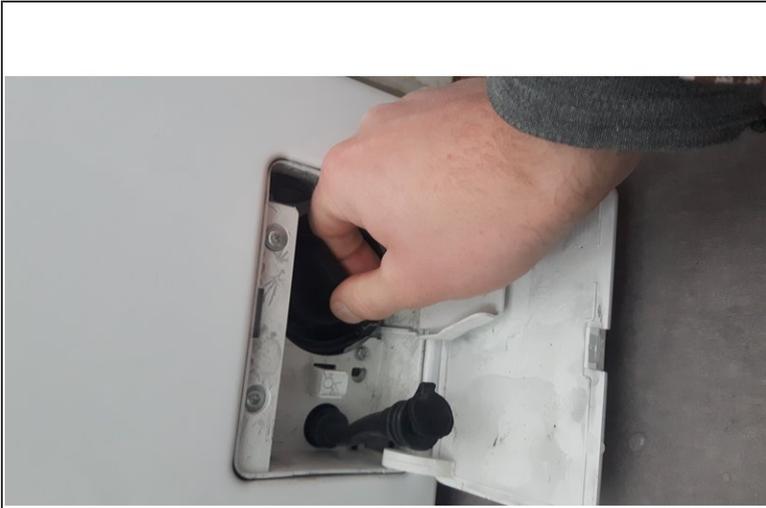

- Open the plug, and hopefully you will find out why your machine is not emptying water or rinsing effectively. Sometimes there is stuff halfway out the feeding channel coming from the side making the plug hard to screw out.
- I don't think this piece of hardware and some lint caused my problem though.

### Step 4



- Check that the wheel in back is able to move, and check that there is no @\$\* in the opening to the right.

## Step 5



- Pit everything back together. Hopefully the machine will rinse better.

To reassemble your device, follow these instructions in reverse order.