


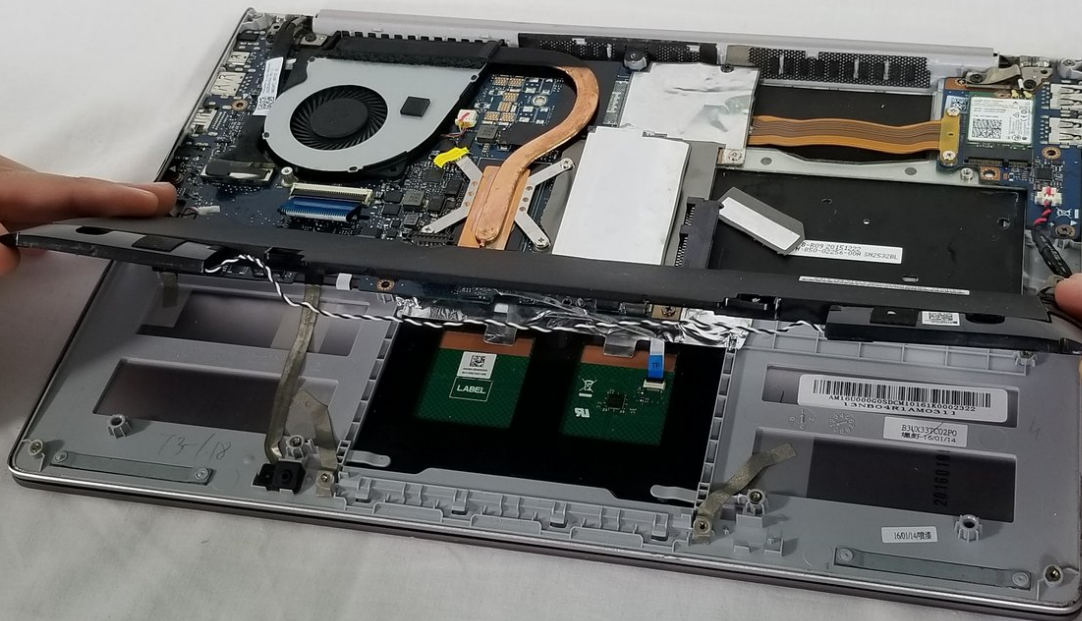

Asus ZenBook UX303U Battery Replacement

Replacing the Asus Zenbook battery. The device is slow, runs out of battery too quickly or will not work unless it is charging.

Written By: Dean Anderson



INTRODUCTION

This guide will show you how to replace an old worn out or dead battery in an Asus ZenBook UX303U laptop.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



PARTS:


- [Asus C31N1339 Replacement Battery](#) (1)

Step 1 — Back Panel




- Remove the two round rubber feet at the hinge-edge of the laptop.

Step 2

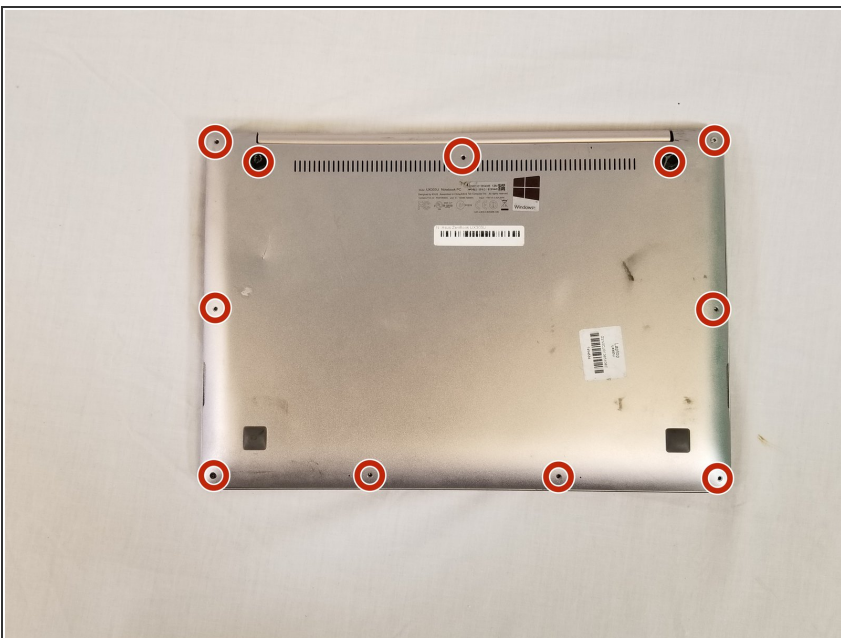



- Remove the eleven 4 mm Phillips #00 screws from the back panel.

Step 3

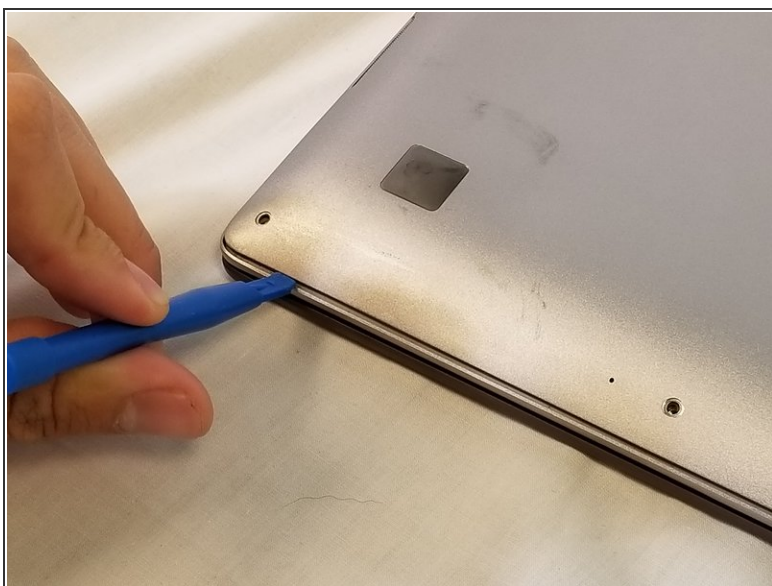


- Using a plastic opening tool pry the back panel off of the laptop.

Step 4 — Battery

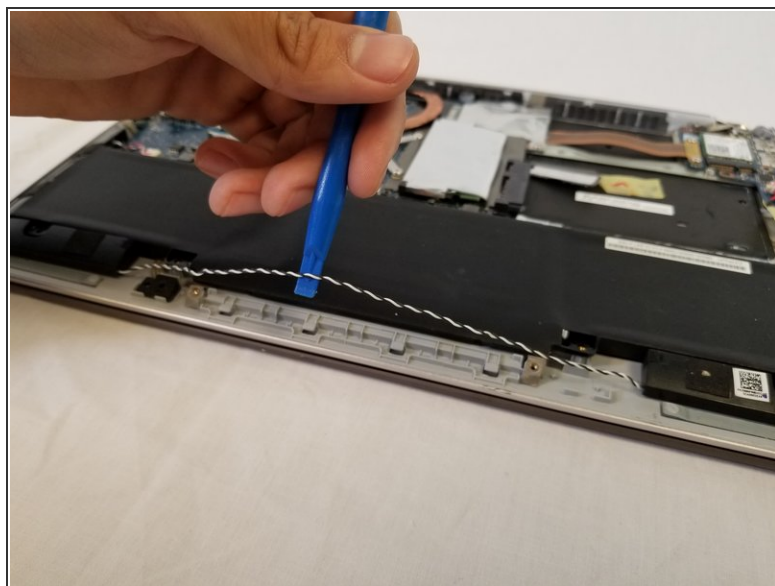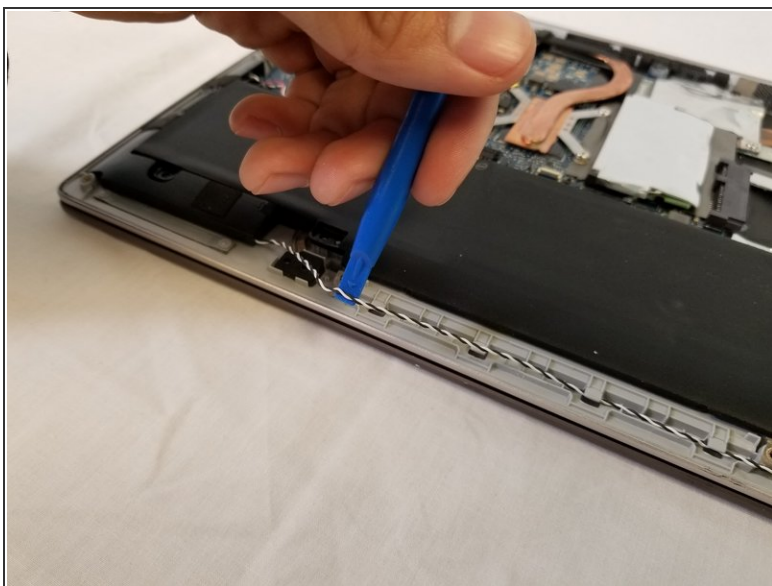



- Pull the speaker cable out of its four retaining clips with either your fingers, or a plastic opening tool.

Step 5

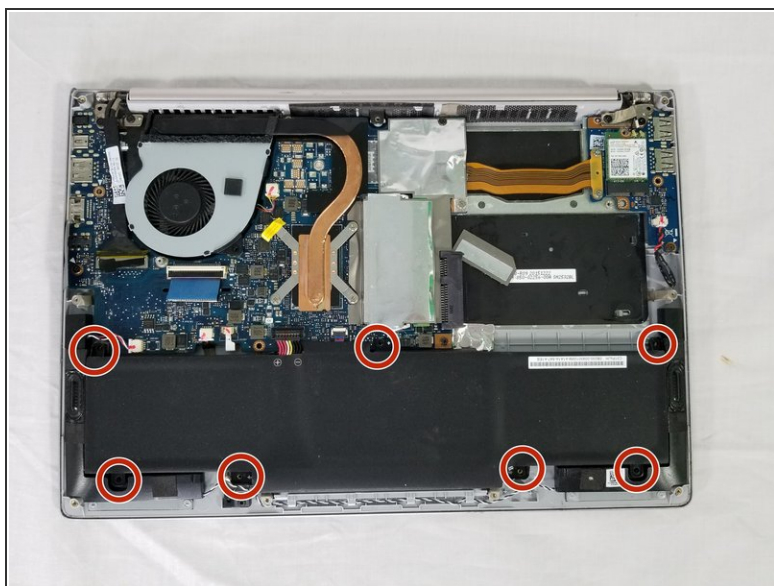



- Remove all seven 2 mm Phillips #00 screws from the battery.

Step 6

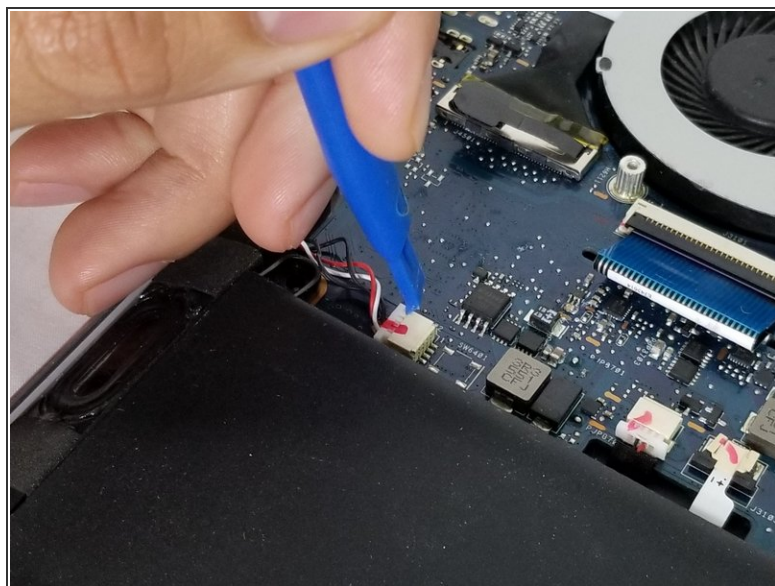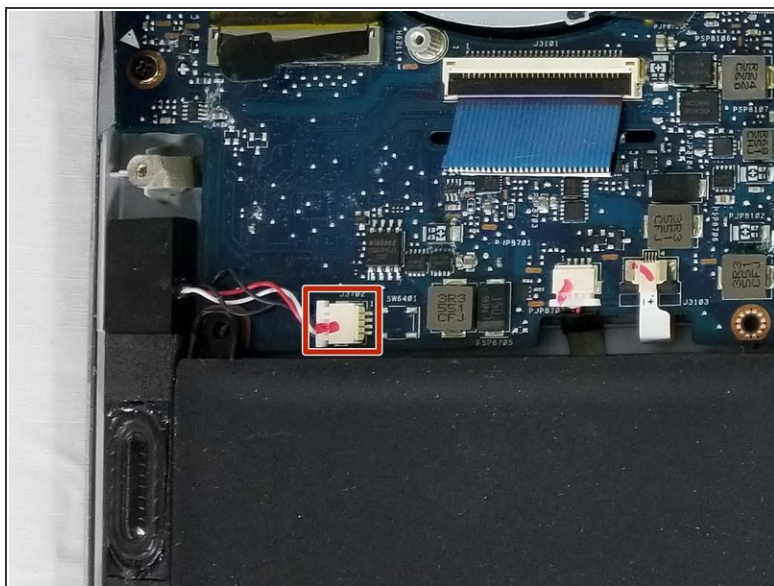

- Pull the speaker connector toward the edge of the laptop to disconnect it from its socket.

Step 7

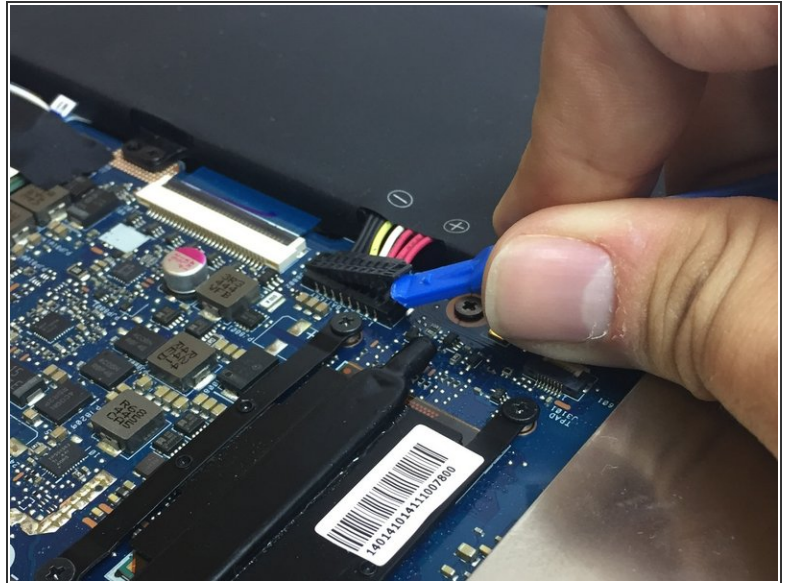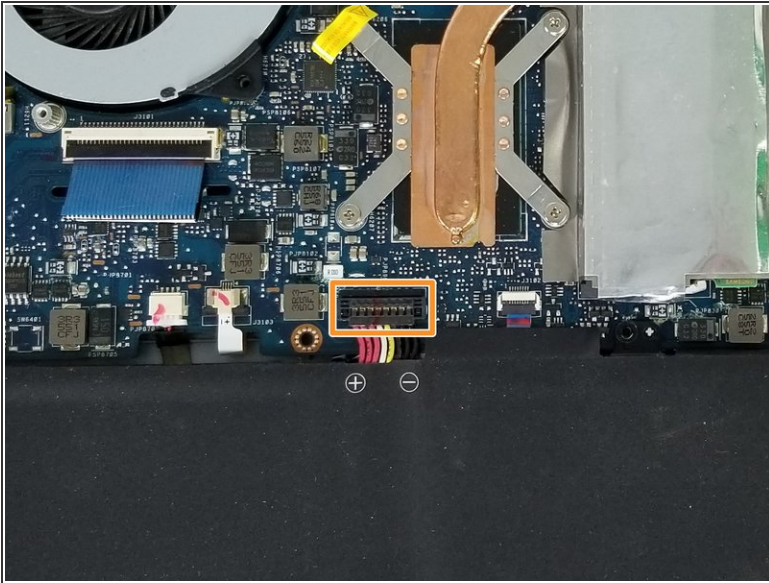


- Lift the battery connector straight up off its socket to disconnect it from the motherboard.



Do not pry on the socket itself or you risk damaging the motherboard.


Step 8

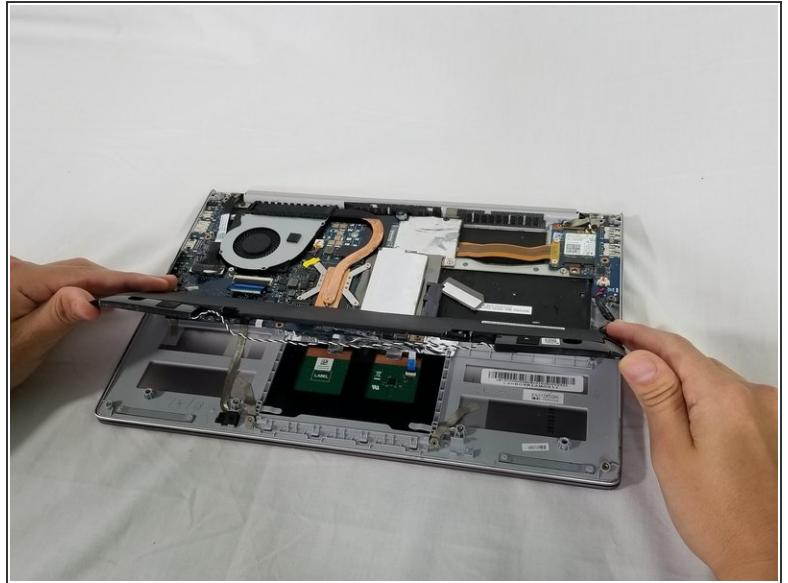

- Lift the battery and speakers up and pull out to remove.

⚠ Check underneath the battery for the wire assembly connecting the touchpad to the motherboard. This connection may stick to the underside of the battery. Be careful not to damage it when removing the battery.

Step 9

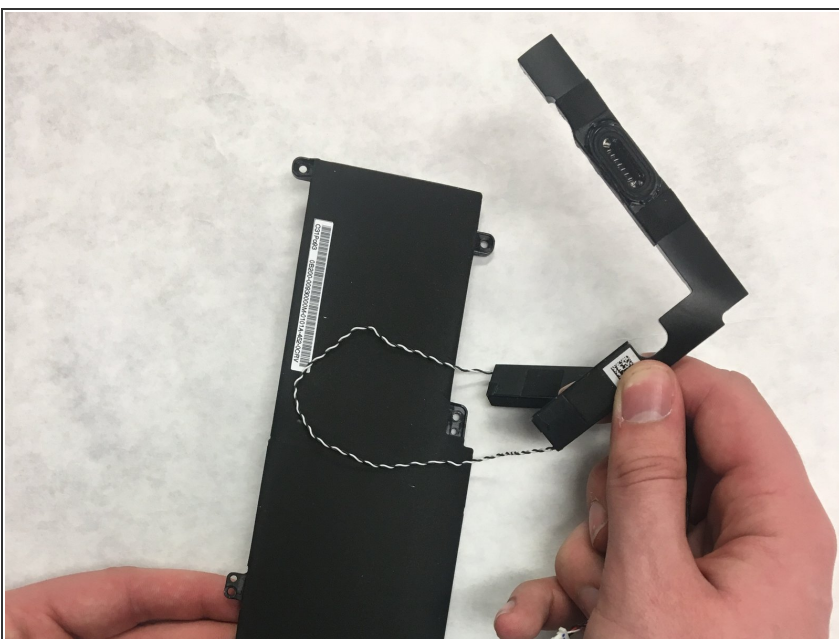

- Remove the speakers from the old battery.

To reassemble your device, follow these instructions in reverse order.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).