

# **Dell Vostro 3460 Base Cover Replacement**

Written By: Johnathan Hammond



## **INTRODUCTION**


In this guide, we will show you how to remove and replace the Base Cover.



# **TOOLS:**

• Phillips #0 Screwdriver (1)

#### **Step 1** — Releasing the Battery

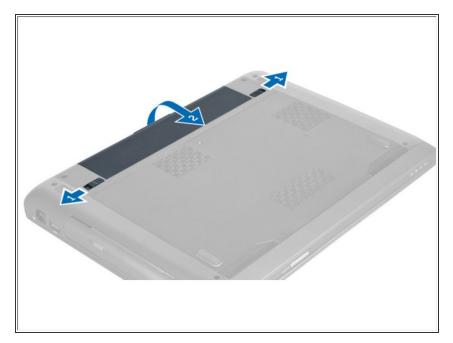

 Slide the battery latches to release the battery.

#### **Step 2** — Removing the Battery



 Lift and remove the battery from the computer.

#### Step 3 — Remove the Screws




 Remove the screw(s) that secures the cover to the computer. Lift the cover upwards.

#### Step 4 — Sliding the Cover



 Slide the cover outwards to release it from the notches on the computer.

## **Step 5** — Lifiting the Cover

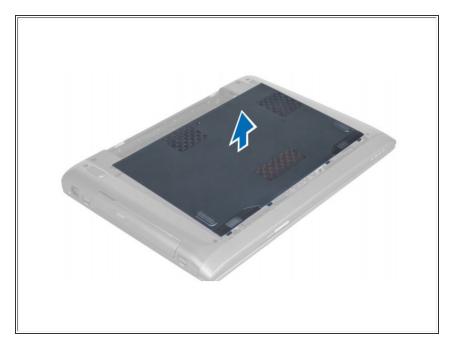

 Lift the cover upwards and away from the computer.

To reassemble your device, follow these instructions in reverse order.