



Acer Aspire R5-571T-59DC Back Cover Panel Replacement

Remove the back cover from your Acer Aspire R5-571T-59DC. in order to replace/access any other component in the laptop.

Written By: Jakobi Peets



INTRODUCTION

This guide will show the reader how to remove the back panel from their Acer Aspire R5-571T-59DC.


Be sure to be gentle opening the inner snaps around the lining of the cover - gently running a credit card or spudger around the inside of the lining should be sufficient to loosen the cover.

This is a prerequisite step to replacing any component connected to the motherboard.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Back Cover Panel

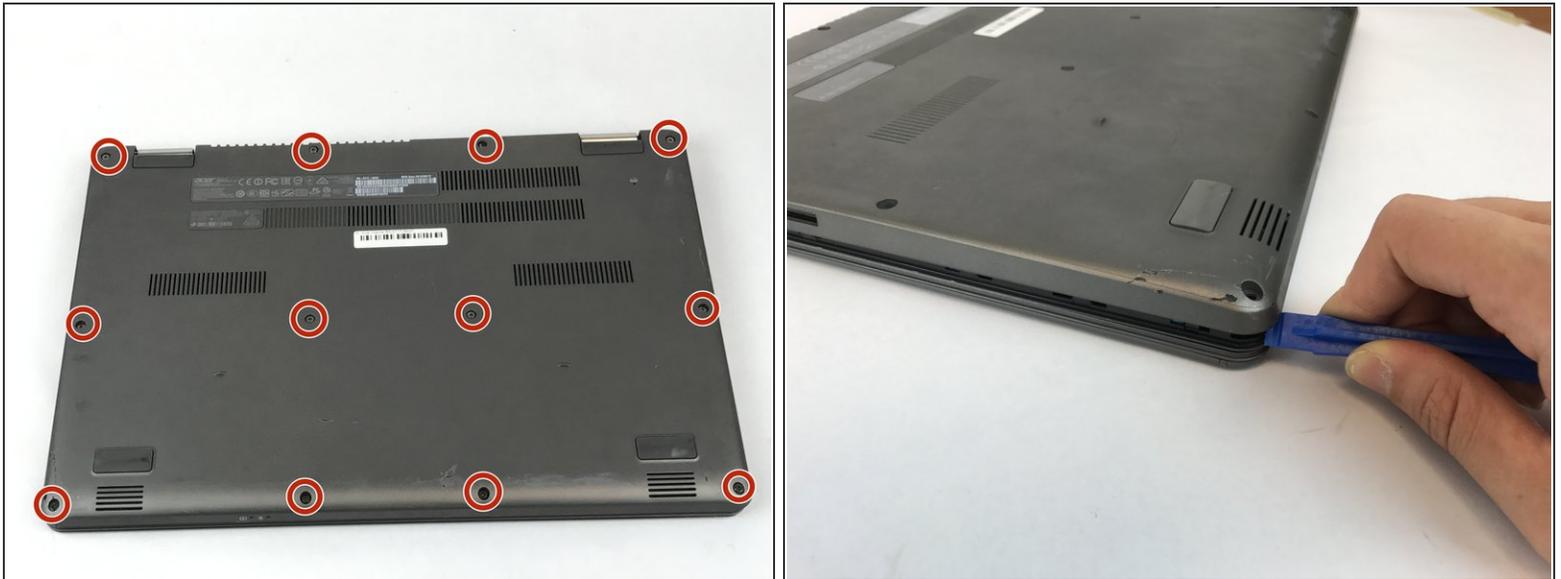

- Disconnect all power from the laptop and turn over so the bottom is facing you.
- Remove the twelve 07.7mm Phillips #0 screws from the back cover.
- Work a plastic opening tool underneath and around the perimeter of the bottom cover.
- Once unclipped, remove the bottom cover.

To reassemble your device, follow these instructions in reverse order.