



Vizio CT15 Speaker Replacement

This replacement guide will aid users in the replacement of faulty speakers in their Vizio CT15 device.

Written By: Alexis Soule



INTRODUCTION

This replacement guide will help users that are having trouble with broken speakers to remove the speakers in a Vizio CT15.



TOOLS:

- [Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Vizio CT15 Back Panel Removal



- Turn the laptop off and remove all power cables.
- Remove the six Phillips #0 screws.
- Pull the back cover off.

Step 2 — Battery





- Remove the six Phillips #0 screws.

Step 3





- Use the plastic opening tool or your fingers to pry the battery up and pull it from the laptop.

Step 4 — Speakers

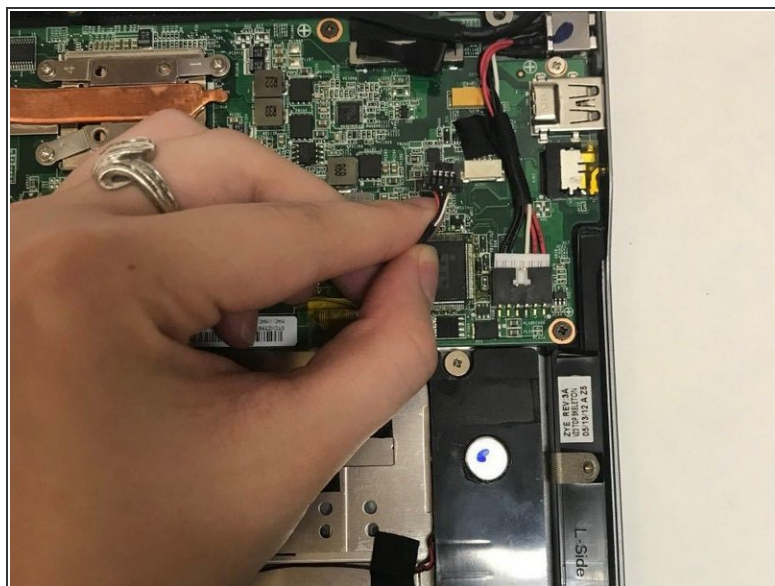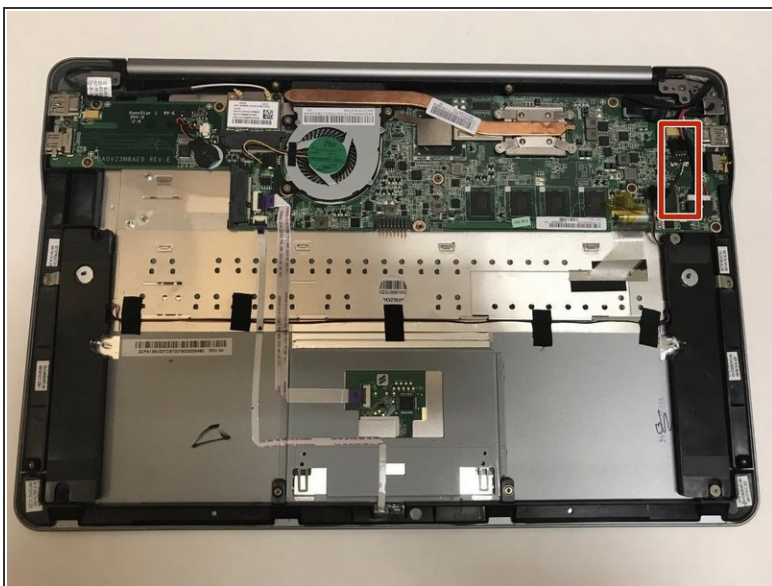




- Unplug the wire connecting the speakers to the motherboard.

Step 5

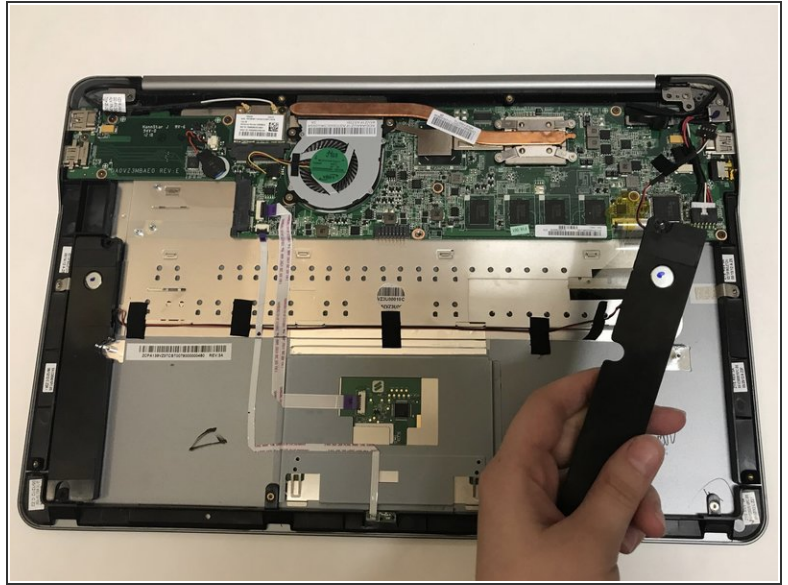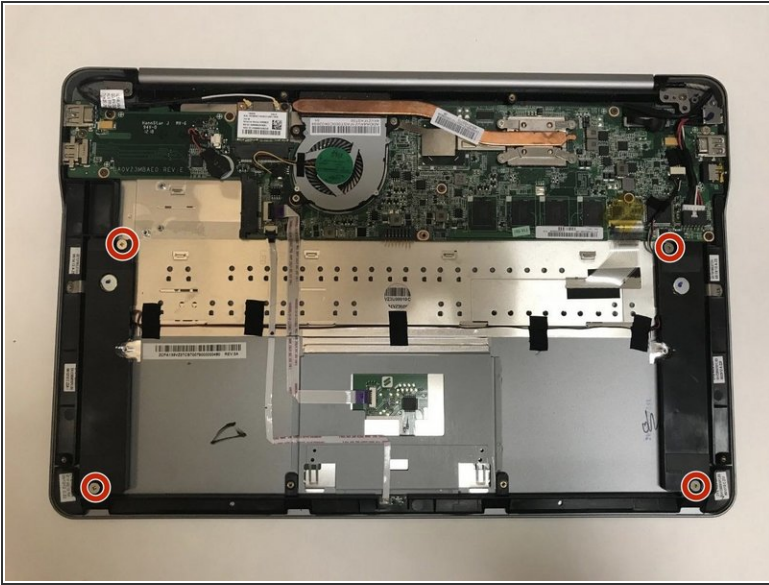



- Remove the four Phillips #0 screws.
- Pull the speakers out to remove.

Step 6

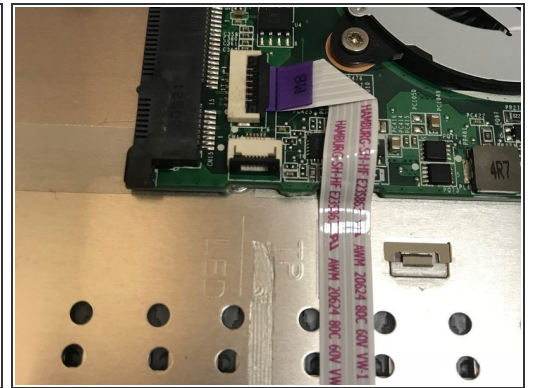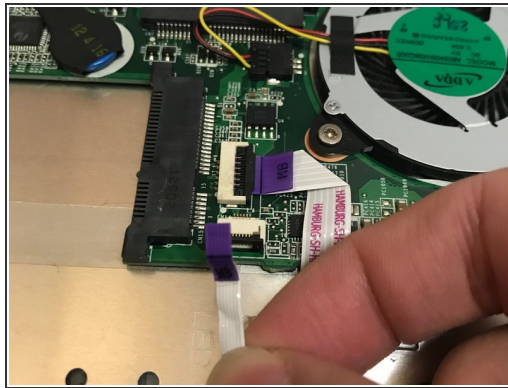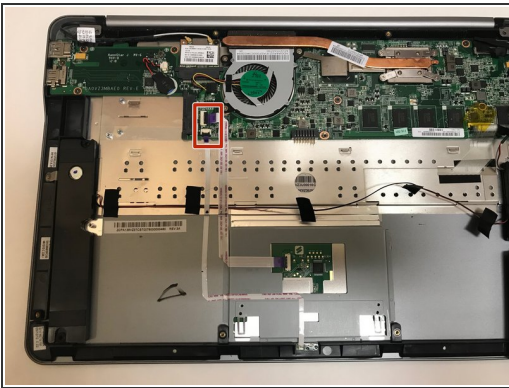

- Use the flat end of a spudger to lift up the black tab on the ZIF connector.
- Pull the ribbon cables out of the ZIF connector.
- ⓘ These wires are not connected to the speakers. We are only unplugging them to remove the wire underneath.

Step 7

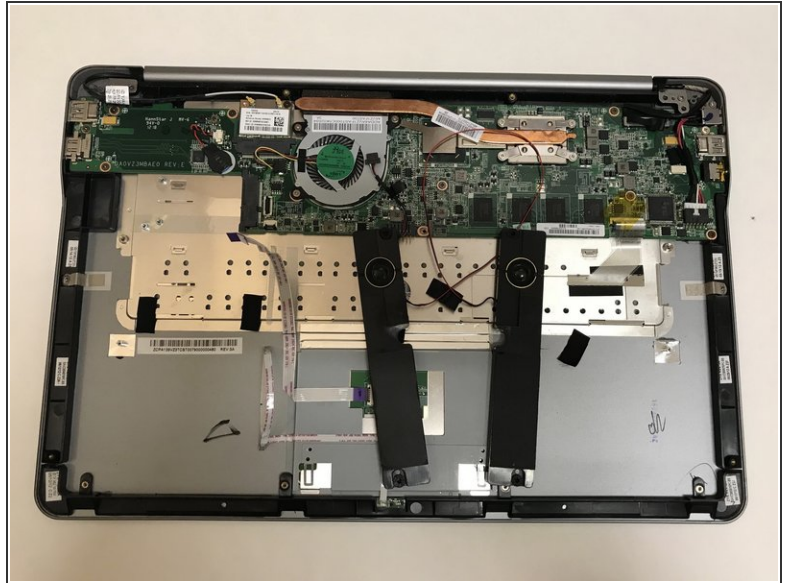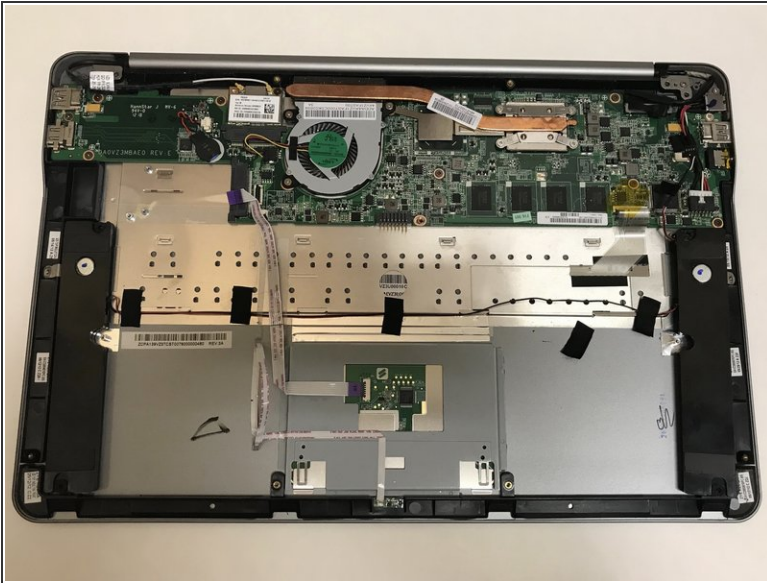

- Pull off the black strips of tape from the speaker wires and remove the speakers from the laptop.

To reassemble your device, follow these instructions in reverse order.