



Dell Vostro 2421 Hard Drive Replacement

Written By: Johnathan Hammond



INTRODUCTION

In this guide, we will be showing you how to remove and replace the Hard Drive.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Removing the Battery



- Slide the release latches outwards to unlock the battery and lift the battery to remove it from the computer.

Step 2 — Loosen the Screw



- Loosen the screw that secures the access panel and remove it from the computer.

Step 3 — Lifting the Access Panel




- Lift the access panel.

Step 4 — Remove the Screws



- Remove the screws that secure the hard-drive assembly to the computer.

Step 5 — Slide the Hard Drive

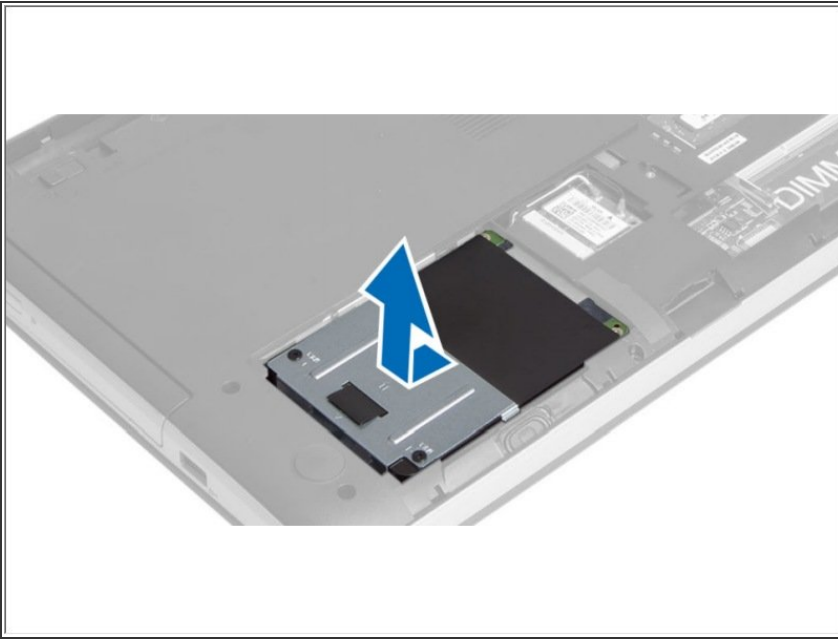

- Slide the hard drive in the direction shown and lift the tab to remove it from the computer.

Step 6 — Remove the Screw



- Remove the screw that secures the hard-drive caddy to the hard drive and remove it.