



Dell Vostro 1520 Hard Drive and Mini-Card Access Panel Replacement

Written By: Johnathan Hammond





TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery




- Slide the battery lock latch on the left away from the battery.

Step 2



- Slide the battery latch at the center toward the right..

Step 3

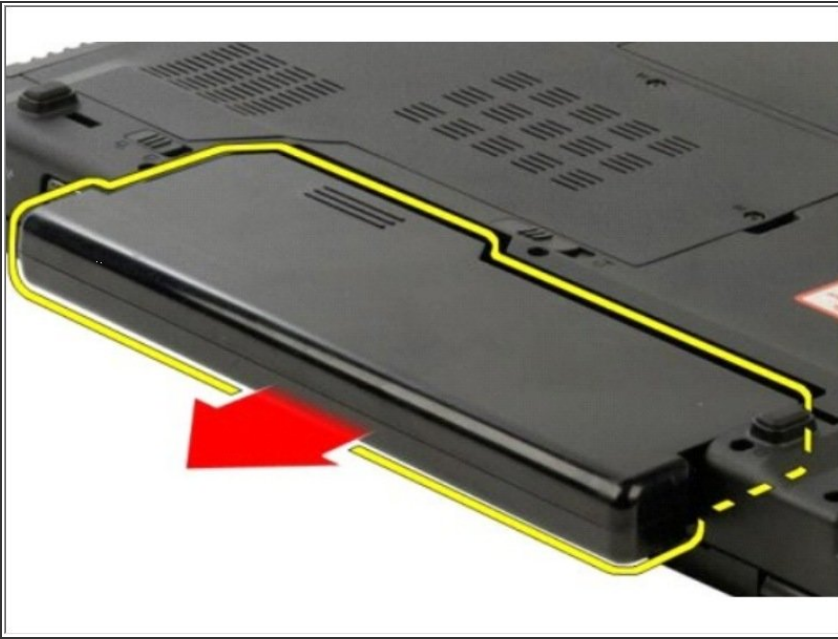


- Slide the battery itself toward the back of the computer and remove

Step 4 — Hard Drive and Mini-Card Access Panel




- Remove the two screws that secure the hard drive and mini-card access panel to the computer.

Step 5

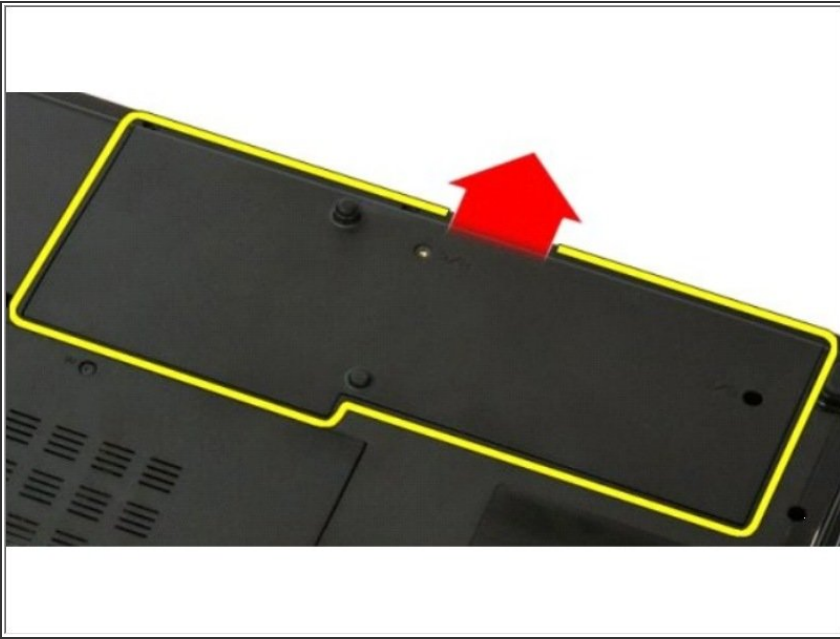

- Slide the panel toward the rear of the computer.

Step 6

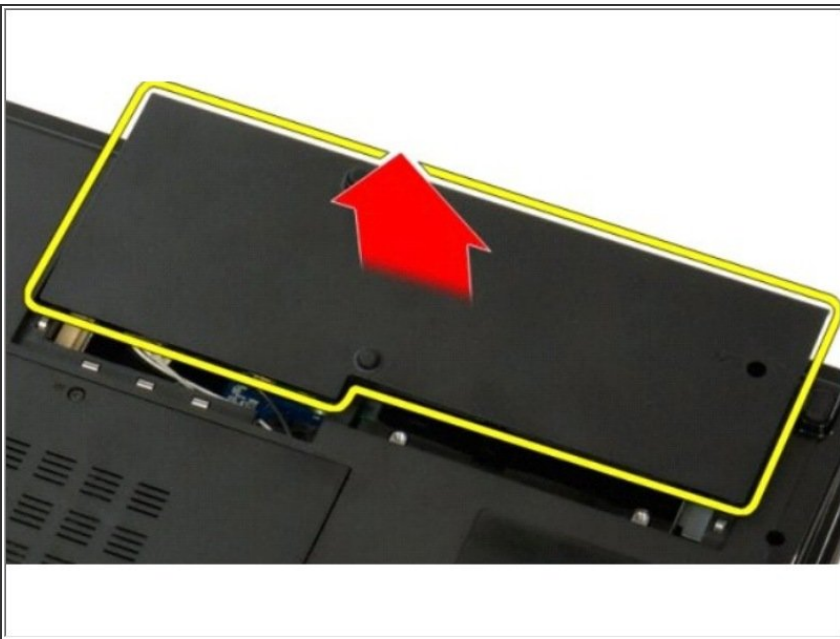

- Remove the hard drive and mini-card access panel.

To reassemble your device, follow these instructions in reverse order.