



# Dell XPS M1730 RAM Replacement

Use this guide to assist you in replacing the RAM in your Dell XPS M1730.

Written By: Ashley Hoffman



---

## INTRODUCTION

Before you begin the RAM replacement process, be sure to ground yourself. Grounding yourself prevents short circuiting the device, and/or shocking yourself. An easy way to do so would be to remove one of your shoes.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Battery



- Push the sliding button near the battery compartment.

## Step 2




- Slide the button next to the battery and lift up on the lip of the battery edge.

### Step 3



- Lift and remove the battery.

### Step 4 — RAM

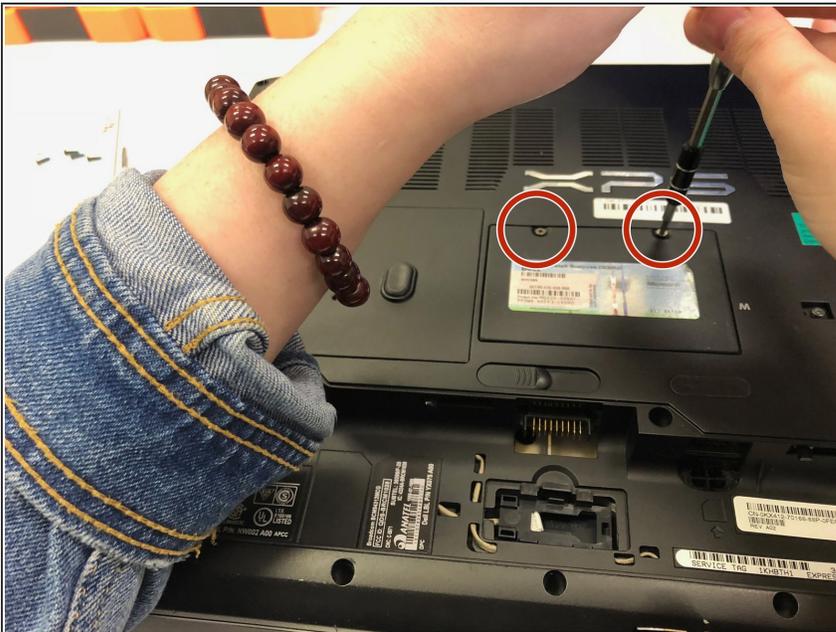


- Remove the two M2x3mm screws from the center panel on the back of computer with a Phillips #0 screwdriver head.

## Step 5



- Use a plastic opening tool to pull up and remove the center panel.

## Step 6

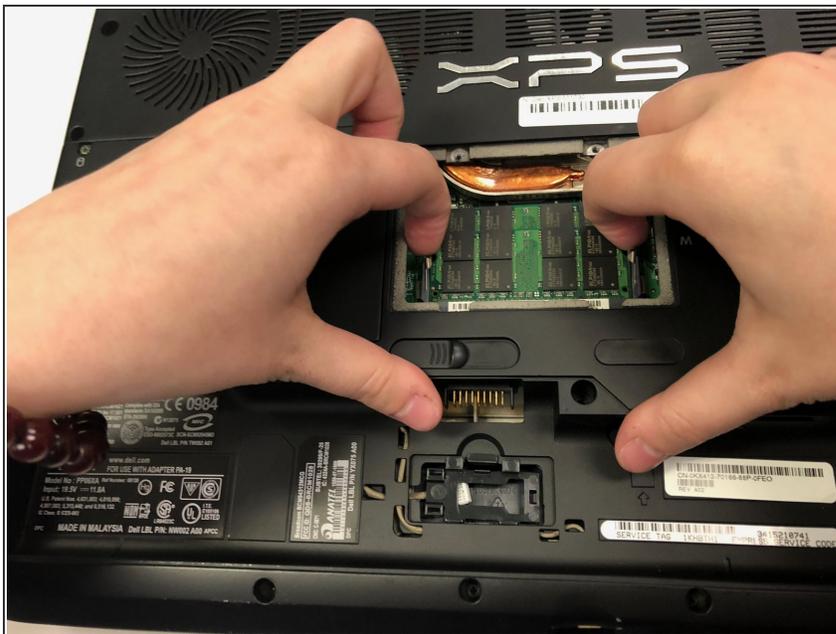

- Pull the two clips on either side of the memory sticks.

## Step 7



- Slide the memory sticks out of their clips.

To reassemble your device, follow these instructions in reverse order.